


OPERATOR HANDBOOK



8013
8015
8017
8018

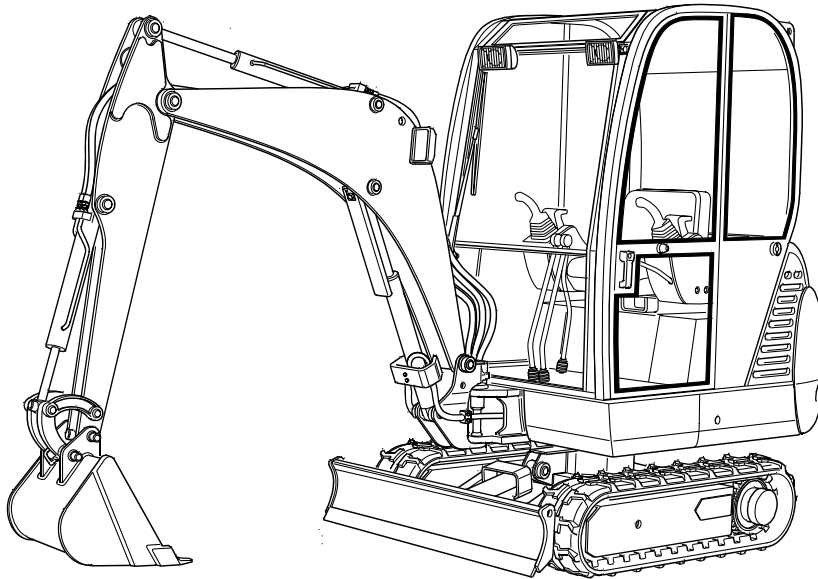

THIS HANDBOOK MUST BE KEPT IN THE MACHINE AT ALL TIMES



Pages in this publication: 8013/8015/8017/8018 Operators Handbook - 9801/8780

If any pages are missing, contact JCB Service for a replacement handbook

RH page	LH page	RH page	LH page	RH page	LH page	RH page	LH page
Cover	Thispage	B23	B24	B77	B78	C33	C34
Safety notices	Contents A	B25	B26	B79	B80	C35	C36
Contents B	Contents C&D	B27	B28	B81	B82	C37	C38
		B29	B30	B83	B84	C39	C40
		B31	B32	B85	B86	C41	C42
		B33	B34	B87	B88	C43	C44
A1	A2	B35	B36	B89	B90	C45	C46
A3	A4	B37	B38	B91	B92	C47	C48
A5	A6	B39	B40	B93	B94	C49	C50
A7	A8	B41	Blank	B95	Blank	C51	C52
A9	A10	B43	B44			C53	Blank
A11	A12	B45	B46	C1	C2		
A13	A14	B47	B48	C3	C4	D1	D2
A15	A16	B49	B50	C5	C6	D3	D4
A17	Blank	B51	B52	C7	C8	D5	Blank
		B53	B54	C9	C10		
B1	B2	B55	B56	C11	C12		
B3	B4	B57	B58	C13	C14		
B5	B6	B59	B60	C15	C16		
B7	B8	B61	B62	C17	C18		
B9	B10	B63	B64	C19	C20		
B11	B12	B65	B66	C21	C22		
B13	B14	B67	B68	C23	C24		
B15	B16	B69	B70	C25	C26		
B17	B18	B71	B72	C27	C28		
B19	B20	B73	B74	C29	Blank		
B21	B22	B75	B76	C31	C32		

SAFETY NOTICES

In this handbook and on the machine there are safety notices. Each notice starts with a signal word. The signal word meanings are given below.



DANGER

Denotes an extreme hazard exists. If proper precautions are not taken it is highly likely that you (or others) could be killed or permanently injured.




WARNING

Denotes a hazard exists. If proper precautions are not taken it is highly likely that you (or others) could be killed or injured.

CAUTION

Denotes a reminder of safety practices. May also direct your attention to unsafe practices which could result in personal injury or damage to the machine.

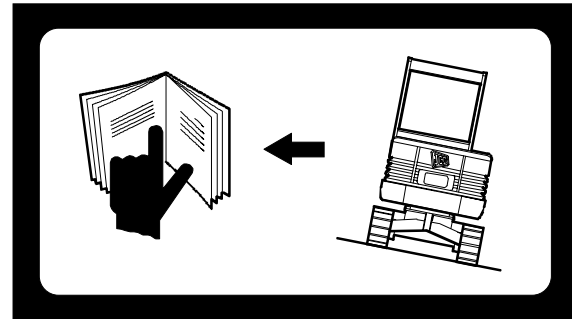

H19680

CONTENTS



WARNING

Study this Handbook Before Starting the Machine

You must understand and follow the instructions in this handbook. Abide by all relevant laws and regulations. If you are unsure about anything, ask your JCB dealer or employer. Do not guess, or you or others could be killed or seriously injured.

INT-1-1-1

The illustrations in this handbook are for guidance only. Where the machines differ, the text and/or illustration will specify.

The page numbers do not run concurrently in this publication, each section carries its own numbers which allows the inclusion of additional pages in later issues.

This handbook contains operating instructions and operator information for all machine range variants, some of the functions may not be available on your machine.

Introduction - Section A

About this handbook	A1 - A2
Units of measurements	A1
Left side, right side	A2
Using the machine	A2
Machine & serial numbers	A2
Safety - yours and other peoples	A3
General safety check list	A4 - A5
Operating safety check list	A6 - A11
Safety decals	A12 - A13
The JCB Mini Excavator	A14 - A15
General description	A15
Identifying your machine	A16
TOPS AND FOGS (if applicable)	A17

CONTENTS

Operation - Section B

Introduction	B1	Cold climate warm up	B51
Before entering the cab	B2 - B3	Operating in low temperatures	B52
Entering/exiting the cab	B4 - B5	Operating in high temperatures	B53
Cab	B6 - B7	Stopping and parking the machine	B54 - B55
Opening the windscreen	B8	Preparing for road / site travel	B56 - B57
Opening the side window	B9	Getting the machine moving	B58
Heater controls	B10 - B11	JCB Hammermaster 100 Breaker	B59
Seat Control	B12	Working with the dozer	B60 - B61
Seat belt	B13	Working with the excavator	B62 - B63
Engine and track controls,		Installing a bucket - non Quickhitch	B63
Switches and instruments	B14 - B25	Replacing bucket teeth	B63
Track controls	B16 - B17	Bucket selection	B64 - B65
Engine controls	B18	Installing a bucket on a Quickhitch	B66 - B67
Switches	B19 - B21	Removing a bucket from a Quickhitch	B68 - B69
Instruments	B22 - B25	Working on a slope	B70 - B71
Dozer controls	B26 - B27	Digging	B72 - B73
Extending/retracting undercarriage	B28 - B29	Moving the machine while	
Excavator controls	B30	digging on the level	B74
Slew lock	B32	Digging near walls	B75
Slew cab	B33	Lifting Regulations and Safe Working Loads	B76
Swing boom	B34 - B35	Using the attachments and site safety	B77 - B79
Boom swing stop	B36 - B37	Single/Double Acting circuit	B80 - B81
Raise / Lower boom	B38 - B39	Removing a Quickhitch Rockbreaker	B82 - B85
Dipper	B40	Using Hand Held Tools	B86 - B87
Bucket	B41	Moving a disabled machine	B88 - B89
Refuelling the machine	B43	Transporting the machine	B90 - B91
Before starting the engine	B44 - B45	Securing for Transport	B92 - B93
Starting the engine	B46 - B47	Storing the machine	B94 - B95
Jump starting the engine	B48 - B50		

CONTENTS

Maintenance - Section C

The maintenance section shows the correct procedures for the regular routine service operations only. Major servicing operations should only be carried out by suitably qualified service engineers using the appropriate service tools where necessary.

Service Contracts	C1
Lubricants - health and safety	C2 - C3
Maintenance Safety Check List	C4 - C5
Service schedules	C6 - C9
Checking the machine	C10 - C11
Greasing	C12 - C17
Engine air filter	C18 - B19
Engine oil	C20 - C23
Engine cooling system	C24 - C27
Adjusting the Fan Belt	C28 - B29
Fuel system	C31 - C35
Tracks and running gear	C36 - C41
Hydraulic system	C42 - C43
Battery	C44 - C47
Electrical system	C48 - C49
Fluids, lubricants, capacities and specifications	C50 - C52
Obtaining Replacement Parts	C53

Specifications - Section D

Noise and Vibration Data	D1
Static Dimensions	D2 - D3
Performance Dimensions	D4 - D5

ABOUT THIS HANDBOOK

This handbook provides information for the JCB range of Tracked Excavators (Mini Excavators).

Using This Handbook

This handbook is arranged to give you a good understanding of the machine and its safe operation. Read this handbook before using the machine. Particular attention must be given to all safety aspects of operating the machine.

General warnings in this chapter are repeated throughout the book, as well as specific warnings. Read all the safety statements regularly, so you do not forget them.

Treat this handbook as part of the machine. Keep it clean and in good condition. Do not operate the machine without a handbook in the cab. If there is anything you are unsure about, ask your JCB dealer or employer. Do not guess, you or others could be killed or seriously injured.


The manufacturer's policy is one of continuous improvement. The right to change the specification of the machine without notice is reserved. No responsibility will be accepted for discrepancies which may occur between specifications of the machine and the descriptions contained in this publication.

Units of Measurements

In this book, the S.I. system of units is used. For example, liquid capacities are given in Litres. The imperial units follow in parenthesis () e.g. 28 litres (6 gal).

ABOUT THIS HANDBOOK - continued**Left Side, Right Side**

In this handbook, 'left' **A** and 'right' **B** means your left and right when you are seated correctly in the machine.

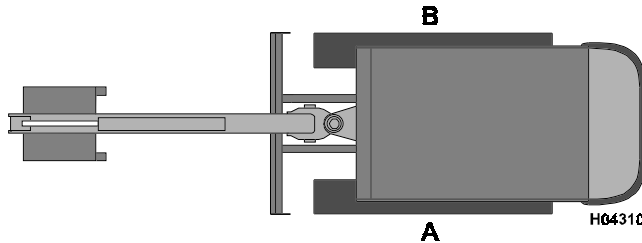**Machine and Serial Numbers**

This handbook covers the following machines:

8013 from machine serial number 893000

8015 from machine serial number 894200

8017 from machine serial number 896000

8018 from machine serial number 897000

Using the Machine

To use the Mini Excavator efficiently and safely you must know the machine and have the skill to use it. This handbook instructs you on the machine, its controls and its safe operation. It is not a training manual. If you are a new operator, get yourself trained in the skills of using a Mini Excavator before trying to work with it. If you don't you will not do your job well, and you will be a danger to yourself and others

SAFETY - YOURS AND OTHER PEOPLES

All mechanical equipment can be hazardous. When a mini excavator is properly maintained and operated correctly, it is a safe machine to work with. But when it is poorly maintained or operated carelessly it can become a danger to the operator and everyone around.

In this handbook and on the machine you will find warning messages. Read them, understand them. They tell you of hazards and how to avoid them. If you do not understand the messages, ask your employer or local JCB Dealer.

But safety is not just a matter of responding to the warnings. All the time you are working on or with the machine you must be thinking what hazards there might be and how to avoid them.

Do not work with the machine until you are sure that you can control it.

Do not start any job until you are sure that you and those around you will be safe.

If you are unsure of anything, about the machine or the job, ask someone who knows. Do not assume anything, check it.

Remember **BE CAREFUL**
BE ALERT
BE SAFE

Now read the rest of this section before moving on to the rest of the handbook.

GENERAL SAFETY CHECK LIST**! WARNING****Handbook**

You and others can be injured if you operate or maintain the machine without first studying this handbook. Read the safety instructions before operating the machine. If you do not understand anything ask your employer or JCB dealer to explain it. Keep this handbook clean and in good condition. Do not operate the machine without a handbook in the cab or if there is anything on the machine you do not understand. It is recommended that you attend a training course before you operate your machine.

HOP1




H07060

! WARNING**Clothing**

You can be injured if you do not wear the proper clothing. Loose clothing can get caught in the machinery. Wear protective clothing to suit the job. Examples of protective clothing are: a hard hat, safety shoes, safety glasses, a well fitting overall, ear protectors and industrial gloves. Keep cuffs fastened. Do not wear a neck tie or scarf and keep long hair restrained.

HOP4

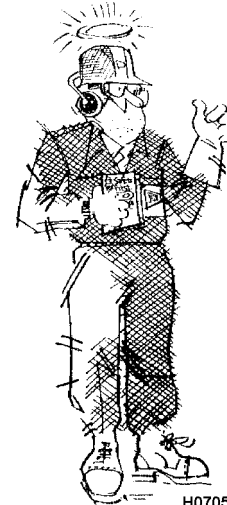

H07050


GENERAL SAFETY CHECK LIST - Continued

! WARNING**Lifting Equipment**

You can be injured if you use faulty equipment. Make sure that lifting equipment is in good condition. Make sure that lifting tackle complies with all local regulations and is suitable for the job. Make sure that lifting equipment is strong enough for the job.

! WARNING

Do not use this Excavator as a 'Crane'. Consult National Lifting Regulations.

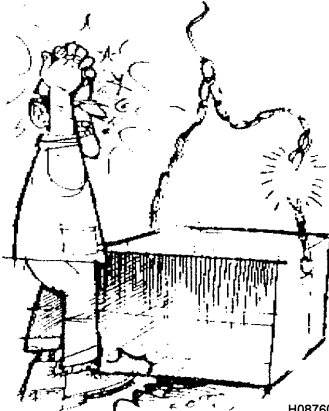

H08760


! WARNING**Care and Alertness**

All the time you are working with or on the machine, take care and stay alert. Always be careful, always be alert for hazards. HOP3

! WARNING**Raised Attachments**

Raised attachments can fall and injure you. Do not walk or work under raised attachments unless they are safely blocked.

HOP6

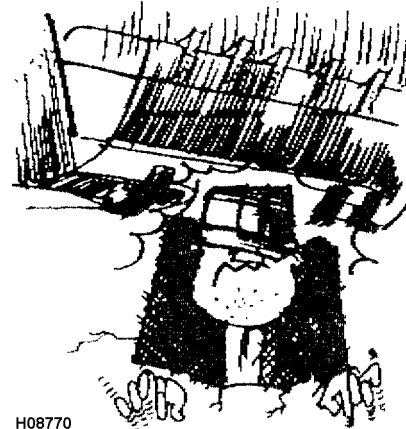

H08770

OPERATING SAFETY CHECK LIST

! WARNING**Practice**

You or others can be killed or seriously injured if you do unfamiliar operations without first practising them. Practise away from the work site on clear area. Keep other people away. Do not perform new operations until you are sure you can do them safely.

HOP7

! WARNING**Machine Condition**

A defective machine can injure you or others. Do not operate a machine which is defective or has missing parts. Make sure that maintenance procedures are completed before using the machine.

HOP8


! WARNING**Lifting**

Do not lift objects with the excavator or the boom. HOP24

! WARNING**Controls**

You or others can be killed or seriously injured if you operate the control levers from outside the cab. Operate the control levers only when you are correctly seated inside the cab.

HOP9

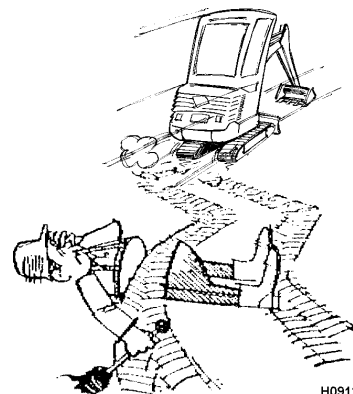

H09120

OPERATING SAFETY CHECK LIST - Continued

**WARNING****Machine Limits**

Operating the machine beyond its design limits can damage the machine, it can also be dangerous. Do not operate the machine outside its limits. Do not try to upgrade the machine performance with unapproved modifications.

HOP10

**WARNING****Engine**

The engine has rotating parts. Do not open the engine cover while the engine is running. Do not use the machine with the cover open. Engine cover to be kept locked to prevent unauthorised access. HOP11

**WARNING****Entering/Leaving**

Always face the machine when entering and leaving the cab. Use the step(s) and handrails. Make sure the step(s), handrails and your boot soles are clean and dry. Do not jump from the machine, do not use the machine controls as handholds, use the handrails. HOP12

**WARNING****Exhaust Gases**

Breathing the machine exhaust gases can harm and possibly kill you. Do not operate the machine in enclosed spaces without making sure there is good ventilation. If possible, fit an exhaust extension. If you begin to feel drowsy stop the machine at once. Get out of the cab into fresh air. HOP13

OPERATING SAFETY CHECK LIST - Continued

! WARNING**Visibility**

Accidents can be caused by working in poor visibility. Keep windows clean and use your lights to improve visibility. Do not operate the machine if you cannot see properly. HOP14

! WARNING**Parking**

An incorrectly parked machine can move without an operator. Follow the instructions in this handbook to park the machine correctly.

HOP16



H09130

! WARNING**Work Sites**

Work sites can be hazardous. It is the operators responsibility to inspect the site before working on it. Look for potholes, weak ground, hidden rocks etc. Check for utilities such as electric cables (overhead and underground), gas and water pipes etc. Mark the positions of the underground cables and pipes. Make sure that you have enough clearance beneath overhead cables and structure. If necessary, contact the local authorities before commencing work. HOP15

CAUTION**Regulations**

Obey all laws, work site and local regulations which affect you and your machine. HOP2

! WARNING**Safety Barriers**

Unguarded machines can be dangerous. In public places, or where your visibility is reduced, place barriers around the work area to keep people away. HOP21

OPERATING SAFETY CHECK LIST - Continued

**WARNING****Communications**

Bad communications can cause accidents. Keep people around you informed of what you will be doing. If you will be working with other people, make sure any hand signals that may be used are understood by everyone. Work sites can be noisy, do not rely on spoken commands.

HOP18

**WARNING****Fibre Optic Cables**

If you cut through a fibre optic cable, DO NOT look into the end of it, your eyes could be permanently damaged.

**DANGER****Sparks**

Explosions and fire can be caused by sparks from the exhaust or the electrical system. Do not use the machine in enclosed areas where there is flammable material vapour or dust. HOP22

**WARNING****801 Gravemaster**

The 801 Gravemaster is designed for a specialised function and must not be used for more arduous general excavating or earth moving duties. The extra long dipper fitted to the Gravemaster will reduce machine stability, take care if working on inclines or when across the tracks.

**WARNING****Extending undercarriage**

Always work with the undercarriage extended on machines with this option fitted.

OPERATING SAFETY CHECK LIST - Continued

! WARNING**Earth Drills and Breakers**

Operation of this machine with an earth drill or breaker fitted will alter machine stability. Refer to the attachments stability page before working on inclines. HOP26

! WARNING**Passengers**


Passengers in or on the machine can cause accidents. The JCB Mini-Excavator is a one man machine, do not carry passengers HOP17

**! WARNING****Hillsides**

Operating the machine on hillsides can be dangerous if proper precautions are not taken. Ground conditions can be changed by rain, snow or ice. Check the site carefully, when applicable, keep excavator end and attachments low to the ground. HOP20

! WARNING**Banks and Trenches**


Banked material and trenches can collapse. Do not work or drive too close to banks and trenches where there is danger of collapse. HOP19

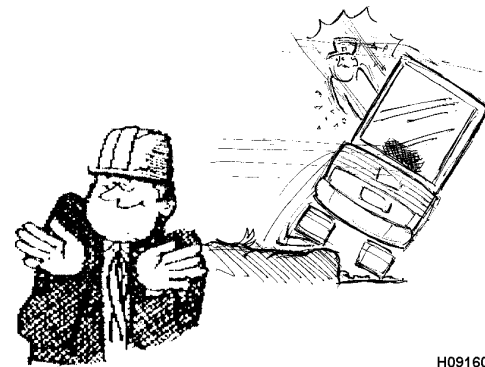

OPERATING SAFETY CHECK LIST - Continued




**WARNING****Safe Working Loads**

Overloading the machine can damage it and make it unstable. HOP23

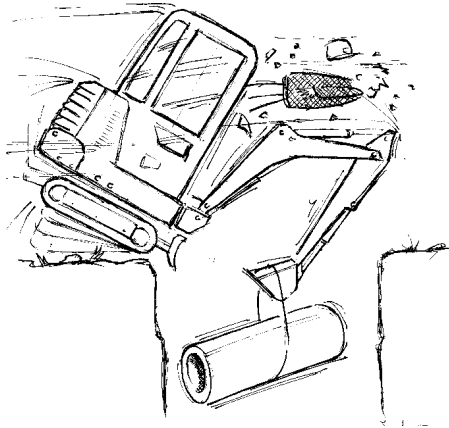**WARNING****Slew and Swing Lock**

The slew lock must be engaged when transporting the machine. The swing lock must be in place when the machine is excavating in fore and aft configuration and 360° slew is used for spoil.

SAFETY DECALS

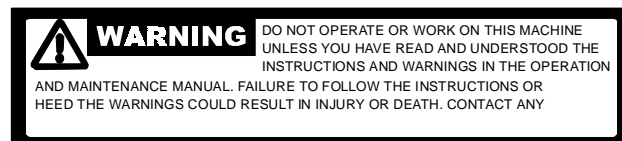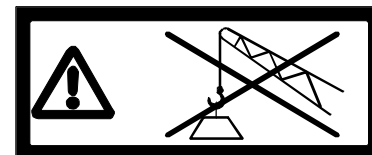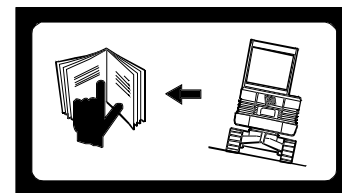

SAFETY DECALS - Continued

Decals on the machine warn you of particular hazards. Each decal is attached close to part of the machine where there is a possible hazard. Read and make sure you understand the safety message before you work with or on that part of the machine.


Keep all decals clean and readable. Replace lost or damaged decals. The decals and their attachment points on the machine are as shown. Each decal has a part number printed on it. Use this number to order a new decal from your JCB Dealer.



WARNING

If you need eye glasses for reading make sure that you wear them when reading the safety decals. Decals are strategically placed around the machine to remind you of possible hazards. Do not over stretch or place your self in dangerous positions to read the decals. HOP25

THE JCB MINI EXCAVATOR

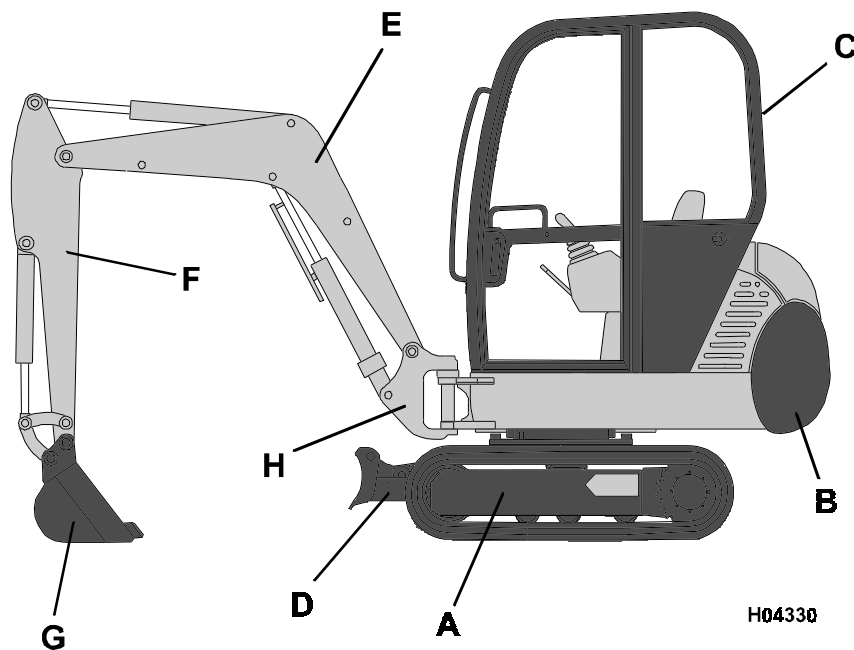

Note: *The illustration shows a typical model. Your machine may look different from the model shown.*

THE JCB MINI EXCAVATOR

The main components of the Mini Excavator are as follows:-

- A** Undercarriage
- B** Main Frame
- C** Cab
- D** Dozer
- E** Boom
- F** Dipper
- G** Bucket
- H** Kingpost

The aim of this part of the handbook is to introduce you to the machine you will be operating. The main parts of the machine will be named and identified. What they do and how they do it will be briefly explained. Some perhaps unfamiliar words used later in this handbook will also be explained.

Your JCB Dealer will gladly give you more information if you want it.

General Description

The JCB Mini Excavator is a tracked excavator. A boom swing facility, 360° slew facility, dozer and an excavating bucket make the machine versatile and highly manoeuvrable. This allows a wide range of work to be undertaken.

IDENTIFYING YOUR MACHINE

The machine has a Data Plate attached to the left hand front face of the machine.

The serial numbers of the machine, engine and gearboxes are stamped on this plate.

If the engine is replaced, stamp the new serial number in place of the old one.

Explanation of Vehicle Identification Number (VIN)

Code A	B	C	D	E	
Example	SLP	8015	X	E	0791000

A	World Manufacturer Identification	SLP = JCB
B	Machine Model	8015 = 8015




C	Year of Manufacture	
R = 1994	W = 1998	2 = 2002
S = 1995	X = 1999	3 = 2003
T = 1996	Y = 2000	4 = 2004
V = 1997	1 = 2001	5 = 2005

D	Manufacturers Location	E = England
E	Machine Serial Number	0791000

Explanation of Engine Identification Number

Code	A	B	C	D	E
Example	KD	50316	J	000001	y

A Engine Type
B Engine Parts List
C Country of Manufacture
D Engine Serial Number
E Year of Manufacture

  JCB COMPACT PRODUCTS LTD CHEADLE, STAFFS, ENGLAND CONSTRUCTOR		OSEN ISO9001  FM 14063
<input type="text"/> VIN Vehicle Identification Number	<input type="text"/> ENGINE SERIAL NUMBER	Product Identification Number <input type="text"/>
<input type="text"/> SLEW GEARBOX SERIAL NUMBER	<input type="text"/> LH TRACK GEARBOX SERIAL NUMBER	<input type="text"/> RH TRACK GEARBOX SERIAL NUMBER
<input type="text"/> WEIGHT kg	<input type="text"/> YEAR OF MANUFACTURE	<input type="text"/> ENGINE POWER kW @ RPM



ROPS, TOPS AND FOGS - Optional**WARNING**

Modified and wrongly repaired ROPS, TOPS & FOGS Structures are dangerous. Do not modify the ROPS, TOPS & FOGS Structure. Do not attempt to repair the ROPS, TOPS & FOPS Structure. If the ROPS, TOPS & FOGS Structure has been in an accident, do not use the machine until the structure has been inspected and repaired. This must be done by a qualified person. For assistance, contact your JCB dealer. Failure to take precautions could result in death or injury to the operator. 5-3-1-7

Machine built to ROPS, TOPS and FOGS standards have an identification label fitted to the cab.

**WARNING**

The ROPS, TOPS & FOGS cab is designed to give you protection in an accident. If you do not wear the seat belt you could be thrown about inside the cab, or thrown out of the machine and crushed. You must wear a seat belt when using the machine. Fasten the seat belt before starting the engine. 2-2-1-9

	JCB HYDRAPOWER LTD.	
	RIVERSIDE, RUGELEY, STAFFS, ENGLAND	
○	JCB MINI EXCAVATOR MODEL 801.4.	MAXIMUM WEIGHT 1425 Kg.
	MEETS ROPS TO ISO 3471 AND FOGS TO ISO/DIS 10262 LEVEL 1	
PART No.	<input type="text"/>	SERIAL No. <input type="text"/>

817/04181

INTRODUCTION

This chapter is arranged to guide you step-by-step through the task of learning how to use the machine. Read it through from beginning to end. By the end of the chapter you should have a good understanding of the machine and how to operate it.

Pay particular attention to all safety messages. They are there to warn you of possible hazards. Do not just read them-think about what they mean. Understand the hazards and how to avoid them.

If there is anything you do not understand, ask your JCB dealer, he will be pleased to advise you.

When you have learned where the driving controls are and what they do, practise using them. Practise driving the machine in a safe, open space clear of other people.

Get to know the "feel" of the machine and its driving controls.

Move on to the attachment controls only when you can drive the machine confidently and safely.

Take great care when practising with the attachment controls. Practise in an open space, keep people clear. Do not jerk the controls: operate them slowly until you understand the effect they have on the machine.


Finally, do not rush the job of learning. Take your time and take it safely.

Remember **BE CAREFUL**
BE ALERT
BE SAFE

BEFORE ENTERING THE CAB

WARNING

Walking or working under raised attachments can be hazardous. You could be crushed by the attachments or get caught in the linkages.

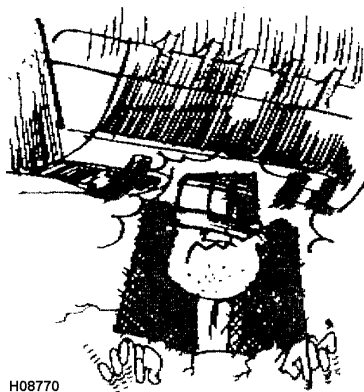

Lower the attachments to the ground before doing these checks. If you are new to this machine, get an experienced operator to lower them for you.

If there is nobody to help you, study this handbook until you have learned how to lower the attachments. Also make sure that the slew lock is fitted before doing these checks. HOP26

The following checks should be made each time you return to the machine after leaving it for any period of time. We advise you also to stop the machine occasionally during long work sessions and do the checks again.

All these checks concern the serviceability of the machine. Some concern your safety. Get your service engineer to check and correct any defects.

Machine Walk Round Inspection

- 1 Check for cleanliness:
 - a Clean the windows and light lenses.
 - b Remove dirt and debris, especially from around the linkages, rams, pivot points and radiator.
 - c Make sure the cab and handrails are clean and dry.
 - d Clean all safety decals. Replace any that are missing or cannot be read.

BEFORE ENTERING THE CAB - continued**2 Check for damage:**

- a** Inspect the machine generally for damaged and missing parts.
- b** Make sure that the bucket teeth are secure and in good condition.
- c** Make sure that all the pivot pins are secured correctly in place.
- d** Inspect the windows for cracks and damage.
- e** Check for oil, fuel and coolant leakages beneath the machine.

**WARNING**

You could be killed or injured with damaged tracks. Do not use the machine with damaged or excessively worn tracks. HOP27

3 Check the Tracks (Rubber)

Check for cut rubber and penetration by sharp objects. Do not use a machine with damaged tracks.

4 Check the engine cover/panels and fuel filler cap

- a** Make sure the engine cover / panels are fitted and securely locked.
- b** Make sure the fuel filler cap is tightly closed (we also recommend that you lock it).

**WARNING**

For safety reasons, machines fitted with single access canopies from new must not have the barrier removed. The machine must always be entered/exited with the LH isolator raised via the LH side.

B4

OPERATION

B4

ENTERING/EXITING THE CAB

ENTERING/EXITING THE CAB



WARNING

Do not enter or exit the cab unless the arm rest or lever lock is fully engaged.

To give sufficient clearance to enter or leave the cab, the left lock must be raised.

When the lock is in the raised position the excavator controls cannot be operated. Lowering the lock to the normal position connects the excavator controls and allows the normal operation of the levers.

Note: *When entering or leaving a canopy machine, both LH and RH locks must be raised.*

Note: *The illustration shows a typical model; your machine may look different from the model shown.*



WARNING




Always face the machine when entering or leaving the cab. Use the step(s) and handrails. Make sure the step(s), handrails and your boot soles are clean and dry. Do not jump from the machine. Do not use the machine controls or lever locks as handholds, use the handrails. Failure to follow these instructions could result in unexpected movement of the machine.

B6

OPERATION

B6

CAB

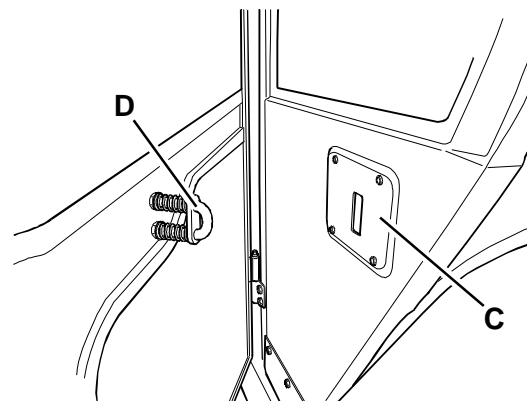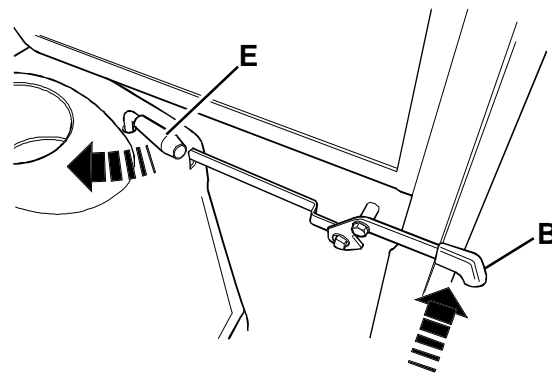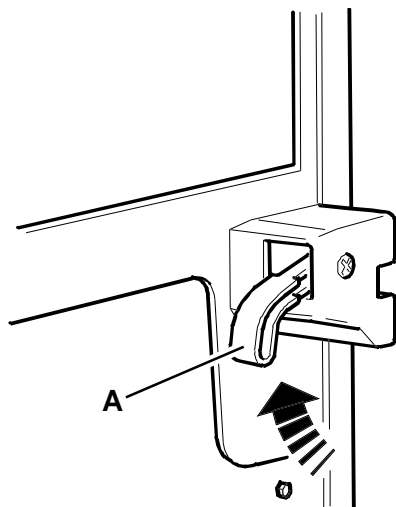

CAB

The cab is bolted on top of the mainframe and is a welded steel construction. The cab has a sliding window on the right side, a hinged door and an up and over windscreen. All windows are of toughened glass. The cab is fitted with a windscreen wiper, heater fan, seat and all operating controls and instruments.

CAUTION

Do not drive the machine with the door unlatched. It must be correctly closed or secured fully open.

HOP29

Opening and Closing the Door

To open the door from the outside, unlock it with the key provided and press the lock barrel to release the catch. To open the door from inside, push lever **A** upwards. Close the door from the inside by pulling it firmly, it will latch itself.

Securing the Door in the Open Position

The door can be secured in the fully open position.

Swing the door fully open until the catch plate **C** on the door locates securely on the sprung latch **D** on the side of the cab.


When the door is secured fully open, it can be released from outside the cab by operating lever **B**, or from inside the cab by operating lever **E**, as illustrated. Make sure the door is securely closed.

OPENING THE WINDSCREEN

To open the up and over window, disengage both latch pins **A** on the top edge of the screen, lift the screen to the mid position or to the fully open position (parallel with the roof). Secure in place with the latch pins **A**.

To close the tilting windscreen: disengage the latch pins **A**. Carefully lower the complete windscreen into the closed position. Ensure the latches on the windscreen engage in the locating points in the cab frame.

Note: Care must be taken when lowering the window not to bump the top edge of the lower front window.

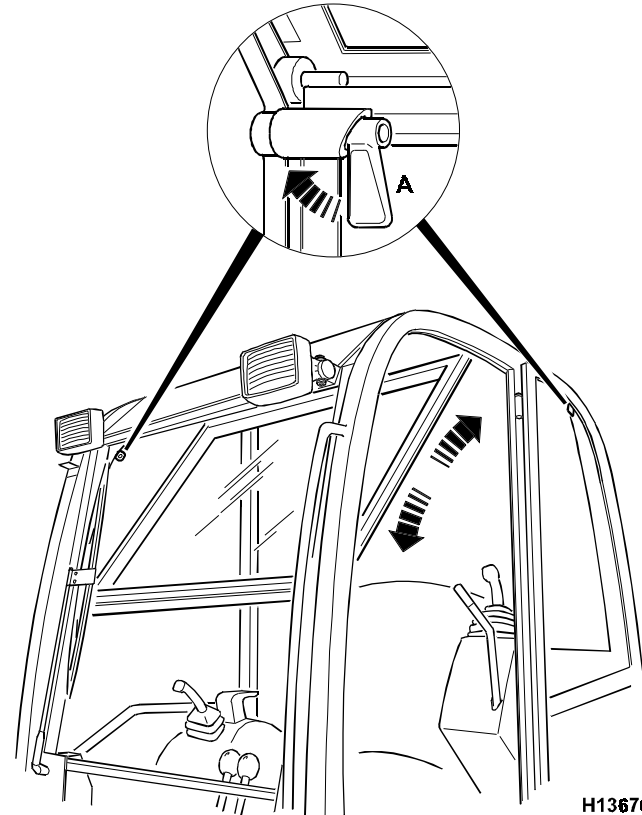


OPENING THE SIDE WINDOW

The side window is held closed by catch **A** operated from inside the cab.

To open the window, operate the catch **A** and slide the window to the desired position.

To close the window, slide the window fully shut and check that the catch **A** has located on the frame.

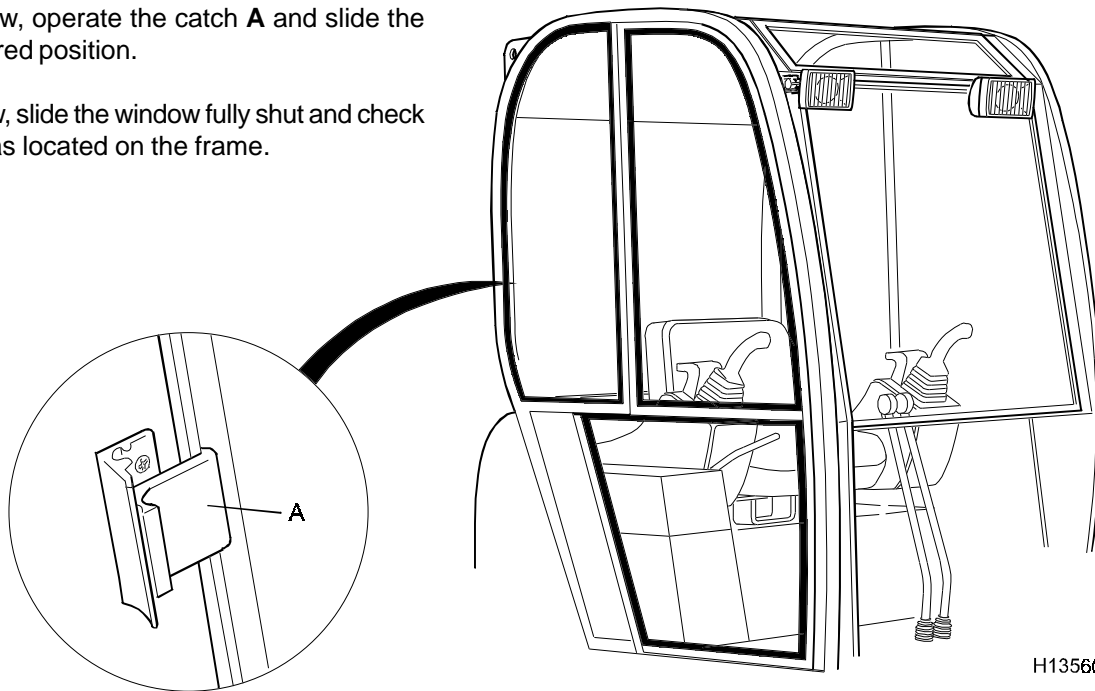


B10

OPERATION

B10

HEATER CONTROLS

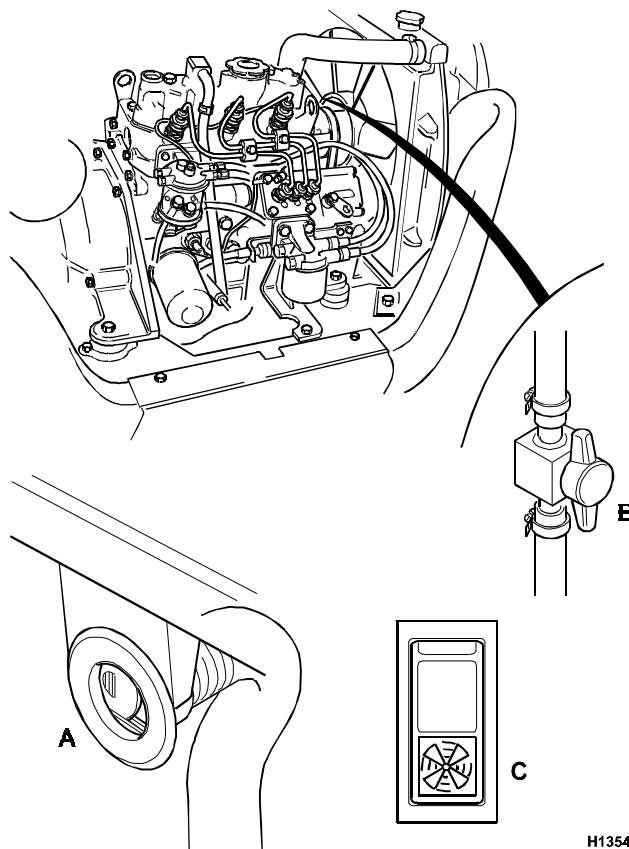

HEATER CONTROLS

Windscreen Louvres

Hot air can be directed to the windscreen and / or the cab floor by closing / opening flaps **A**. For the summer use, the heater element can be turned off at the water valve **B** on the engine.



WARNING

Stop the engine before lifting the engine cover to operate valve B. HOP30

Heater Fan

Press the rocker switch **C** down to switch the fan on to the lower speed. Press the switch again to select the faster speed (optional). Return the switch to the first position to turn the fan off.

SEAT CONTROL



WARNING

Do not adjust the seat with the engine running otherwise your legs could knock the control levers.

HOP31

Depending on the type of machine various adjustments can be made to the positions of the control levers and the seat consoles/armrests.

The operators seat can be adjusted for your comfort. A correctly adjusted seat will reduce operator fatigue. Position the seat so that you can comfortably reach the controls with your feet on the cab floor. The seat is adjustable for height and reach.

CAUTION

Having adjusted the seat position, ensure the seat locking lever has engaged fully.

Suspension Seat - when fitted



WARNING

Whilst seated, adjust the dial on the left of the seat until your weight in kgs appears in the red shaded area. Failure to set the weight adjustment dial will reduce the beneficial isolation effect of the seat suspension and may result in personal discomfort or injury. 2-2-1-12


SEAT BELT

Fasten the Seat Belt

Sit correctly in the seat. Make sure the belt is not twisted.
Push the male fitting **A** into the buckle **B** until it latches.

Release the Seat Belt

Press button **C** and pull the recoil side of the belt outwards.

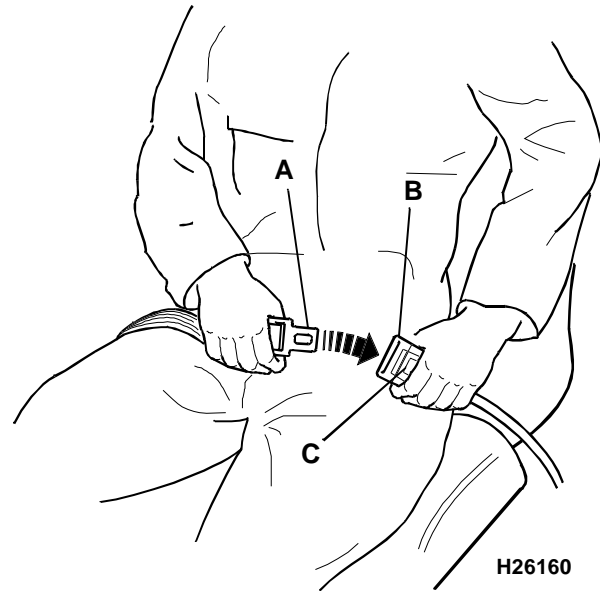


B14

OPERATION

B14

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS

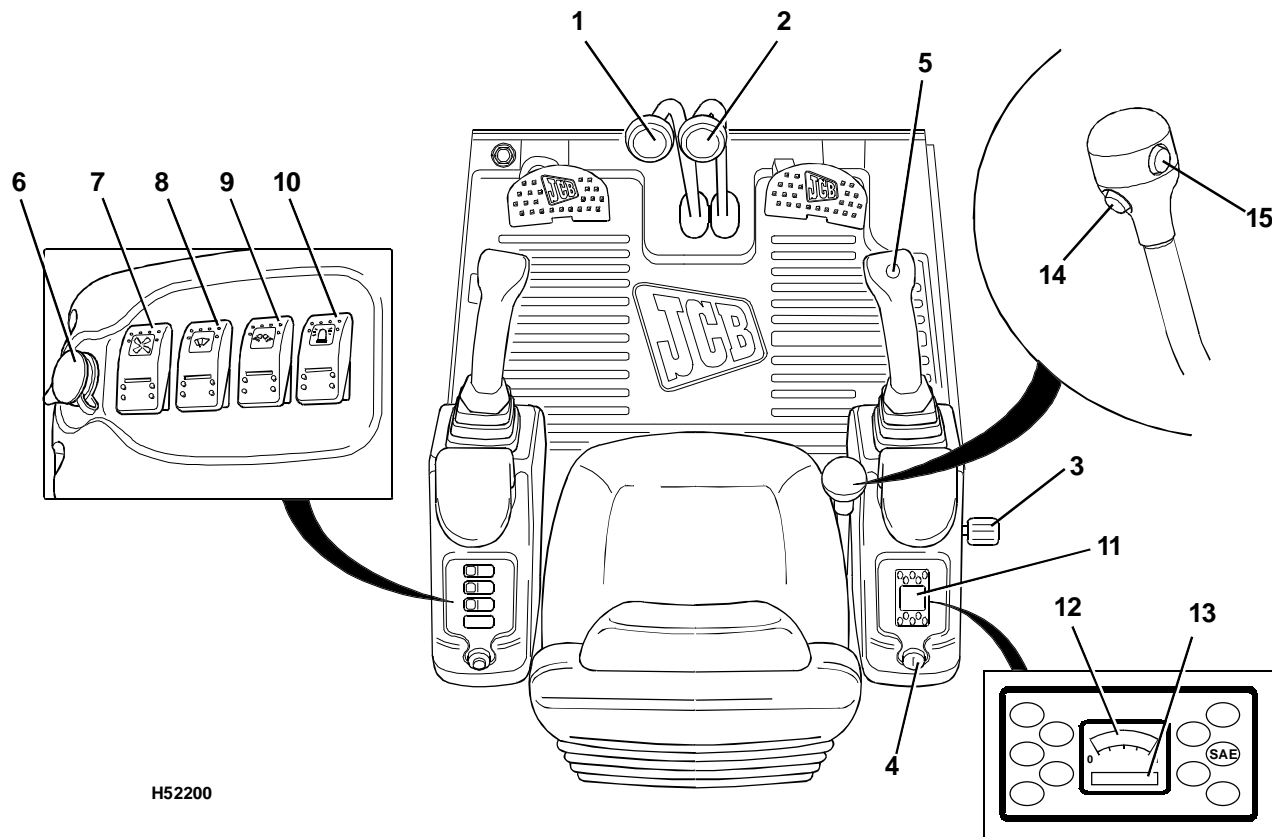


H52200

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS

- 1 Left Track Control Lever
- 2 Right Track Control Lever
- 3 Hand Throttle Lever
- 4 Starter Switch
- 5 Horn
- 6 Auxiliary Power Socket
- 7 Heater Fan
- 8 Windscreen Wiper Switch
- 9 Working Light Switch
- 10 Beacon Switch
- 11 Warning Lights
- 12 Fuel Gauge
- 13 Hourmeter
- 14 Two Speed Tracking Switch
- 15 Extending/Retracting Undercaggiage Switch

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS - continued

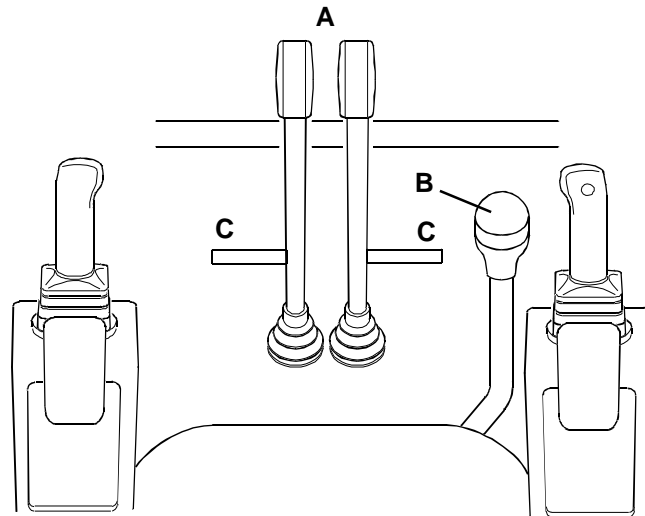

Track Controls

The two tracks are controlled by a pair of control levers **A** in front of the seat. Each lever controls one track and is spring loaded to a central position. In this position the track does not operate. The left side lever controls the left track. The right side lever controls the right track. The two levers can be operated individually or together as necessary to move the machine as required. This can be done using one hand or both. The levers can also be operated by using the foot pedals **C** (optional).

An increase in speed may be achieved by operating the two speed tracking button **B** located on the dozer control lever knob (standard on 8017 and 8018, optional on 8015)

Note: An extra selector button is fitted to this knob for machines with an extending undercarriage.

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS - continued



WARNING

Make sure that all persons are clear before moving.



WARNING

The track controls operate as described when the dozer is located in front of the windscreen. If the dozer is positioned behind the cab, the lever operation will be reversed. It is advisable when tracking to always position the dozer to the front of the machine.



WARNING

Low speed must always be selected when unloading the machine from a vehicle or tracking down steep slopes. The machine will take longer to stop when the levers are released if high speed is selected. 0076

Forward

To move the machine forward, push both levers forward. Release the levers to stop.

Reverse

To move the machine backward, pull both levers backward. Release the levers to stop.

Turn

To turn the machine whilst travelling, move the lever back towards the central position on the side towards which you want to go e.g. move the left lever back to turn left. This causes one of the tracks to move slower than the other. The faster moving track will push the machine around. Release the lever to stop.

Spin

To spin the machine around though 360°, without moving it, operate one lever, in a forward position and the other in a reverse position. This will cause the tracks to drive in opposite directions and hence push the machine around.

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS - continued

Engine Controls


Engine Speed

A hand operated throttle lever in the cab, controls the speed of the engine.

Move the lever to increase or decrease the engine speed. The lever can be left in any position between idle and maximum as required.

Engine Start / Stop

To start and stop the engine use the starter switch, see **Switches** on the following page.

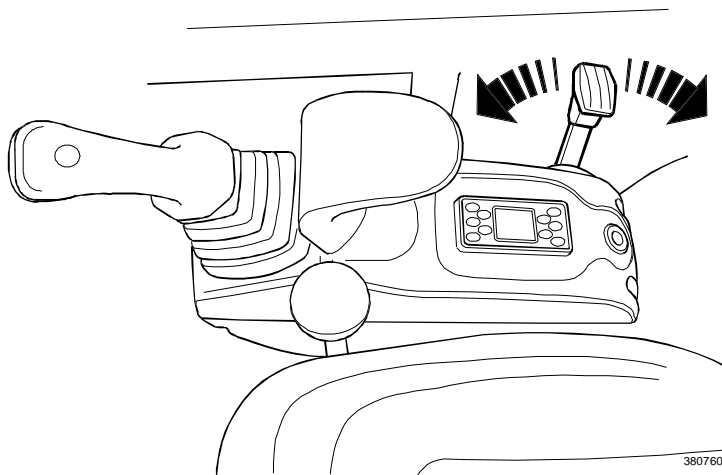

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS - continued

Switches

Starter Switch

This is operated by the starter key. It has four positions. The key can only be removed when in the 'O' position.

O Off/Stop Engine

Turn the key to this position to stop the engine. Make sure the controls are in neutral and the excavator and dozer are lowered before stopping the engine.

I On

Turning the key in this position connects the battery to the electrical circuits. The key will spring back to this position when released from II.


II Heat Position

Holding the key in this position switches on the glow plugs. The glow plugs warm the engine combustion chambers for cold weather starting. Do not hold in this position for more than 60 seconds. The key will spring back to I when released.

III Start

Operates the starter motor to turn the engine. The starter switch has an inhibitor to stop the switch being turned ON when the engine is running.

Note: Do not operate the starter for more than 20 seconds at one time.

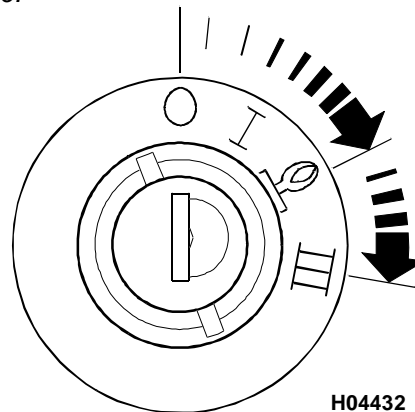


H04432

B20

OPERATION

B20

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS - continued

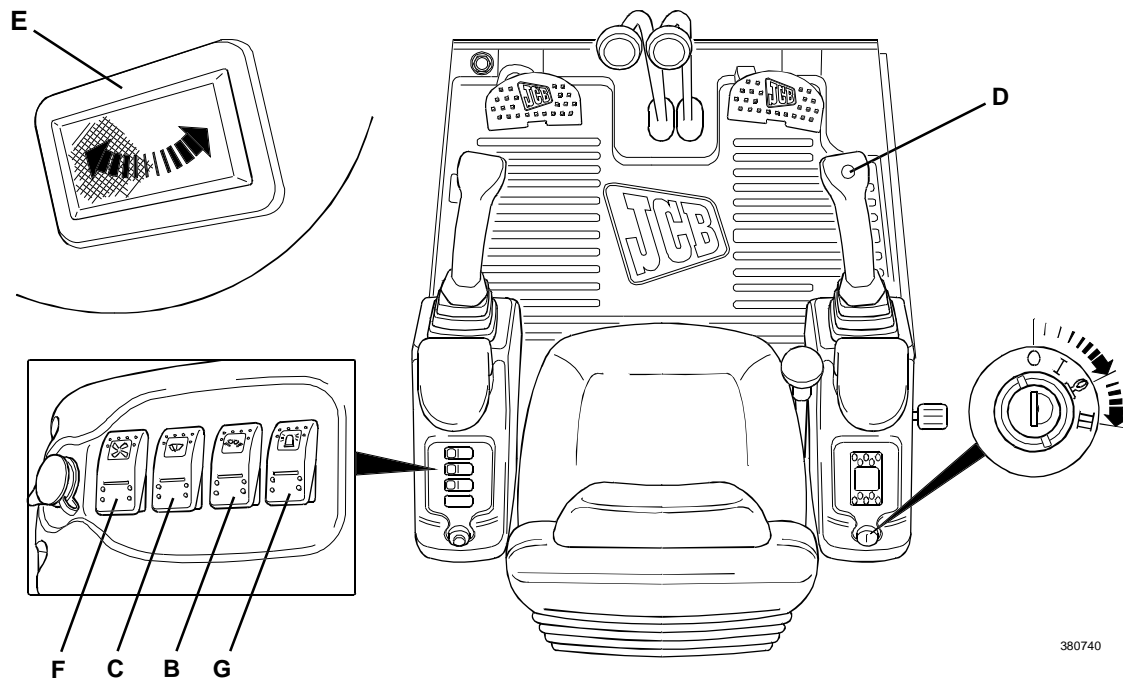

380740

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS - continued

Switches - continued

Work Light Switch B

On/Off Switch

Windscreen Wipe Switch C

Press the switch down once to switch the windscreen wiper on.

Put the switch to the OFF position to turn off the windscreen wiper, which will then self park.

Functions only with the starter switch at position I.

Horn Button D

This is a push button switch located in the R.H. excavator control lever.

Press the switch to activate the horn.

Cab Light E

A cab light is situated on the right side of the cab, above the rear window. It is operated by pressing either end of the light lens.

Heater Fan Switch F

Press the rocker switch **C** down to switch the fan on to the lower speed. Press the switch again to select the faster speed (optional). Return the switch to the first position to turn the fan off.


Flashing Beacon Switch G

On/Off switch.

Functions with ignition ON or OFF.

Note: *The Beacon power socket is located outside, on the right of the machine, behind the cab.*

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS - continued

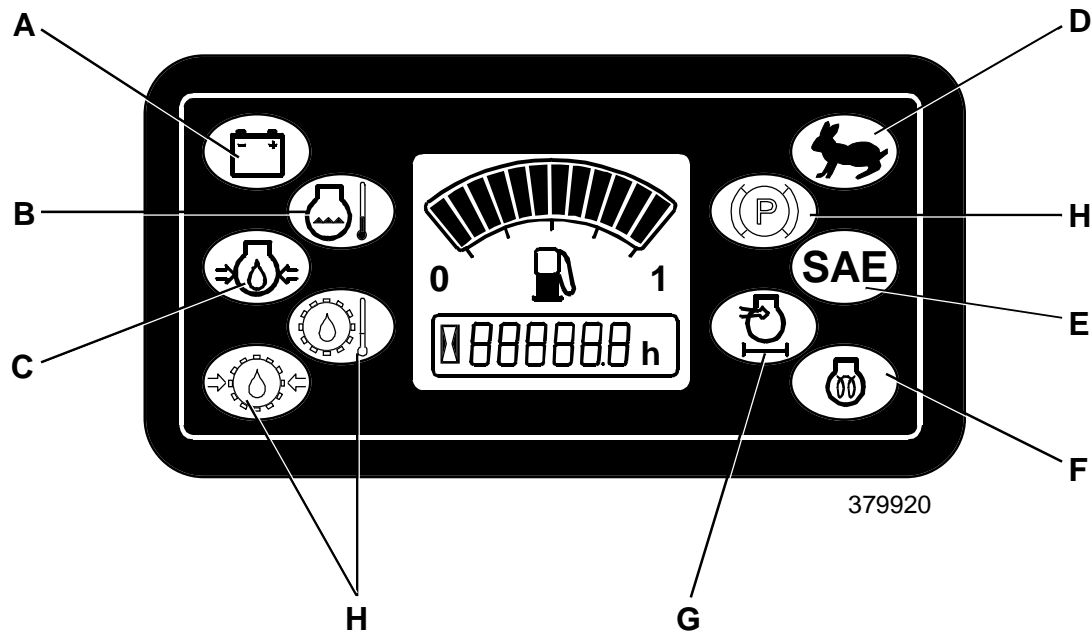


ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS - continued

Instrument Cluster

Indicators for the engine and related systems are mounted in the instrument cluster in the R.H. console.

- | | |
|---|---|
| <p>A Charge (Fault) Indicator
Indicates Alternator operation. Illuminates RED when a fault occurs.</p> <p>B Coolant Temperature (High) Indicator
Illuminates RED when coolant temperature is too high.</p> <p>C Engine Oil (Low) Indicator
Illuminated RED when engine oil pressure is too low.</p> <p>D Two Speed (High Engaged) Indicator
Illuminated GREEN when high speed is engaged.</p> | <p>E SAE Controls (Selected) Indicator
Switchable ISO/SAE function: not fitted on this machine.</p> <p>F Glow Plugs (On) Indicator
Illuminates YELLOW when the Glow Plugs are energised.</p> <p>G Air Filter (Blocked) Indicator
Illuminates YELLOW when the Air Filter is blocked.</p> <p>H Indicators (not fitted on this machine)</p> |
|---|---|

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS - continued

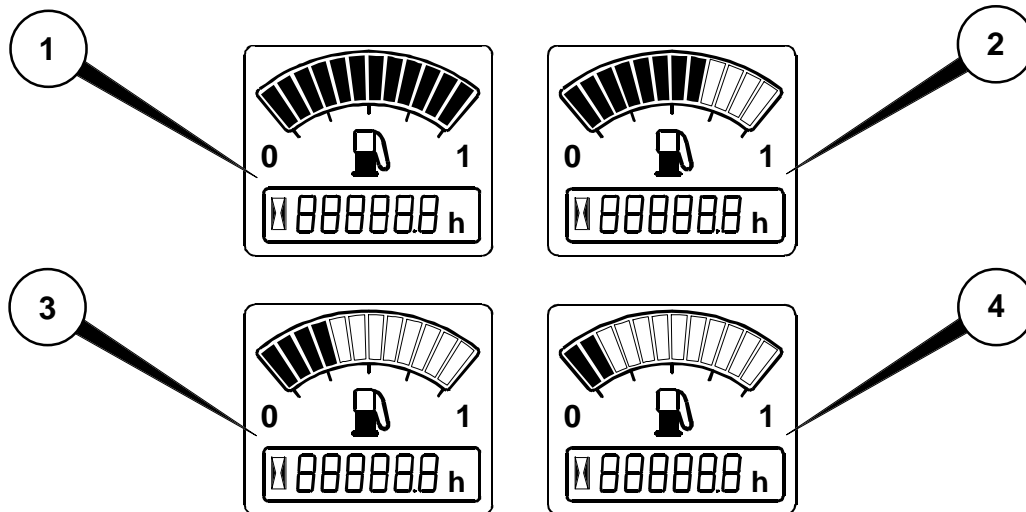

379930

ENGINE AND TRACK CONTROLS, SWITCHES AND INSTRUMENTS - continued

Digital LCD Fuel Gauge

Fuel Tank Level Indicator

- | | |
|-------------------------|---|
| 1 Full Tank | All bars illuminated
Filler symbol illuminated |
| 2 4 bars to Full | Filler symbol illuminated
All bars illuminated and reducing as level drops ie. 11 bars, 10 bars, 9 bars etc. |
| 3 4 bar to 3 bar | Buzzer gives 3 short beeps. Pump symbol starts to flash. |
| 4 3 bar to 1 bar | Pump symbol remains flashing
1 bar illuminated (nearly empty)
0 bars illuminated (tank empty) |

Note: *The flashing of all fuel level bars and the filler pump symbol indicates a fault in the fuel sender circuit. Contact your JCB dealer.*

Audible Warnings

A buzzer will sound if any of the following display a machine fault.

- A** Charge indicator
- B** Coolant indicator
- C** Engine oil pressure
- G** Air Filter indicator

(see instrument cluster illustration)

If the fault is ignored the buzzer will sound continuously for 180 seconds, after which it will sound intermittently, 1 second on, 2 seconds off.



Switch the ignition off to reset all operations.

B26

OPERATION

B26

DOZER CONTROLS

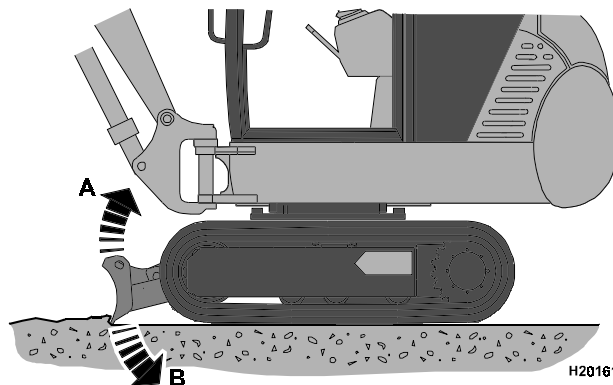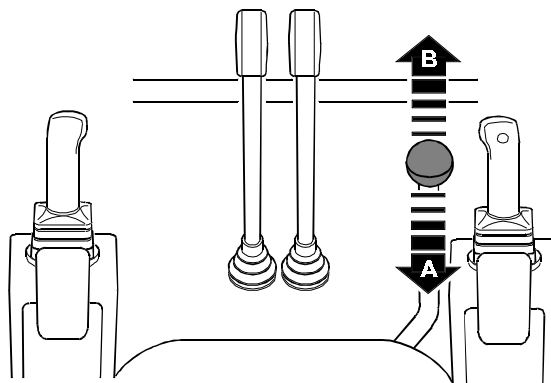

H20161

DOZER CONTROLS

The dozer is operated by a single control lever on the right side of the cab. The buttons fitted to the lever knob allows the extending/retracting undercarriage operation or two-speed tracking on machines with these options. The lever is spring loaded to the central position. In this position the dozer will not move.

CAUTION

Before operating the dozer, make sure that large rocks or other objects are not between it and the tracks that can jam the mechanism. HOP34

CAUTION

Before stopping the engine lower the dozer blade to the ground. HOP35

Raise Dozer 'A'

To raise the dozer pull the lever backward. At the required position release the lever.

Lower Dozer 'B'




To lower the dozer push the lever forward until an increased resistance is felt and the blade moves. At the required position release the lever.

B28

OPERATION

B28

EXTENDING/RETRACTING UNDERCARRIAGE

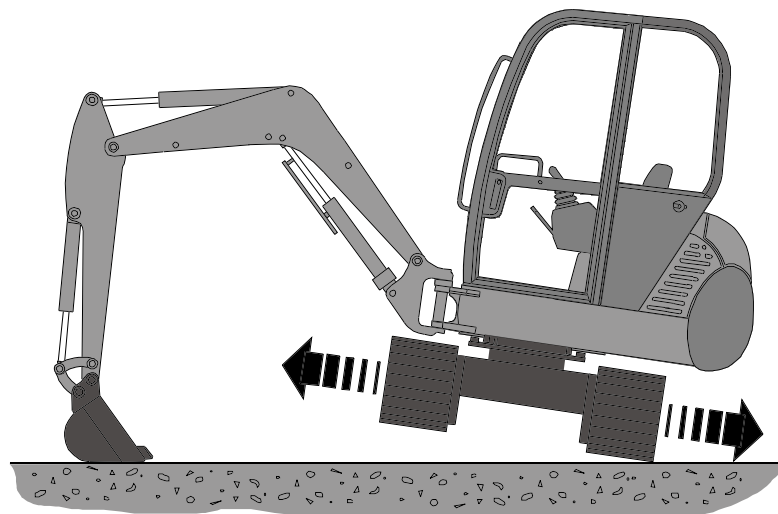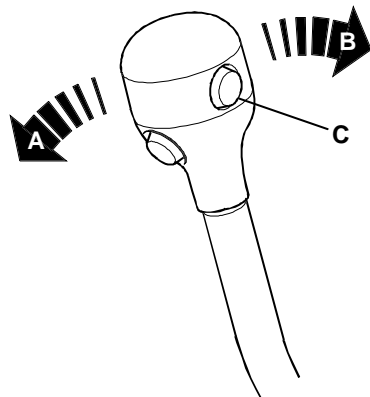

H21820

EXTENDING/RETRACTING UNDERCARRIAGE



WARNING

The 801 Gravemaster is designed for a specialised function and must not be used for more arduous general excavating or earth moving duties. The extra long dipper fitted to the Gravemaster will reduce machine stability, take care if working on inclines or when across the tracks.



WARNING

Always work with the undercarriage extended.

The extending/retracting undercarriage is operated by pressing and holding button **C** on the dozer lever, the lever then operates the undercarriage. The dozer operation returns to the lever when the button is released.

CAUTION

When excavating, the undercarriage must be extended to full width. Do not extend or retract undercarriage on sloping ground.

Operation


- 1 Position machine on level ground, ensure all persons are clear of the machine.
- 2 Operate the dozer lever to raise the dozer.
- 3 Slew the machine 90° across tracks, position the bucket on the ground, (as shown).
- 4 Select boom down and operate to raise one track just clear of the ground.
- 5 Press and hold undercarriage button **C**.
- 6 Operate the dozer lever to operate undercarriage
 - A** Forward - to extend undercarriage
 - B** Back - to retract undercarriage
- 7 When fully retracted/extended, release button **C**.
- 8 Select boom up and slowly lower the track to the ground.

B30

OPERATION

B30

EXCAVATOR CONTROLS

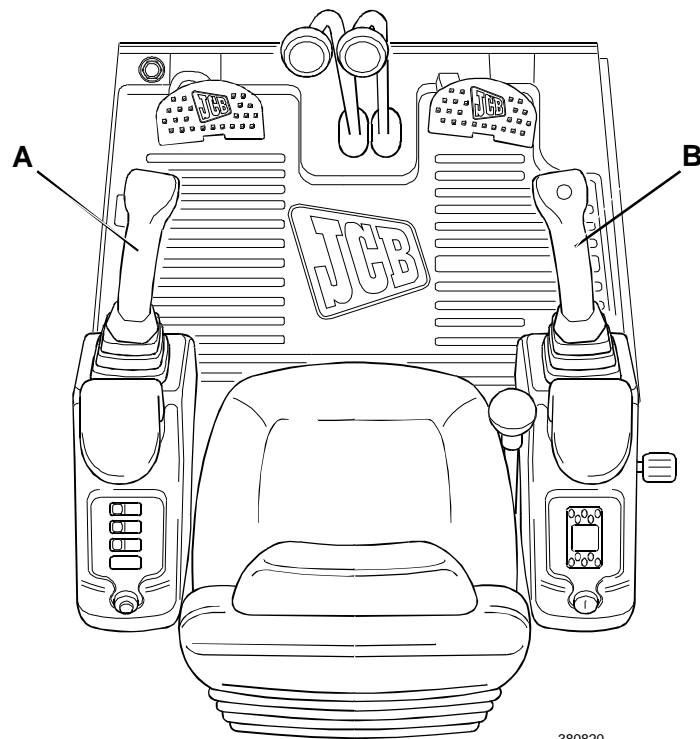

380820

EXCAVATOR CONTROLS

The slew lock is situated in the seat bulkhead. Lift and move to the left placing it in the unlocked position. Ensure it is UNLOCKED before operating the excavator controls.

The excavator controls consist of those levers which operate the boom, dipper and bucket and slew the cab.

There are two excavator controllers **A** and **B** which control all the functions.

The controls are situated in the operators seat armrests. Raising the left armrest when leaving the cab prevents the services operating. When re-entering the cab, ensure the armrest is replaced firmly to ensure correct operation.


In the standard ISO pattern, the left side controller **A** controls slew and dipper functions. The right side controller **B** controls boom and bucket functions as standard.

It is possible to specify SAE style operating functions i.e. left controller **A** controlling slew and boom. The right hand controller **B** controlling dipper and bucket operation.

Both controllers are spring loaded to the central position. In this position related services will not operate.


Most excavating movements are achieved using a combination of both controllers at the same time. Practise such movements until you are familiar with the operations that can be achieved safely.

EXCAVATORS CONTROLS - continued

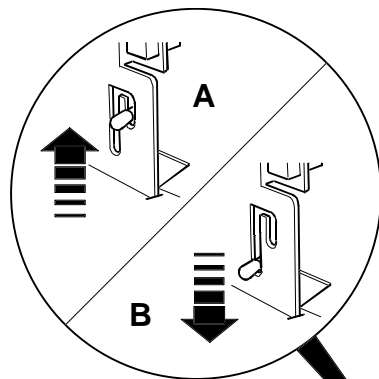

Slew Lock Position A - Disengaged

Slew Lock Position B - Engaged

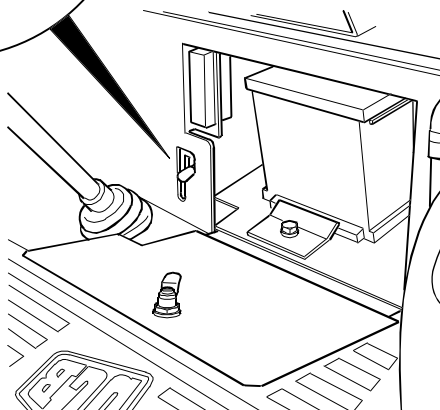

EXCAVATORS CONTROLS - continued


Before slewing the cab, ensure that the slew lock is disengaged, (see opposite page).

Slew cab Left

To slew the cab to your left, move the left controller to the left **A**. Release the controller when you have moved to the desired position.

Slew cab Right

To slew the cab to your right, move the left controller to the right **B**. Release the controller when you have moved to the desired position.



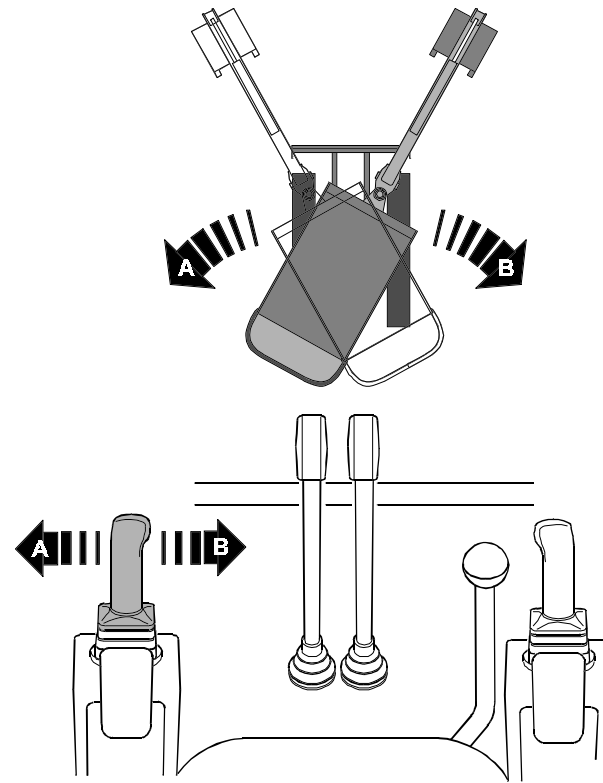


B34

OPERATION

B34

EXCAVATORS CONTROLS - continued

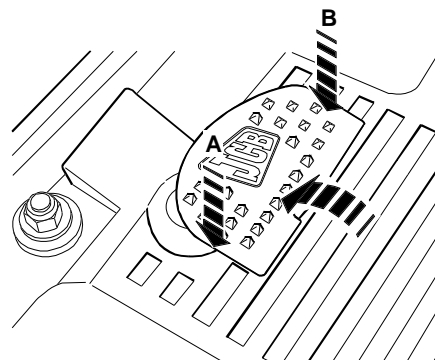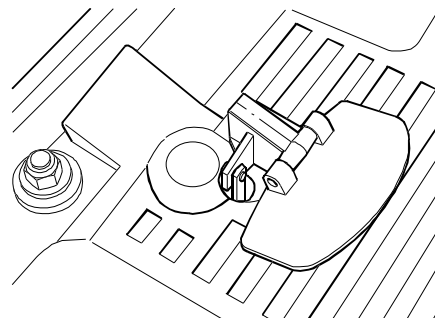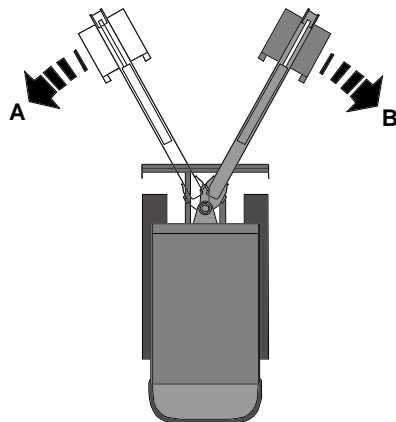

380730

EXCAVATORS CONTROLS - continued



WARNING

When using the boom and dipper fully extended, take the following precautions, otherwise the machine could get damaged or become unstable and a danger to you and other people.

Make sure you do not exceed the working capacity of the boom at maximum reach. Swing the boom slowly to prevent any chance of the machine becoming unstable. For the same reason avoid dumping downhill if possible.

HOP36

CAUTION

Do not excavate on hard or rocky ground with the boom set diagonally across the undercarriage. This induces a rocking motion that can cause damage to the track gearbox sprockets and tracks.

HOP37

Swing Boom Left

To swing the boom to your left **A**, unlock the swing pedal by pivoting the pedal **C** forward into its operating position, press the pedal to the left side. Release the pedal when the excavator end has reached the desired position.

Swing Boom Right

To swing the boom to your right **B**, unlock the swing pedal by pivoting the pedal **C** forward into its operating position, press the pedal to the right side. Release the pedal when the excavator end has reached the desired position.


CAUTION

The swing pedal must be in the locked position when not in use.

B36

OPERATION

B36

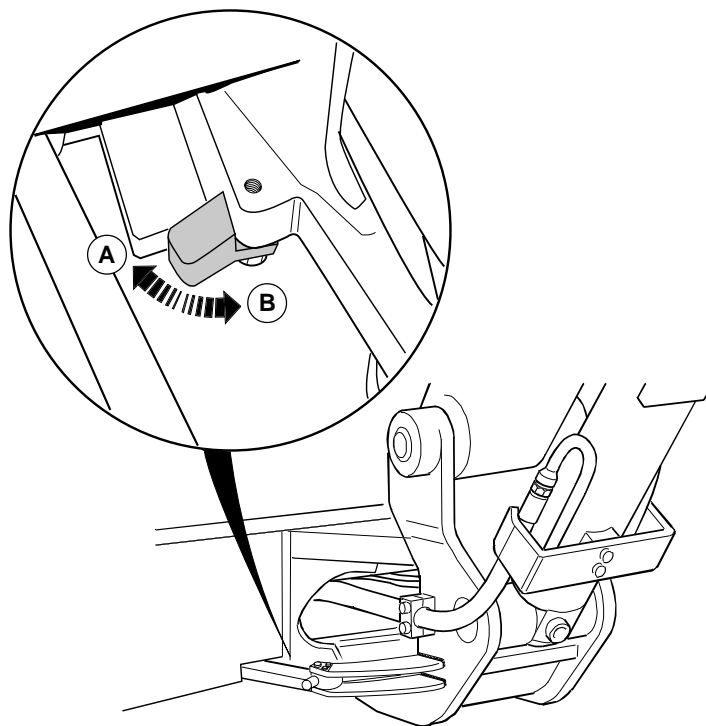EXCAVATORS CONTROLS - continued

A387300

EXCAVATORS CONTROLS - continued

Boom Swing Stop

The boom swing can be adjusted to allow an increased swing to the left from 60° to 90° by repositioning the swing stop.

60° Operation

Set the swing stop to position **A** this enables the machine to operate in an arc of 60° to the left and 50° to the right.

90° Operation

Set the swing stop to position **B** this enables the machine to operate in an arc of 90° to the left and 50° to the right.



CAUTION

With certain digging configurations with the boom stop set to 90° the bucket can contact the cab. Care should be taken whenever operating with the boom stop set to 90° especially at the extremes of position. The machine can become unstable with a fully laden bucket. HOP39

CAUTION

The boom stop should only be used in the 90° position for the duration of the job. Return the boom stop to the 60° position for normal operating.

EXCAVATORS CONTROLS - continued

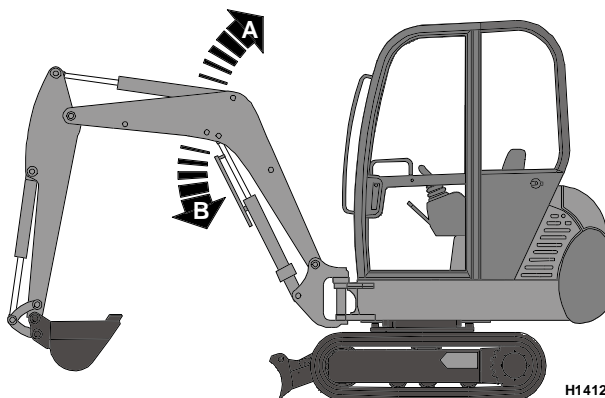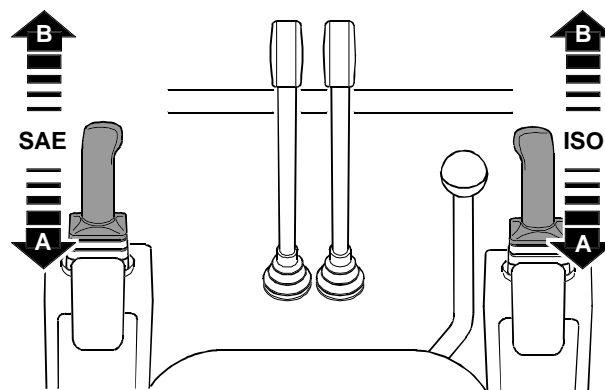

EXCAVATORS CONTROLS - continued



WARNING

Thoroughly warm the hydraulic oil before operating the excavator services. Before selecting boom up, check there are no overhead obstructions or electric power cables. HOP40

CAUTION

The boom service is operated by the R.H. controller on standard ISO control machines or by the L.H. controller on the optional SAE control pattern machines. HOP41

Raise Boom

To raise the boom pull the respective controller backwards
A. Release the controller when the boom has reached the desired position. The boom ram incorporates damping at the limit of boom raise, reducing the speed of the ram, eliminating shock loadings.

Boom Boost

Partial selection of the controller will limit the speed of boom raise. Boom Boost is automatically engaged when controller is fully selected.

Lower Boom

To lower the boom, push the respective controller forwards
B. Release the controller when the boom has reached the desired position.

EXCAVATORS CONTROLS - continued

CAUTION

The dipper service is operated by the L.H. controller on standard ISO control machines or by the R.H. controller on the optional SAE control pattern machines. HOP42

Dipper In

To bring the dipper in, pull the respective controller backward **A**. Release the controller when the dipper is at the desired position.



Dipper Out

To push the dipper out, push the respective controller forward **B**. Release the controller when the dipper is at the desired position.



WARNING

Care must be taken with machines fitted with an extra long dipper as it may affect the stability of the machine.

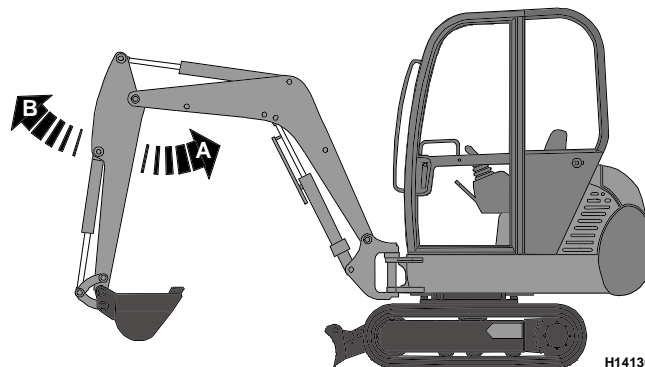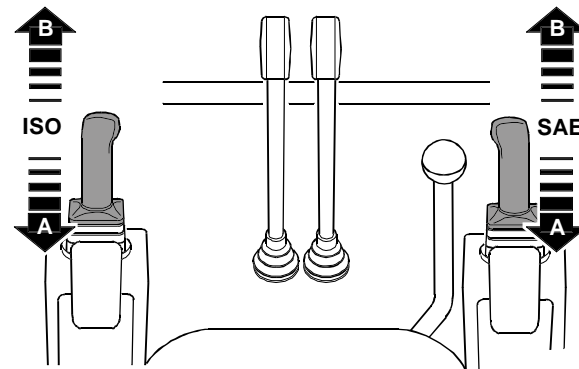



EXCAVATORS CONTROLS - continued

Close Bucket

To close the bucket (to gather a load), move the right controller to the left **A**. Release the controller when the bucket is closed sufficiently.

Open Bucket

To open the bucket (to dump a load), move the right controller to the right **B**. Release the controller when the bucket is open far enough.

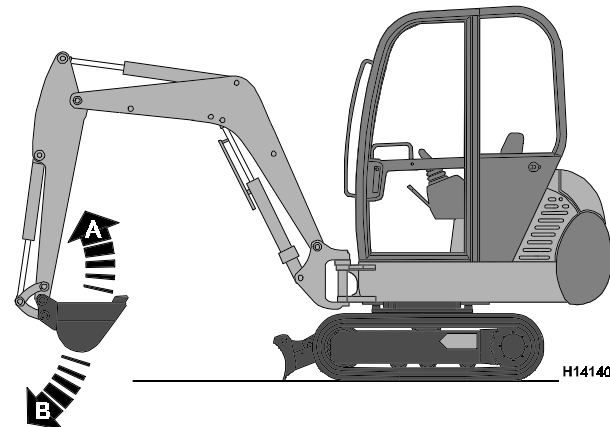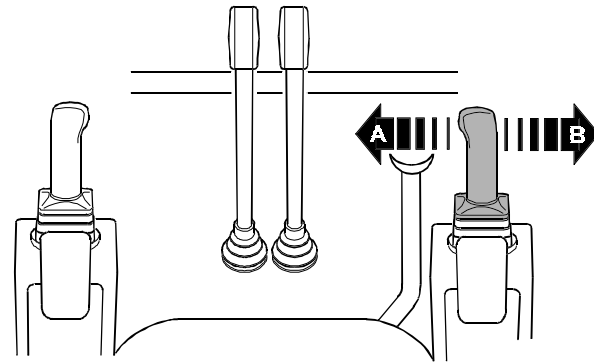

REFUELLING THE MACHINE



WARNING

Diesel fuel is flammable. Keep flames away from the machine. DO NOT smoke while fuelling the machine or working on the engine. Do not refuel with the engine running. There could be a fire and injury if you do not follow these precautions. INT-3-2-2

CAUTION

Spilt fuel may cause skidding and therefore accidents. Clean any spilt fuel immediately.

Do not use fuel to clean the machine.

When filling with fuel , choose a well aired and ventilated area.

At the end of every working day, fill the tank with the correct type of fuel. This will prevent overnight condensation from developing in the fuel. Do not fill the tank completely, leave some space to allow the fuel to expand

- 1 Raise the engine cover.
- 2 Remove the fuel cap.
- 3 Pull extension filler out to full extent.
- 4 Turn clockwise to lock in place.
- 5 Carefully fill with fuel.
- 6 Refit the fuel cap and ensure that the vent is clear.

BEFORE STARTING THE ENGINE

Note: Read *Operating in Low Temperatures or Operating in High Temperatures* in operation section if you will be using the machine in very hot or cold climates.



WARNING

Before lowering the attachments to the ground, make sure that the machine and the area around it are clear of other people. Anyone on or close to the machine could fall and be crushed by the attachments, or get caught in the linkages.

HOP43

1 Lower the attachments to the ground

Lower the excavator bucket and dozer to the ground, if they are not already there. They will lower themselves under their own weight when you operate the controls. Operate the controls carefully to control the rate of descent.

2 Do a pre-start inspection

For your own safety (and others) and for a maximum service life of your machine, do a pre-start inspection before starting the engine.

- a If you haven't already done it, do a walkround inspection of the outside of the machine. See *before entering the cab* in operation section.
- b Remove dirt and rubbish from the cab interior, especially round the pedal and control levers.
- c Remove oil, grease and mud from the pedals and control levers.



WARNING

Keep the machine controls clean and dry. Your hands and feet could slide off slippery controls. If that happens you will lose control of the machine.

HOP44

- d Make sure that your hands and shoes are clean and dry.

BEFORE STARTING THE ENGINE - continued



WARNING

Loose articles can fall and strike you or roll on the floor. You could be knocked unconscious, or the controls could get jammed. If that happens you will lose control of the machine. HOP45

- e** Remove or secure all loose articles in the cab, such as lunch boxes, tools etc.
- f** Check round the cab for loose or missing bolts, screws etc. Fit new ones or tighten where necessary.
- g** Inspect the seat belt and its mountings for damage and excessive wear.
- h** Check that the following are in working order: Lights, Horns all Switches and Wiper.
- j** Check the excavator lever gaiters are not damaged or loose, replace or secure as required with new fasteners.

3 Adjust the Seat

Adjust the seat so that you can comfortably reach all driving controls. You should be able to operate the control pedal with your back against the seat back.

Ensure the seat locking lever has engaged fully.


4 Set the hand Throttle Lever

Set the hand throttle lever to idle.

B46

OPERATION

B46

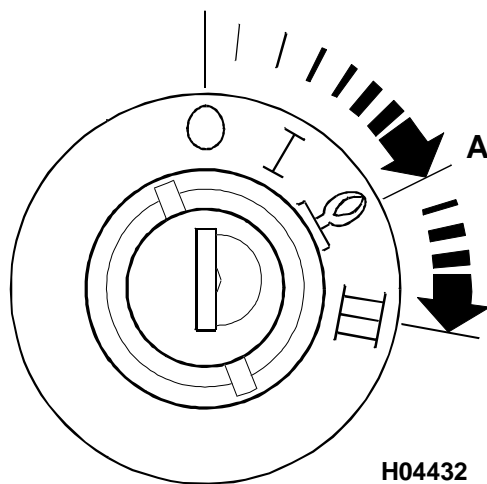STARTING THE ENGINE

STARTING THE ENGINE

1 Start the engine

Move the throttle lever to the half speed position. Turn the starter key to the glow plug position **A** for approximately 6 seconds (Fast Start Glow plugs), to warm the engine combustion chambers.

Note: *Outside temperatures below 0°C (32°F) will require extended times.*

Turn the starter key further to position **III** and hold it there until the engine starts; do not exceed 20 seconds. If the engine does not start, turn the starter switch to position **A** and repeat step 1.

2 Check the indicators

CAUTION

Once the engine has started, move the throttle lever to the idle position. Check that all the warning lights have gone out. Do not race the engine until the oil pressure low light has extinguished.

If any indicator fails to extinguish, or if they illuminate while the engine is running, make the machine safe, stop the engine and investigate the cause. HOP46

3 Warm up the engine and hydraulics


Allow the engine to warm up at idle speed for five minutes. If the engine has been jump-started, remove the booster cables (see jump starting the engine). Operate the excavator a few times to help warm up the hydraulic system.

B48

OPERATION

B48

JUMP STARTING THE ENGINE

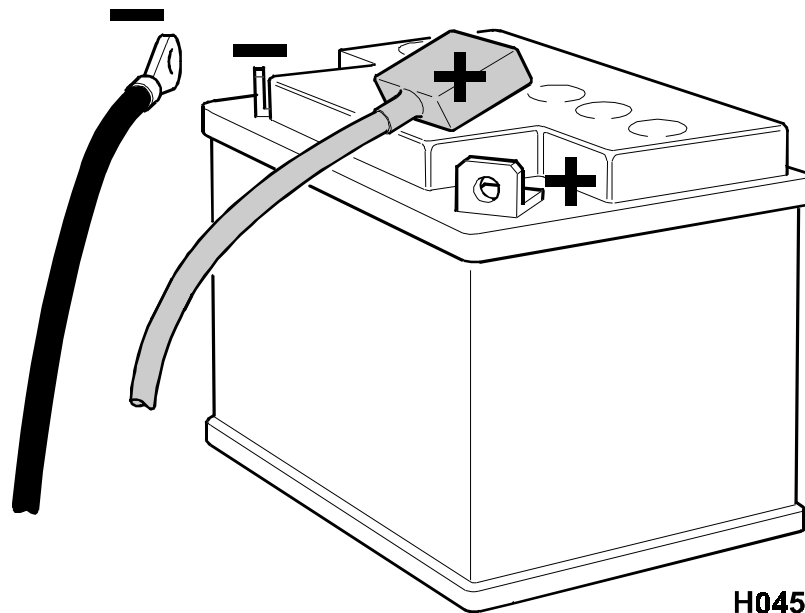

H04551

JUMP STARTING THE ENGINE

Note: Read battery pages in section C of this handbook before carrying out any work with the battery.

Follow the instructions on this and the following page to start the engine using booster cables. Your machine has a 12V starting system. The negative (-) terminal on the battery is connected to frame earth.



WARNING

If you try to charge a frozen battery, or jump start and run the engine, the battery could explode.

Do not use a battery if its electrolyte is frozen. To prevent the battery electrolyte from freezing, keep the battery at full charge.



WARNING

Before lowering the attachments to the ground make sure the machine and the area around it are clear of people. Anyone on or close to the machine could fall and be crushed by the attachments, or get caught in the linkages. HOP43

1 Lower the Attachments to the Ground

Lower the excavator bucket and dozer to the ground, if they are not already there. They will lower themselves under their own weight when you operate the control. Operate the control carefully to control the rate of descent.

2 Set all switches in the cab to 'OFF'

CAUTION

The booster supply should not be higher than 12V. Using a welder or higher voltage supply will damage your machine's electrical system.

CAUTION

Do not connect two batteries together to give 24V. This could burn out the glow plugs and damage the starter motor.

3 Gain access to the battery

- a Open the toolbox and undo the bolt which clamps down the battery.
- b pull the battery out until it is clear of the toolbox door.

JUMP STARTING THE ENGINE - continued

4 Connect the Booster Cables

- a Connect the positive booster cable to the positive (+) terminal on the machine battery. Connect the other end of this cable to the positive (+) terminal of the booster supply.
- b Connect the negative (-) booster cable to a good frame earth on the machine, away from and below the battery.

Note: A good frame earth is part of the machine frame, free from paint and dirt. Do not use a pivot pin for an earth.

- c Connect the other end of this cable to the negative (-) terminal on the booster supply.

5 Do the pre-start checks

See before starting the engine

6 Start the engine - see starting the engine

7 Disconnect the Booster Cables

- a Disconnect the cable from the machine frame earth, then disconnect it from the booster supply.
- b Disconnect the positive booster cable from the positive (+) terminal on the battery, then disconnect it from the booster supply.

8 Refit items removed to gain access to the battery.



WARNING

Keep metal watch straps and any metal fasteners on your clothes, clear of the positive (+) battery terminal. Such items can short between the terminals and nearby metal work. If this happens you can get burned. Make sure that the fuel filler cap is tightly fitted. Make sure that all spilt fuel is cleaned away from the battery area.

HOP48

COLD CLIMATE WARM UP

Before starting work in temperatures below -15°C, hydraulic fluid must be warmed.

1 Warm up Engine

After starting the engine (see starting engine) set the throttle lever to mid position and run for 10 minutes.

DO NOT operate any services. After the warm up period make sure that everyone is clear of the machine.

2 Warm up Hydraulic Oil

- a Increase engine speed to maximum. Warm the hydraulic oil by repeatedly selecting bucket crowd by moving the right hand lever to the left for 5 seconds. Repeat for several minutes.
- b Select dozer up by moving dozer control lever backwards, keep selected for one minute.

3 Warm up Hydraulic Circuit

- a Reduce engine speed by moving throttle lever to mid position.
- b Raise and lower boom from ground level to full height five times.
- c Stroke the dipper fully in both directions, five times
- d Rotate the bucket fully in both directions, five times
- e Slew the upper structure clockwise for one revolution and stop. Slew the upper structure anti-clockwise for one revolution and stop.
- f Repeat step 3c three times

- 4 The machine should now operate correctly. Should operation still appear slow, then steps 3b and 3c may be repeated.

OPERATING IN LOW TEMPERATURES

In low temperature situations, take the following precautions. They will make for easier starting and prevent possible damage to your machine

- 1 Use the correct viscosity engine lubricating oil**
See fluids and lubricants - Capacities and Specifications in Maintenance section
- 2 Use a low temperature diesel fuel, if available.** See fuel system in Maintenance section
- 3 Use the correct coolant mixture**
See Coolant Mixture in Maintenance section
- 4 Keep the battery at full charge**
- 5 Fill the fuel tank at the end of each work period**
- 6 Protect the machine when not in use**
Park the machine inside a building or cover it with a tarpaulin.

7 Install cold weather starting aids

In very low temperatures, say -18°C and below, additional starting aids may be needed. Examples are fuel, oil and coolant heaters and extra batteries. Ask your JCB Dealer for advice

Note: *Do not connect two batteries in series to give 24 volts for starting. This could burn out the glow plugs and starter motor.*

8 Remove snow from around the engine cover before starting

Otherwise snow could get into the air filter.

OPERATING IN HIGH TEMPERATURES

In high temperature situations, take the following precautions to prevent possible damage to the machine.

1 Use the correct viscosity engine oil

See Fluids and Lubricants-Capacities and Specification in Maintenance section.

2 Use the correct coolant mixture

See coolant mixtures in Maintenance Publication

3 Check the coolant system regularly

Keep the coolant at the correct level. Make sure there are no leaks.


4 Keep the radiator/oil cooler clean

Regularly remove dirt and debris from between the radiator /oil cooler and the engine.

5 Check ventilation grilles

Ensure the ventilation grilles to and from the engine compartment are not blocked.

STOPPING AND PARKING THE MACHINE

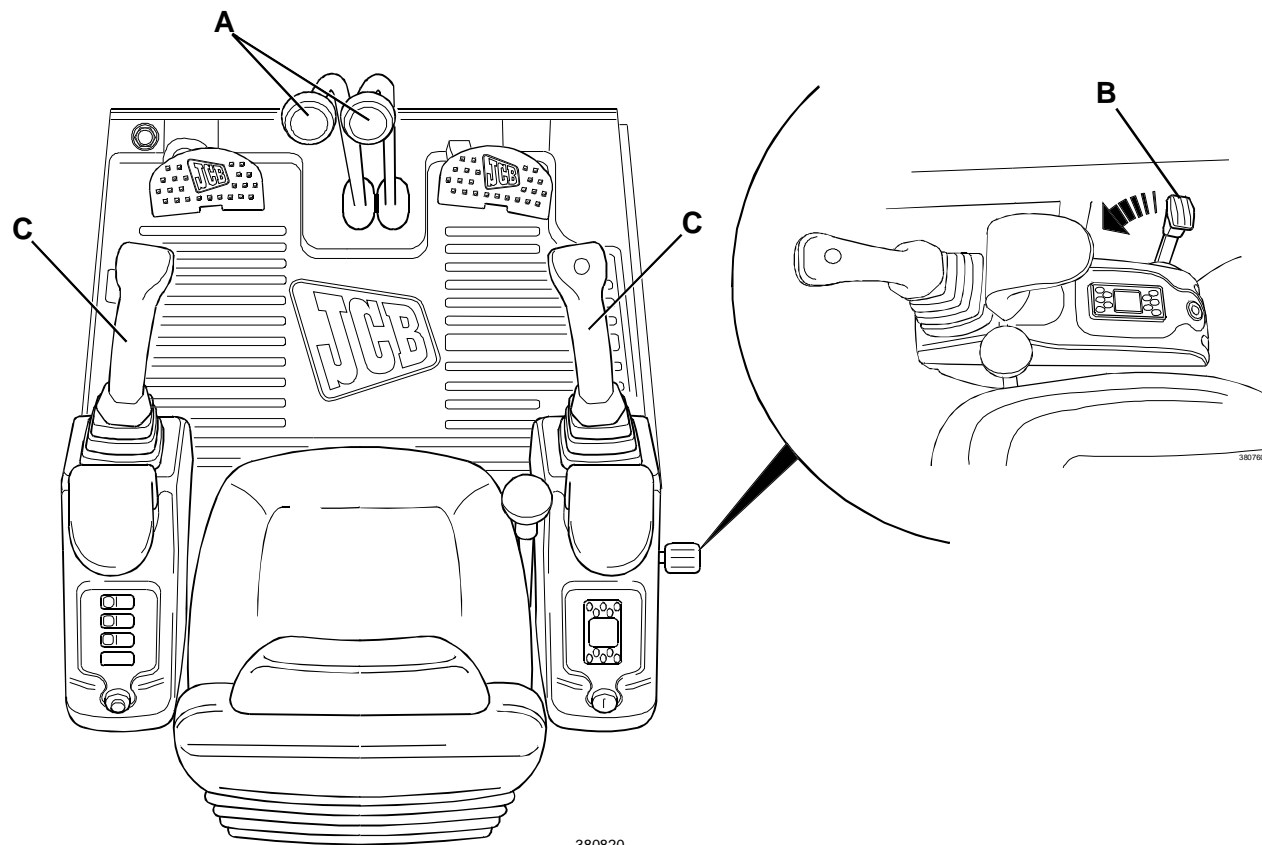

STOPPING AND PARKING THE MACHINE



WARNING

Low speed must always be selected when unloading the machine from a vehicle or tracking down steep slopes. The machine will take longer to stop when the levers are released if high speed is selected. 0076

Whenever possible, stop the machine on dry and level ground.

1 Stop the machine

Release the two track levers **A** then push the hand throttle lever **B** to the idle position.

2 Lower the bucket and dozer to the ground.

3 Retract the extending undercarriage

4 Stop the engine

5 Vent the hydraulic system

Note: *Servo machines retain hydraulic pressure in an accumulator which must be vented when leaving the machine.*

Servo machines: Stop engine and reset ignition key to position **I**.

Non-servo machines: Stop the engine

All machines: Operate the control levers **C** to vent the hydraulic system residual pressure.

6 Remove the starter key

Ensure the waterproof cover is closed on canopy machines.

7 Switch off all unnecessary switches

If you are leaving the machine, make sure that all switches are set to off.





WARNING

Ensure that the excavator is in a safe condition HOP49

8 Leave and secure the machine

Raise the left armrest or engage the lever lock(s). Use the handrail to leave the cab. If you are leaving the machine for a long period, close and latch the window and lock the door. Make sure that the fuel filler cap is locked.

PREPARING FOR SITE TRAVEL

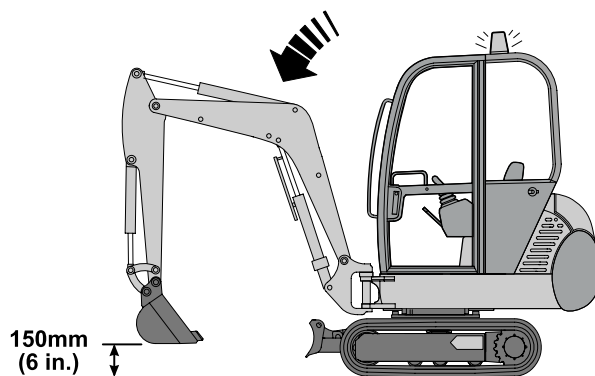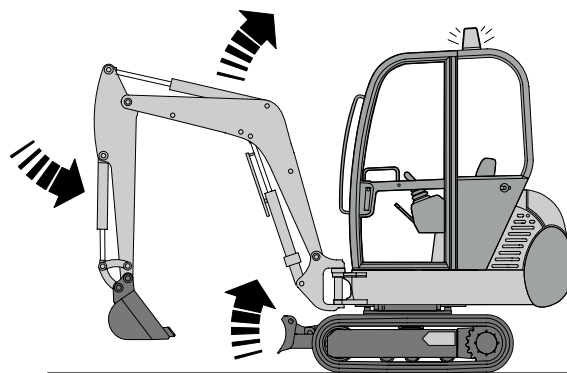

PREPARING FOR SITE TRAVEL



CAUTION

Always travel the machine with the excavator positioned at the same end as the dozer, especially on hard and rocky ground.

Travelling Position (Level Site Conditions) (Activate warning beacon if fitted)

Cab facing forward over dozer, excavator as shown, dozer blade fully up.

Position boom fully up, operate dipper fully in and bucket fully crowded, i.e. bucket rotated fully towards cab.

Travelling Position (Uneven Site Conditions) (Activate warning beacon if fitted)

Lower the boom so that the bucket or attachment is approximately 150mm (6in) from the ground.

GETTING THE MACHINE MOVING

After you have warmed up the engine, move off as described below. Read Operating Hints and Warnings first.

Operating Hints

The machine does not have gears. Do not overwork the engine unnecessarily. Operate at an engine speed suitable for the duty being carried out.

Note: *Too low an engine speed may result in lack of dipper control.*

When moving the machine, keep it under control at all times. Stay alert for obstructions and possible hazards. Approach deep mud slowly.



WARNING

You and others could be killed or injured if you reverse direction on the move, because the change in direction will be sudden and without warning to others.

Always stop the machine and drop engine speed to idle before changing from forward to reverse or vice versa. HOP51

1 Check your seat

Make sure that the seat is secure and correctly adjusted.

2 Cab Slew Lock

Make sure that the cab slew lock is disengaged and the slew switch is pressed.

3 Start the Engine

See starting the engine in Operation section

4 Move the machine

- a Check that the attachments are in the travel position. Make sure that it is safe to move off.
- b Take hold of both track control levers in one hand.
- c Move the levers forward or backward as required and pull the throttle lever slowly backward until the desired speed is attained.
To increase tracking speed operate the two speed tracking switch. See 'Engine and Track Controls' page.

JCB Hammermaster 100 breaker


8013/8015/8017 Engine Speed

Set the throttle to maximum position **A**.

8018 engine Speed

The engine speed when using the breaker must be reduced by 300-350 rpm from the max setting.

Set the engine running at full throttle **A**. Slowly push the throttle forward until a change in engine speed is heard. Move the throttle further forward **B** approximately 30mm. The throttle is now set at the correct speed.


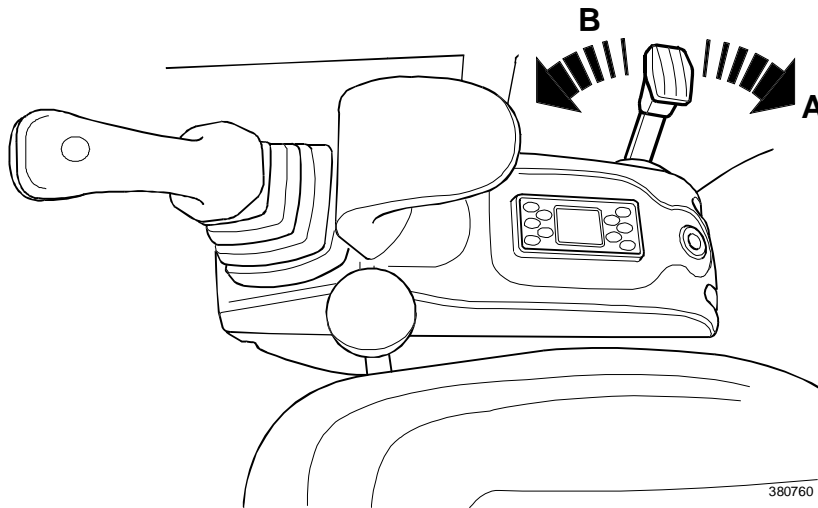


B60

OPERATION

B60

WORKING WITH THE DOZER

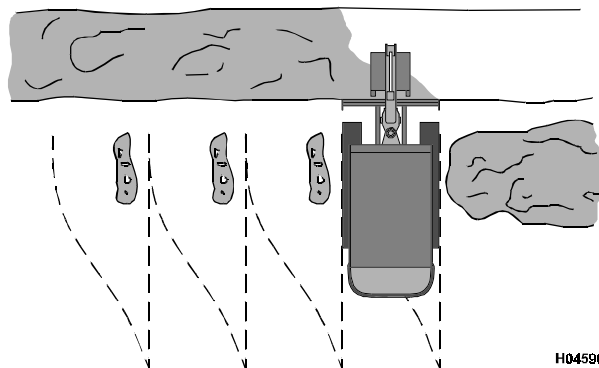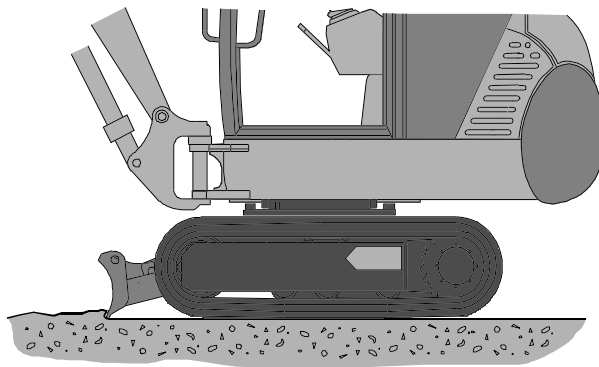

H04590

WORKING WITH THE DOZER

Remember that you will be driving the machine while you are using the dozer. Keep alert for bystanders, animals and possible hazards.

Ensure the slew lock is engaged when working with the dozer.

Dozing and Grading

Keep the bottom of the dozer parallel to the ground. When grading a site remove high spots first, then use this soil to fill in troughs. Do not use excessive downward pressure on the dozer or machine traction could be lost. When working with the dozer, set the excavator straight with the machine, as for road travel. Keep the dozer high when travelling as this increases the machines ground clearance.

Scraping and Cutting


If a deep cut is to be made, do it in steps of about 50mm (2in). Do not forget to adjust the dozer height when the machines tracks enter the cut.

Backfilling

When backfilling on a slope, pile the material on the high side of the trench whenever possible.

Set the dozer level to the ground. Work at right angles to the trench filling a dozer's width at a time. Leave any spillage until the trench is filled. Use the spillage to finish the job by driving the length of the trench with the dozer low to the ground.

WORKING WITH THE EXCAVATOR

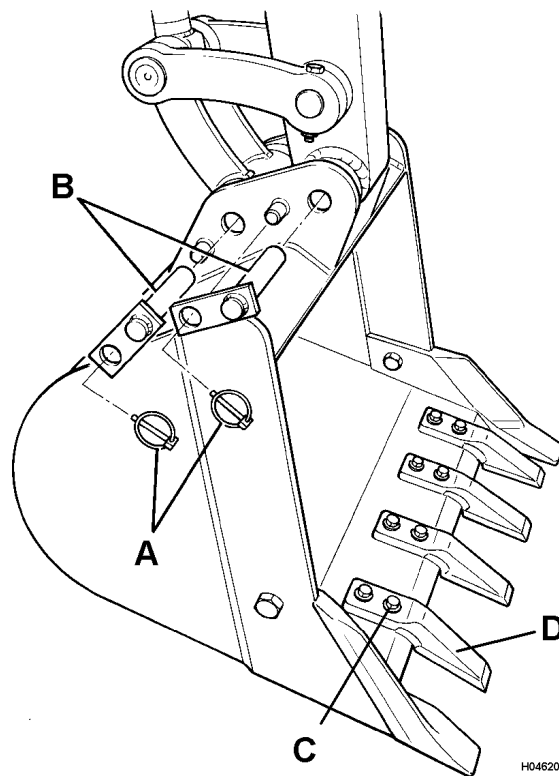

H04620

WORKING WITH THE EXCAVATOR

Installing a Bucket - non Quickhitch models (See Bucket Selection)

Note: *This job is easier done by two people - one to operate the controls and one to line up the pivots.*

1 Position the Bucket

Set the bucket flat on level ground, using a suitable lifting device.



WARNING

DO NOT use your fingers through the holes to align the links HOP65

2 Engage the Dipper

If necessary move the machine to align the pivot pin holes. Carefully align the holes in the dipper and bucket link with the bucket. Fit the pivot pins **B** and lynch pin **A**.

Replacing Bucket Teeth

1 Position the Bucket

Make sure that the bucket is resting flat on the ground.

2 Switch off the Engine


Remove the starter key.

3 Remove a Tooth

Remove the nut and bolt **C** and the tooth **D**.

4 Install a Tooth

Position the tooth **D** and fit the bolts **C**.

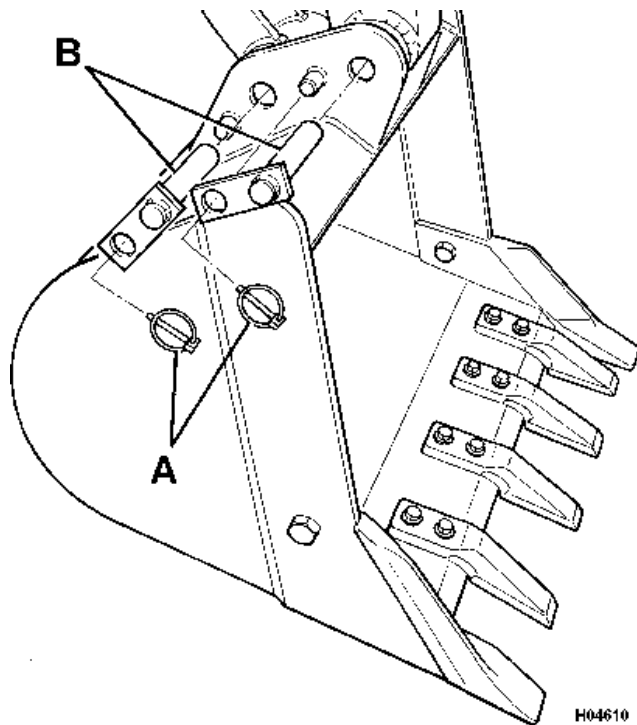WORKING WITH THE EXCAVATOR - continued

H04610

WORKING WITH THE EXCAVATOR - continued

Bucket Selection



WARNING

The bucket selected should be the correct width to suit the hole/trench to be excavated. However, if the hole width demands the larger bucket, consideration should be given to the density/weight of the material to be moved affecting the stability of the machine especially if working on a slope. If there is danger of the machine's stability being compromised, then select a smaller bucket or reposition the machine. Use the 300mm (12 in.) wide bucket for narrow excavations or for maximum penetration when digging in hard, rocky or clay soils. Larger buckets are ideally suited to bulk shifting light or loose materials.

Removing a Bucket - non Quickhitch models

1 Position the Boom

Slew the boom so that it is straight in front of the machine. Rest the bucket on level ground, with the dipper approximately vertical and the bucket flat to the ground. Block the bucket to prevent its movement.



WARNING

Stand clear and to one side of the bucket while the pivot pins are removed: the bucket could roll over.

HOP63

2 Detach the Bucket

Remove the lynch pin **A** and the pivot pins **B**.



WARNING


If two people are doing this job, make sure that the person working the controls is competent. A person can be killed or seriously injured if the controls are moved violently or incorrectly.

HOP64

3 Withdraw the Dipper

Using the controls, carefully lift the dipper clear of the bucket.

WORKING WITH THE EXCAVATOR - continued

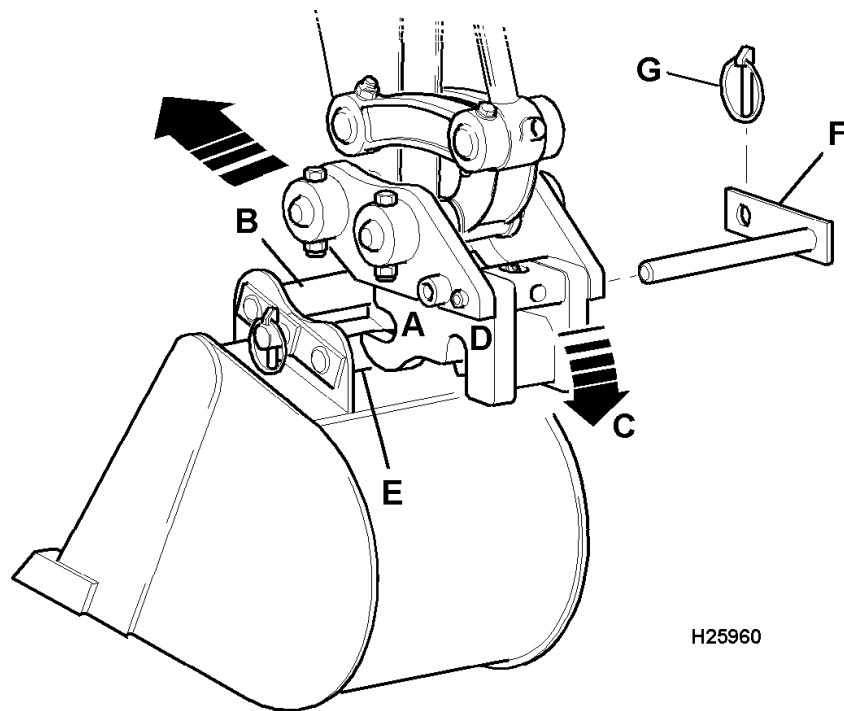

H25960

WORKING WITH THE EXCAVATOR - continued

Installing a Bucket on a Quickhitch

(See Bucket Selection)

1 Position the Bucket

Set the bucket on firm level ground. Use safe and correct lifting equipment to move the bucket .

2 Position the Machine

- a Position the machine so that the Quickhitch and bucket are correctly aligned for connection as shown.
- b Use the excavator controls to engage jaw **A** of the quickhitch with the pivot pin **B** of the bucket .
- c Use the excavator controls to roll the Quickhitch in the direction of arrow **C** until the latch hook **D** has fully engaged the pivot pin **E** on the bucket . Due to the light weight of some bucket it may be necessary to apply a load on the bucket teeth to achieve Quickhitch connection.
Alternatively, use the tommy bar to lever the latch off, allowing the attachment pivot pin **E**, to locate in jaw **D** of the Quickhitch.

CAUTION

Make sure that the latch hook has fully engaged.

2-4-4-3

- d Fit the latch hook locking pin **F** and secure with lynch pin **G**.



WARNING

Always fit the Quickhitch latch hook locking pin. Failure to fit the pin will result in possible failure of the latching mechanism. Such a failure would result in the sudden release of an attachment from the machine, you or others could be killed or seriously injured.

CAUTION



When the Quickhitch is installed and its attachment fitted, there is a danger of the attachment hitting the underside of the boom. Operate the boom and dipper carefully when the Quickhitch and its attachment are fitted. 2-4-4-2

B68

OPERATION

B68

WORKING WITH THE EXCAVATOR - continued

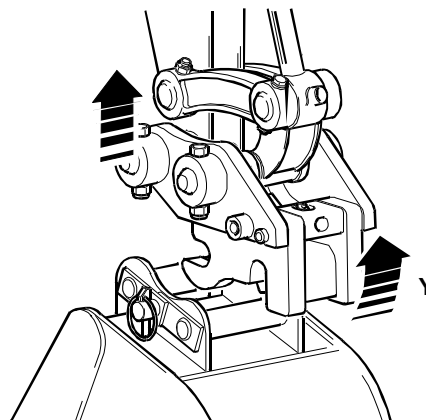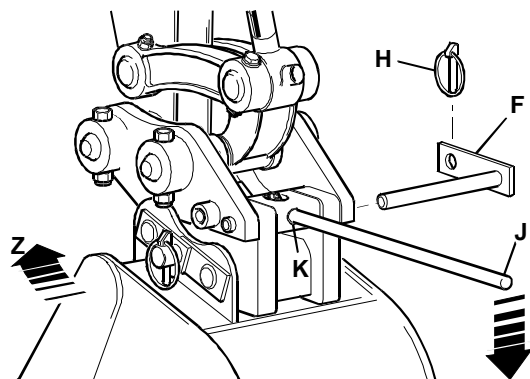

H25970

WORKING WITH THE EXCAVATOR - continued

Removing a Bucket from a Quickhitch

Note: *Deposit Quickhitch attachments on firm level ground whenever possible. This will make later refitting easy and safe.*

- 1 Park the machine on firm level ground.
- 2 Position the bucket so that it is approximately 150mm (6 in) above the ground.



WARNING



The attachment will roll forward when released. Stand clear and to one side when releasing the attachment. 2-4-4-1

- 3 Remove lynch pin **H**, and locking pin **F**.
- 4 Insert the tommy bar **J** into the hole **K** of the latch hook.
- 5 Apply a downward pressure on the bar to release the buckets' rear pivot pin from the latch hook, as shown at **Z**. Remove the tommy bar from the Quickhitch.

- 6 Rest the bucket on the ground.
- 7 Slowly roll the Quickhitch back and simultaneously raise the dipper arm to release the buckets' front pivot pin, as shown at **Y**.

Note: *Quickhitch procedure applies to most attachments. See your attachments instructions for specific procedures.*

WORKING WITH THE EXCAVATOR - continued

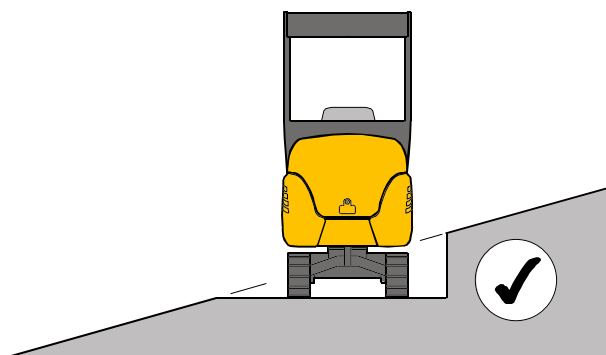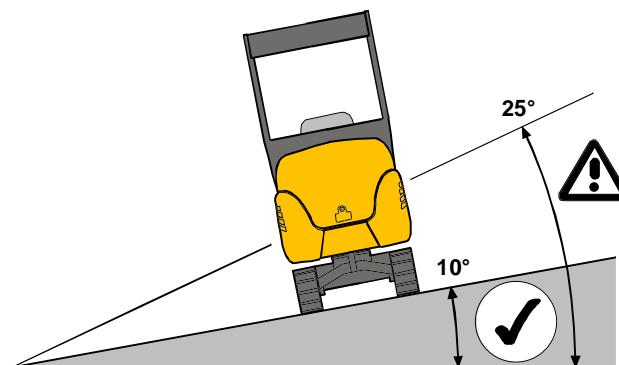

WORKING WITH THE EXCAVATOR - continued

Working on Slopes



WARNING

Failure to observe these precautions may cause the machine to become unstable and in extreme circumstances will overturn with potential serious injury to the operator. HOP64




CAUTION

When excavating on level ground, the dozer may be positioned at either end of the machine to improve stability. Always lower the dozer blade to the ground.

The machine can operate without detriment to its systems on inclines of up to 25°. However, on slopes greater than 10° the operator must use his discretion and proceed with extreme caution.

When working on inclines, position the dozer for maximum stability. This may mean the dozer and the boom are at the same end of the machine, especially if digging down hill, lower the dozer sufficiently to bring the machine level. If necessary, to prevent an instability problem, cut a level platform for the machine to stand on.

WORKING WITH THE EXCAVATOR - continued

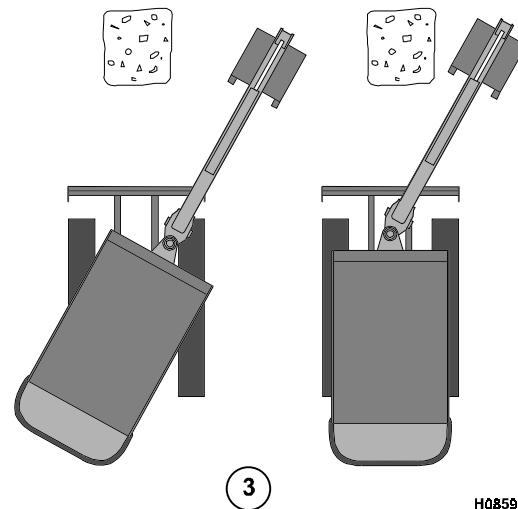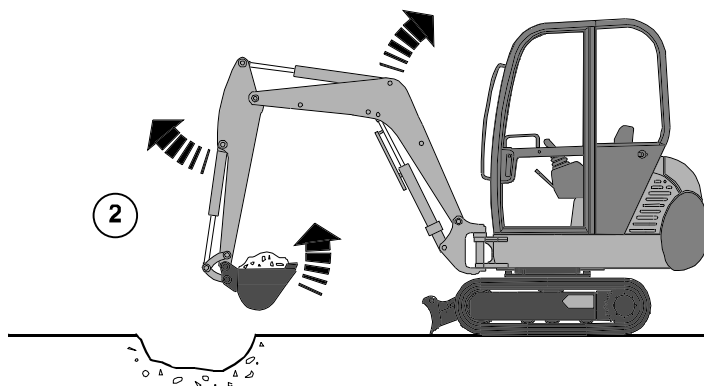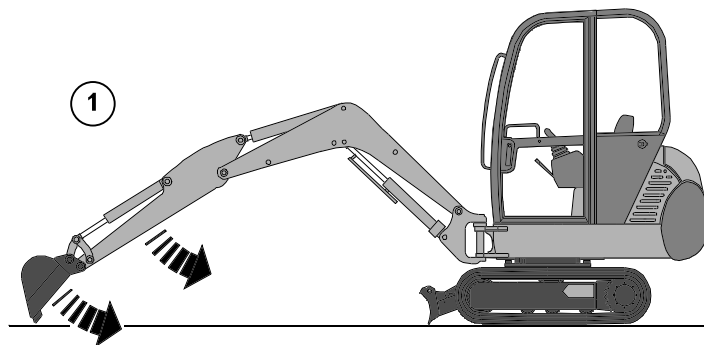

H08590

WORKING WITH THE EXCAVATOR - continued

Digging

It is possible when excavating, to use either full machine slew when discharging a loaded bucket, or if conditions dictate, swinging the excavator end only to the required dumping area.

- 1 To start the dig, reach out with the boom and dipper and position the bucket as shown.

Slowly close the bucket at the same time bring the dipper in. Make sure the bucket stays at the same angle to the ground while it travels. If necessary, at the same time apply a downward pressure on the boom, to increase the digging force on the bucket.

- 2 When the bucket is full, close it fully and at the same time move the dipper out a little way. This will keep soil from building up under the machine.
- 3 Slew the machine or swing the bucket to the dump area.

Start dumping as the bucket approaches the pile. Do not waste time by dumping too far from the excavation. Dump close to the start dig position. Swing the bucket back to the excavation and start the next dig.

CAUTION

Do not use the side of the excavation to stop the bucket. This could damage the machine and cause the sides of the trench to collapse.

Backfill the excavation by loading the bucket with soil from the pile. Do not push the soil with the side of the bucket.

Note: Take extra care if extended swing is utilised (see Excavator Controls - Extended Operation).

WORKING WITH THE EXCAVATOR - continued

Moving the machine while digging on the level



When digging a trench or hole which is longer than the excavator's reach, dig to the required depth and width **A** until it is not possible to dig any closer without contacting the machine.

When this position is reached, move the machine a suitable distance away from the excavation.

Lower the dozer blade until the machine is level, then continue digging **B**.

Tracking on uneven ground

As for the travelling position, except that the bucket should be lowered to approximately 150 mm (6 in.) above ground.

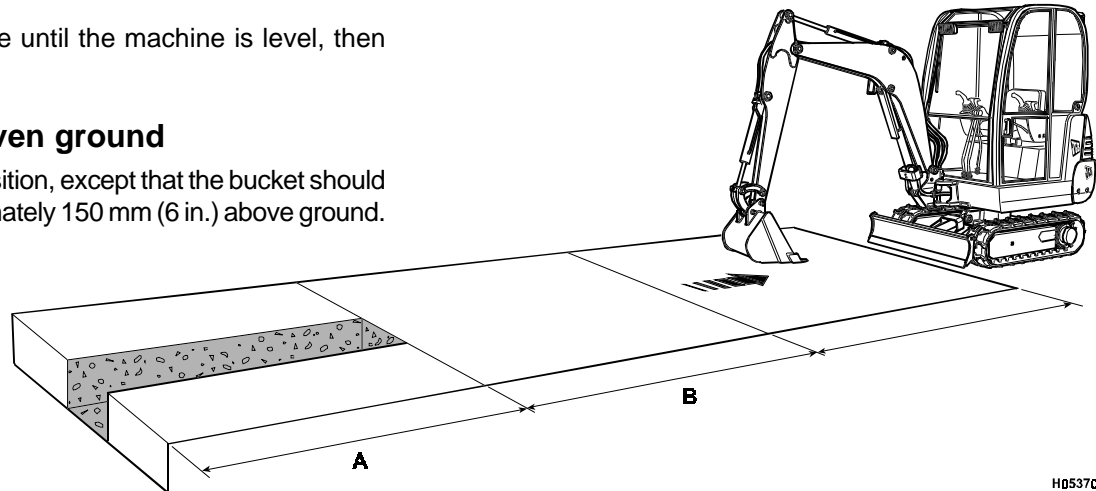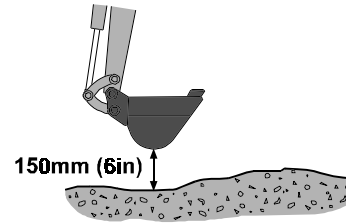

WORKING WITH THE EXCAVATOR - continued

Digging near walls



WARNING


When digging near a wall, take care not to undermine the foundations. The wall could collapse.

HOP66

Position the machine close to the wall as shown. Set the machine at an approximate angle of 45° to the wall.

Digging up against obstructions

- 1 Swing left or right as required
- 2 Position the machine so that the bucket is up against the obstruction when fully slewed.
- 3 When slewing away from the obstruction the rear of the machine may contact the obstruction if care is not taken.

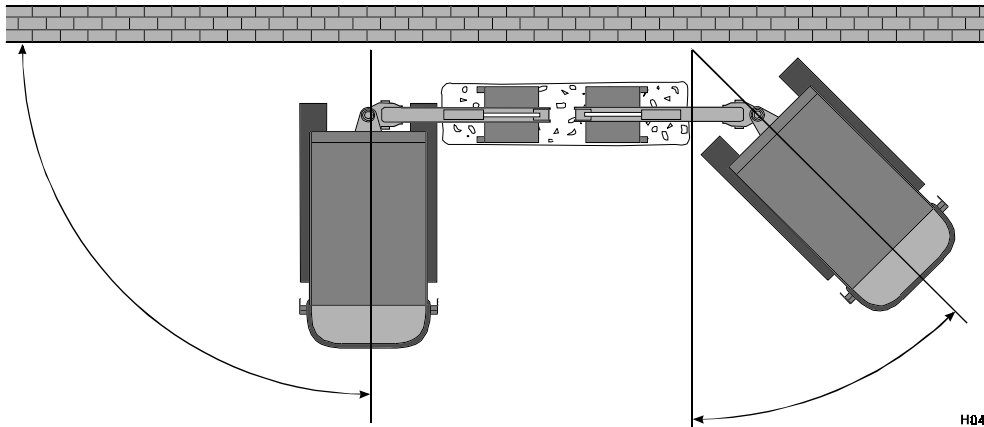

H04640

WORKING WITH THE EXCAVATOR - continued

Lifting (Craning) Regulations and Safe Working Loads

Lifting Regulations


The factories Act Construction (Lifting Operations) Regulations 1961 defines 'Excavators' as 'Lifting Appliances'. As such the JCB Mini Excavators are subject to these regulations.

The owner and/or operator must make sure that he fully understands the laws and regulations concerning the use of the JCB Excavator. Consult your JCB dealer for further information.



WARNING

Do not use the Excavator as a 'Crane'. Consult National Lifting Regulations.

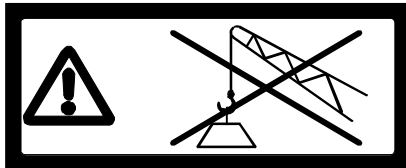

H19950

Safe Working Loads



WARNING

The safe working load indicated on lifting accessories such as cranes etc. is not the safe working load of the machine.

When lifting loads (stones, soil etc.), the excavator must be fitted with a bucket and the load must be contained within the bucket. Never use the excavator as a crane.

The maximum load which may be lifted depends on the equipment fitted to the excavator and the laws and regulations in force at the time and in the country in which the excavator is being used.

If your machine is equipped to be operated under 'Exemption Certificate' rules, your Exemption Certificate will specify the Safe Working Loads.

Note: *In certain countries Safety Regulations in force call for the application of specific safety factors. Consult your dealer for information.*

USING THE ATTACHMENTS AND SITE SAFETY

This section explains some techniques for efficient and safe use of the machine and its attachments. Attention is also drawn to the various safety aspects of operating on site. Read and understand this section before you start working with the machine. Practice using the attachments until you are completely familiar with the controls and what they do.

Before using the attachments, study the lifting and digging diagrams in the Specification section of the maintenance publication.

Before you start using the machine, tell your workmates what you will be doing and where you will be working. On a busy site, use a signalman.

Remember that your machine is mobile. Whenever possible, manoeuvre your machine into a position which combines safety with efficiency. If you have to choose remember that

SAFETY MUST COME FIRST!

Choose the correct attachment for the job. Do not use an oversize bucket for rocky material. It could overload the system and shorten service life.



WARNING

General site safety

Before you start using this machine, inspect the job sites. You could be killed or injured if the ground gives way under your machine or if piled material collapses onto it. Check for potholes and hidden debris, logs, ironwork etc. Any of these could cause you to lose control of your machine.

HOP52

CAUTION

Legal liability

You and/or your company could be legally liable for any damage you cause to public utilities. Make sure that you know the locations of all public utility cables or pipes on the site which could be damaged by your machine.

HOP53



WARNING

Electrical power cables

You could be electrocuted or badly burned if you get the machine or its attachments too close to electrical power cables.

You are strongly advised to make sure that the safety arrangements on site comply with the local laws and regulations concerning work near electric power lines.

HOP54

USING THE ATTACHMENTS AND SITE SAFETY - continued



WARNING

Underground gas pipes

Before you start using the machines, find out from your local gas company if there are any buried gas pipes on the site. Some modern gas pipes cannot be detected by metal detectors. So it is essential that you get an accurate map of buried gas pipes before you begin any excavation work.

Hand-dig trial holes to obtain precise pipe locations. If you find any cast iron pipes, assume they are gas pipes until you can prove otherwise.

Older gas pipes can be damaged by heavy vehicles driving over this ground above them. Mechanical digging must not take place within 500mm (20in) of a gas pipe. Leaking gas is highly explosive.

If a gas leak is suspected, contact the local gas company immediately and warn everyone on the site. Ban smoking, ensure that all naked lights are extinguished and switch off any engines which may be running.

You are strongly advised to make sure that the safety arrangements on site comply with the local laws and regulations concerning work near buried gas pipes. HOP57



WARNING

Buried electric power cables

Before you start using the machine, check with your electricity supplier if there are any buried power cables on the site. HOP55



WARNING

Overhead electric power cables

There is a minimum clearance required for working beneath overhead power cables. You must obtain details from your local electric company. HOP56

USING THE ATTACHMENTS AND SITE SAFETY - continued



WARNING

If you will be working with a labourer, make sure that you both understand what each other will be doing. Learn and use the recognised signalling procedures. Do not rely on shouting he will not hear you! HOP58

CAUTION

Do not travel with the track motors leading, particularly on hard and rocky ground. The recoil units will not absorb the shocks and damage could result to the track running gear.

Do not excavate on hard or rocky ground with the boom positioned diagonally across the undercarriage. This can produce a rocking motion that could cause damage to the track gearbox sprockets. HOP59



WARNING

Hill sides

Operating on hillsides can be hazardous, especially moving across a slope. If the slope is too steep, your machine could roll over. If you must drive across a slope keep the attachments close to the ground. Remember that loose surface material and mud will change the ground conditions. In any event do not drive across a slope of greater than 17 deg. HOP60



WARNING

Reworking old sites

There could be hazardous materials such as asbestos, poisonous chemicals or other harmful substances buried on the site. If you uncover any containers or if you see any signs of toxic waste, stop the machine and inform the site manager immediately.



WARNING

Water supplies and drains

Before you start using the machine, check with your local public water company if there are buried pipes and drains on the site. If there are, obtain a map of their locations and follow the advice given by the water supplier. You are strongly advised to make sure that the safety arrangements on site comply with the local laws and regulations concerning work near buried water pipes and drains.


HOP62

B80

OPERATION

B80

ATTACHMENTS

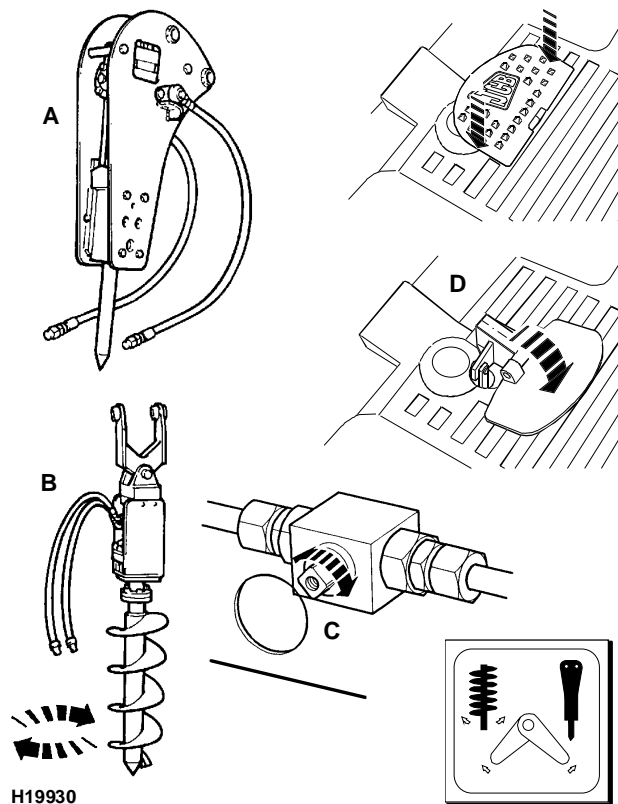

ATTACHMENTS

There are two types of hydraulic attachment circuits available. Single acting or double acting. Both types are operated by a floor mounted pedal.

Single Acting Circuit

This type powers a dipper mounted breaker **A**.

Double Acting Circuit

This type powers reversible attachments such as an auger **B**. The double acting circuit can be switched to single acting operation by means of a valve **C** located in the side skirt. Rotate the valve fully anti-clockwise for single acting operation or fully clockwise for double acting operation.

Operate the pedal in the required direction for correct tool operation.





In non-operating conditions the pedal must be locked in position **D**.

B82

OPERATION

B82

USING THE ATTACHMENTS

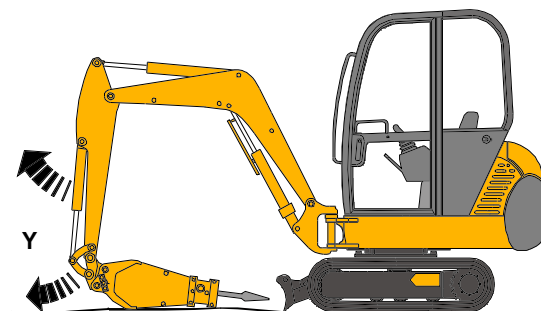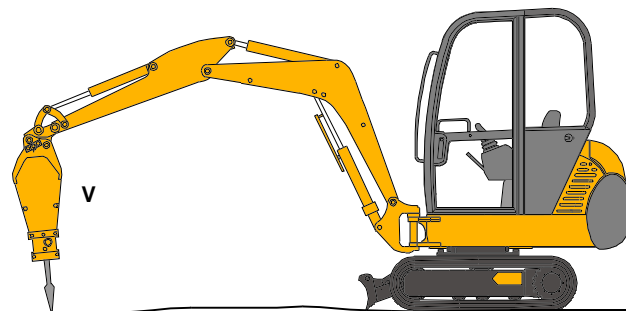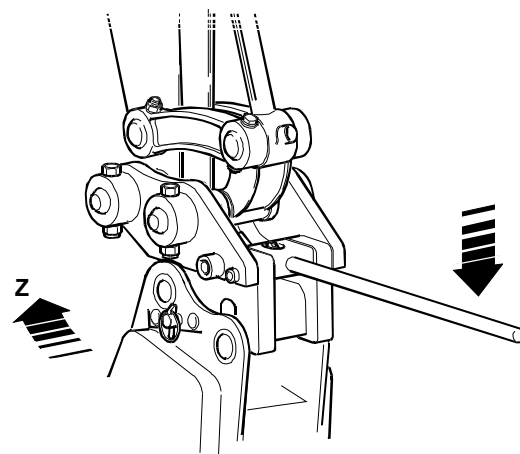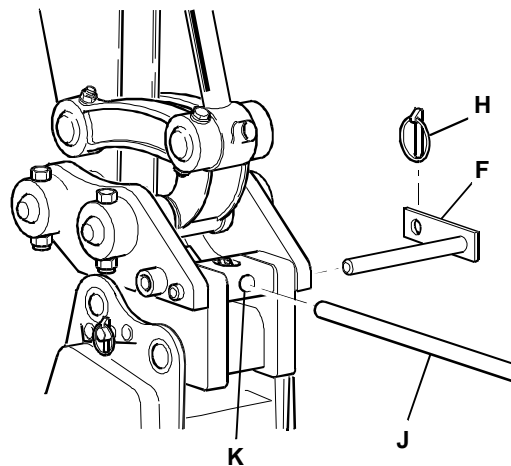

H26690

USING THE ATTACHMENTS - continued

Removing a Quickhitch Rockbreaker

Note: *Deposit Quickhitch attachments on firm level ground whenever possible. This will make later refitting easy and safe.*

- 1 Park the machine on firm level ground.

CAUTION

The rockbreaker must be positioned correctly before attempting to release it from the quickhitch. if incorrectly positioned, the rockbreaker could swing or fall suddenly from the machine when releasing the quickhitch latch hook.

- 2 Position the rockbreaker just clear of the ground and at an angle such that the rockbreaker does not detach from the front pivot pin when the Quickhitch is unlatched. Typically shown at **V**.

WARNING

Hydraulic Fluid

Fine jets of hydraulic fluid at high pressure can penetrate the skin. Do not use your fingers to check for hydraulic fluid leaks. Do not put your face close to suspected leaks. Hold a piece of cardboard close to suspected leaks and then inspect the cardboard for signs of hydraulic fluid. If hydraulic fluid penetrates your skin, get medical help immediately. INT-3-1-10/1

- 3 Stop the Engine.
- 4 Operate the auxiliary attachment control pedal, this will release any hydraulic pressure trapped in the system.
- 5 Disconnect the hydraulic hoses.

WARNING





The attachment will roll forward when released. Stand clear and to one side when releasing the attachment.

B84

OPERATION

B84

USING THE ATTACHMENTS - continued

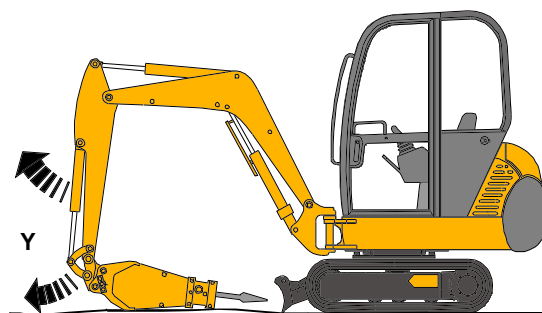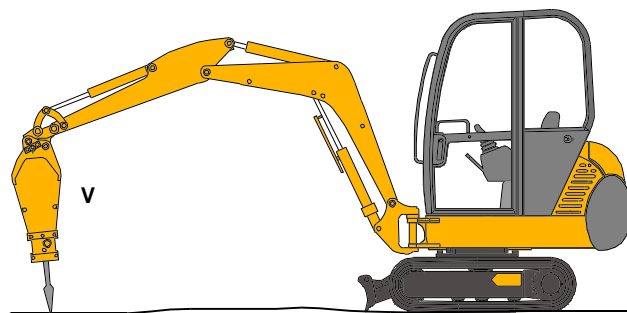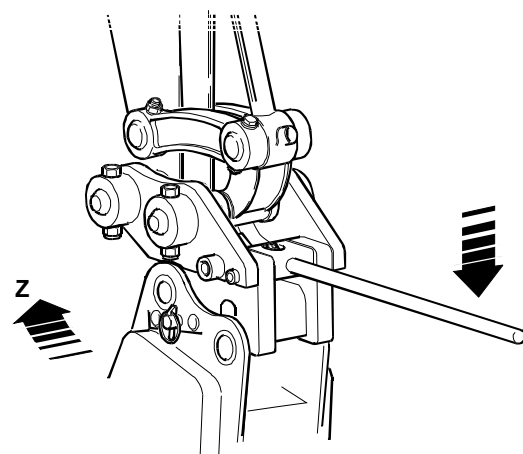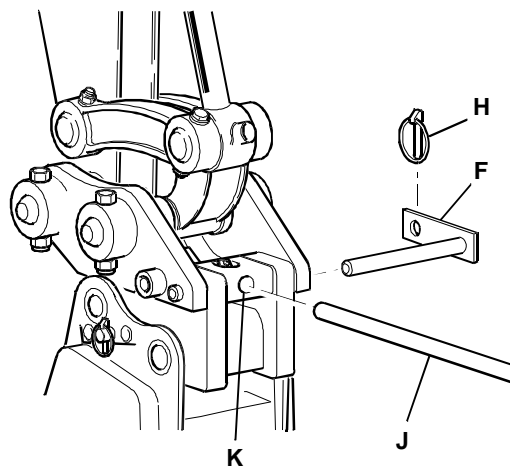

H26690



USING THE ATTACHMENTS - continued

Removing a Quickhitch Rockbreaker - cont.

- 6 Remove lynch pin **H**, and locking pin **F**.
- 7 Insert the tommy bar **J** into the hole **K** of the latch hook.
- 8 Apply a downward pressure on the bar to release the rockbreakers' rear pivot pin from the latch hook, allowing the attachment to swing forward as shown at **Z**. Remove the tommy bar from the Quickhitch.
- 9 Refit the locking pin **F** and lynch pin **H**. Failure to refit the pin will result in the rockbreaker re-latching as it is lowered to the ground. Make sure that the hydraulic hoses do not become trapped under the attachment.
- 10 Start the engine and carefully lower the attachment to the ground as shown at **Y**.
- 11 Slowly roll the Quickhitch back and simultaneously raise the dipper arm to release the rockbreakers' front pivot pin, as shown at **Y**.
- 12 Remember to remove the lynch pin **H** and locking pin **F** before fitting another attachment.

Installing a Quickhitch Rockbreaker

Procedure is as installing a bucket

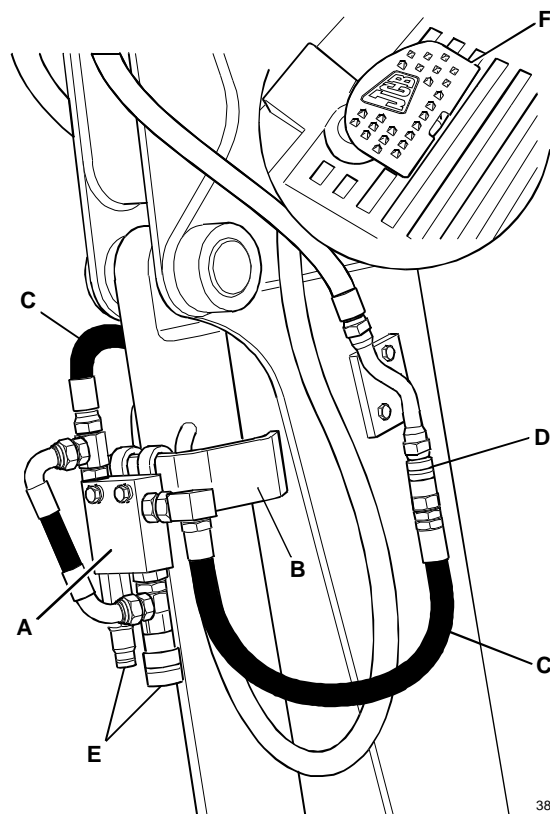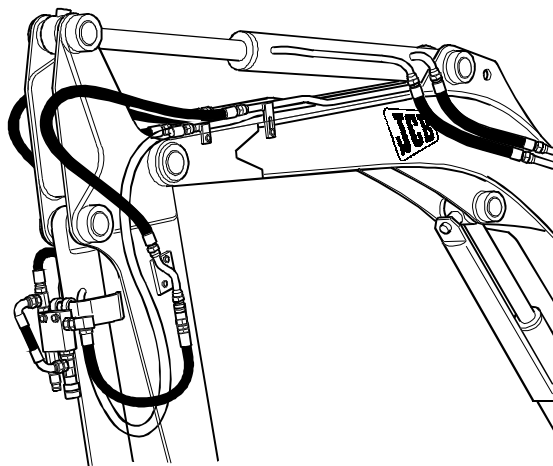USING THE ATTACHMENTS - continued

USING THE ATTACHMENTS - continued

Using Hand Held Tools

Hand held tools operate from the machines auxiliary circuit via a valve **A**.





WARNING

Hydraulic Fluid

Fine jets of hydraulic fluid at high pressure can penetrate the skin. Do not use your fingers to check for hydraulic fluid leaks. Do not put your face close to suspected leaks. Hold a piece of cardboard close to suspected leaks and then inspect the cardboard for signs of hydraulic fluid. If hydraulic fluid penetrates your skin, get medical help immediately. INT-3-1-10/1

- 1 Stop the Engine.
- 2 Operate the auxiliary attachment control pedal, this will release any hydraulic pressure trapped in the system.
- 3 Attach the valve **A** to the valve support bracket **B**.
- 4 Connect the hydraulic hoses **C** to the auxiliary connectors **D**, making sure they are clean.
- 5 Connect the hand held attachment to the connectors **E**, making sure they are clean.
- 6 Lock the auxiliary pedal **F** in the operating position.

MOVING A DISABLED MACHINE

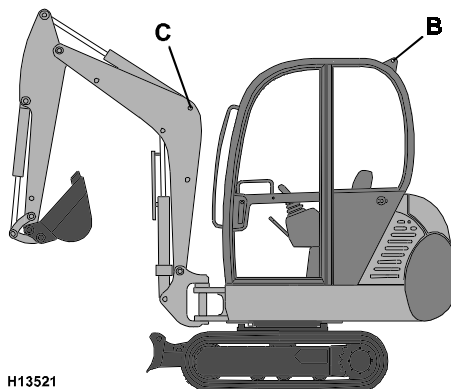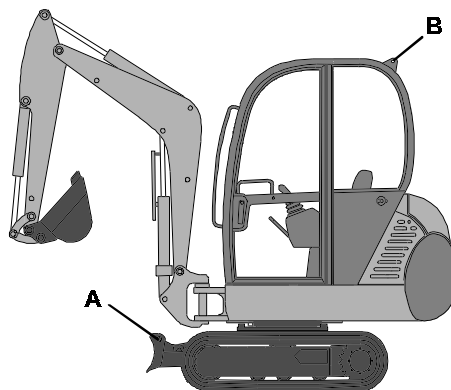

MOVING A DISABLED MACHINE

CAUTION

Do not tow a disabled machine. Permanent damage to the track motors will occur if the machine is towed.

HOP68

If the machine becomes disabled, it must not be towed or otherwise moved on its tracks. The machine should be made safe, lifted onto a transporter and moved to a location where maintenance can be carried out.

Equipment used must be capable of lifting 3.2 tonne.

Lifting points have been provided on the machine as follows:-

- 1 On each end of the dozer blade at points **A**.
- 2 On each side of the cab roof at points **B**.
- 3 On each side of the boom at points **C** and may be used as a four point lift :- **A & B** or **C & B**

CAUTION

Do not lift the machine by the extended dozer, remove the extensions before lifting. Ensure the lifting slings do not interfere with the top of the cab, damaging the top glazing. It may be necessary to remove the FOGS guard.

When the machine is totally disabled, the boom should be set to the fully raised position and lifted using the cab/boom lifting points.

TRANSPORTING THE MACHINE

Preparing for road travel

Before loading the machine on to its trailer (see transporting the machine), remove all loose dirt that may otherwise come off and obstruct the highway and damage other vehicles.

Note: *Before transporting the machine make sure you will be obeying the local rules and laws regarding machine transportation of all the areas that the machine will be carried through.*

Make sure that the transporting vehicle is suitable. See Maintenance section for the dimensions and weight of your machine. There is a travel height label fitted to the cab.

Try to make sure that the truck driver knows the clearance height before he drives away. See section D for machine height figures.

Note: *The transport position height does not include the truck/trailer height, add the two figures together for the clearance height.*

CAUTION

Make sure that the two speed tracking selector is set to low speed before loading or unloading the machine.

TRANSPORTING THE MACHINE

Before using the trailer



WARNING

Before moving the machine onto the trailer, make sure that the trailer and ramp are free from oil, grease and ice. Remove oil, grease and ice from the machine tracks. Make sure the machine will not foul on the ramp angle. HOP69



WARNING

The safe transit of the load is the responsibility of the transport contractor and driver. Any machine, attachment or parts that may move during transit must be adequately secured. 5-2-5-3


- 1 Remove any dirt or debris from the trailer.
- 2 Check the operation of the parking brake.
- 3 Check the trailer bodywork for signs of damage.
- 4 Check the tyre pressures are correct (consult the Manufacturer's handbook).
- 5 Check the lights are working and are the correct voltage for the towing vehicle (consult the Manufacturer's handbook).
- 6 Check the breakaway cable is serviceable.

B92

OPERATION

B92

SECURING THE MACHINE

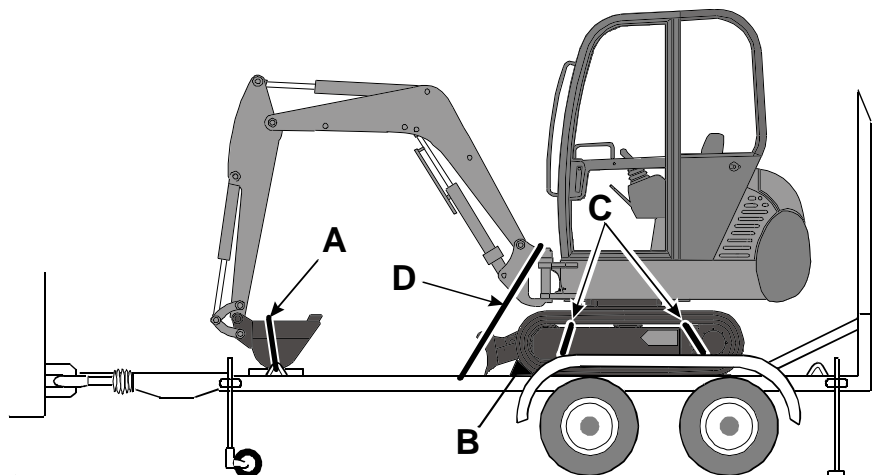

H13530

SECURING THE MACHINE



WARNING

The machine must be securely tied down to the trailer to prevent lateral movement, fore-and-aft movement, and slewing of the superstructure. Failure to do so could cause injury to yourself or others.

- 1 Engage slew lock. Ensure by operating the slew control that the slew lock is engaged.
- 2 Close the bucket. Position the dipper vertically and lower the boom until the bucket rests on a wooden block on the trailer bed.
- 3 Position a wire rope **A** of suitable breaking strain over the bucket and secure to the trailer shackles.
- 4 Place skids **B** under each track at front and rear to prevent movement of the machine in the fore-and-aft direction.
- 5 Position a wire rope **C** of suitable breaking strain around each track at front and rear and secure to the trailer shackles to prevent lateral movement of the machine.
- 6 Attach wire ropes **D** of suitable breaking strain to the kingpost and secure to the trailer shackles to prevent the superstructure from slewing.

CAUTION

Do not secure the wire ropes over the tracks. This will cut the rubber tracks and lead to instability on the transporter.

PREPARATION FOR STORAGE

The operations to place a machine into storage (-15°C to 44°C) are given below.

Note: *It is important to clean the undercarriage after working on muddy ground to prevent the build up of solidified mud affecting the moving parts of the extending/retracting undercarriage and ram.*

- 1** Park the machine safely with the bucket and dipper rams retracted and the dig end outstretched. Lower the boom until the bucket rests on the ground. Lower the dozer to the ground. Retract the extending undercarriage.
- 2** Switch off the engine. Operate controls to release pressure from the rams.
- 3** Disconnect battery to prevent discharge.
- 4** Ensure the fuel tank is filled to a maximum, leaving no air space.
- 5** Ensure hydraulic tank is filled to maximum on the sight gauge.
- 6** Spray exposed ram rods with Waxoyl.
- 7** Slacken off rubber tracks until no visible spring tension exists.

PREPARATION AFTER STORAGE

The operations to remove a machine from storage (-15°C to 44°C) and prepare it for use are given below.

- | | | | |
|----------|---|-----------|---|
| 1 | Lower the fuel level to ensure that sufficient air space exists in the tank. | 7 | Reconnect electrical supply to the fuel injection pump solenoid. |
| 2 | Check all oil and water levels, adjust contents to correct levels as necessary. | 8 | Start the engine. If the engine fails to start after several attempts, bleed the fuel system. |
| 3 | Ensure the battery is fully charged. | 9 | Adjust track tensions. |
| 4 | Reconnect battery. | 10 | Grease all lubrication points. |
| 5 | Remove electrical contact from fuel injection pump solenoid. | | |
| 6 | Crank engine for 20 seconds or until oil pressure warning light goes out. | | |

SERVICE CONTRACTS

To make sure your machine keeps working to maximum efficiency, it is essential that it is properly maintained in accordance with the Service Schedules included in this handbook.

We strongly advise you to take advantage of a regular service contract with your JCB dealer. Consult your dealer for full details.

LUBRICANTS - HEALTH AND SAFETY

It is most important that you read and understand this information and the publications referred to.

Hygiene

JCB Lubricants are not a health risk when used properly for their intended purposes. However, excessive or prolonged skin contact may cause irritation.

Whenever you are handling oil products you should maintain good standards of care and personal hygiene. For details of these precautions, read the relevant publications issued by your Local Authority.

Storage

Always keep lubricants out of the reach of children.

Never store lubricants in open or unlabelled containers.

Waste Disposal

All waste products should be disposed of in accordance with all the relevant regulations.

The collection and disposal of used engine oil should be in accordance with any local regulations. NEVER pour used engine oil into sewers, drains or on the ground.

Handling - used oil

Used engine oil contains harmful contaminants. Always observe the following precautions.

- 1 Avoid excessive skin contact with used engine oils.
- 2 Apply barrier cream before handling oils.
- 3 Note the following when removing oil from hands.
 - Wash thoroughly with soap and water using a nail brush.
 - Use special hand cleaners to move stubborn stains.
 - NEVER use petrol, diesel fuel or paraffin for washing.
 - Avoid skin contact with oil soaked clothing.
 - Don't keep oily rags in pockets.
 - Wash dirty clothing before reuse.
 - Throw away oil soaked shoes.

LUBRICANTS - HEALTH AND SAFETY

First Aid - Oil

Eyes

In the case of eye contact, flush with water for 15 minutes.
If irritation persists, get medical attention.

Swallowing

If oil is swallowed, do not induce vomiting. Get medical advice.

Spillage

Absorb with sand or approved absorbent granules. Scrape up and remove to a chemical disposal area.

Fires

Extinguish with carbon dioxide, dry chemical or foam extinguishers. DO NOT USE WATER. Breathing apparatus should be used.

MAINTENANCE SAFETY CHECK LIST



WARNING

Repairs

Do not try to do repairs or any other maintenance work you do not understand. Get a Service Manual from your JCB Dealer, or get the work done by the JCB Dealer's specialist engineer.



WARNING

Modifications and Welding

Non approved modifications can cause injury and damage. Parts of the machine are made from cast iron; welds on cast iron can weaken the structure and break. Do not weld cast iron. Contact your JCB Dealer before attempting any modifications.



WARNING

Metal Splinters

You can be injured by flying metal splinters. Use a soft faced hammer or drift when removing and fitting metal pins. Always wear safety glasses.



WARNING

Electrical Circuits

Understand the electrical circuit before connecting or disconnecting an electrical component. A wrong connection can cause damage and/or injury.



WARNING

Batteries

A frozen battery can explode if it is used or charged. Do not use a machine with a frozen battery. Batteries give off explosive gases. Keep flames or sparks away. Do not smoke. Make sure there is good ventilation when batteries are being recharged.

MAINTENANCE SAFETY CHECK LIST



WARNING

Petrol

Do not use petrol in this machine. Do not mix petrol with the diesel fuel; the petrol may rise to the top and form flammable vapours.



WARNING

Diesel Fuel

Diesel fuel is flammable; keep naked flames away from the machine. Do not smoke while refuelling. Do not leave the engine running while refuelling.



WARNING

Rams

The machines efficiency will be affected if the rams are not kept free of solidified dirt. When parking close all rams as far as possible to prevent weather corrosion.

SERVICE SCHEDULES - continued

Service Schedules

A badly maintained machine is a danger to the operator and the people working around him. Make sure that the regular maintenance and lubrication jobs listed in these Service Schedules are done to keep the machine working at its optimum efficiency.

Apart from the daily jobs, the schedules are based on machine running hours. Keep a regular check on the hourmeter readings to correctly gauge service intervals. Do not use a machine which is due for a service. Make sure any defects found during regular maintenance checks are rectified immediately.



WARNING

Maintenance must be done by suitably qualified personnel. Before attempting any maintenance work, make sure that the machine is safe. Park on a level site and lower the bucket and dozer to the ground.

Every 10 Operating hours (or daily)

whichever occurs first

Clean

- 1 Machine generally

Check and Adjust where necessary (engine stopped)

- 2 Generally for damage
- 3 Hydraulic fluid level
- 4 Engine oil level
- 5 Engine coolant level
- 6 Fuel system for leaks
- 7 Operation of horn and all electrical equipment
- 8 Track adjustment

Check and Adjust where necessary (engine running)

- 9 Exhaust (excessive smoke)
- 10 Dozer operation
- 11 Excavator operation
- 12 Track and running gear operation
- 13 Hourmeter operation

Grease

- 14 All pivot pins

SERVICE SCHEDULES - continued

Every 50 operating hours (or weekly)**whichever occurs first**

Do the daily jobs plus:

Clean

- 1 Drain and clean fuel filter
- 2 Drain fuel sediment bowl
- 3 Radiator matrix

Check and Adjust where necessary (engine stopped)

- 4 Fan belt adjustment

First 100 hours only

Do the jobs listed in 100 hours (below) plus:

Change

- 1 Engine oil and engine oil filter
- 2 Check and adjust fan belt

Every 100 operating hours (or 2 weeks)**whichever occurs first**

Do the daily jobs through to 50 hours plus:

Clean

- 1 Battery terminals

Check and adjust where necessary (engine stopped)

- 2 Hose and pipework for security and damage
- 3 Condition of ram piston rods
- 4 All grease seals
- 5 Track plate condition/rubber condition
- 6 Engine mounting bolts
- 7 Air cleaner hose security
- 8 Wiring for damage
- 9* Track tension

First 250 operating hours

Do the jobs listed in 250 hours (below) plus:

- 1 Change track gearbox oil
- 2 Check torque setting of the Kingpost - kingpin retaining bolts 250 Nm (390 lbf/ft)

SERVICE SCHEDULES - continued
Every 250 operating hours (or monthly)**whichever occurs first**

Do the daily jobs through to 100 hours plus:

Change

- 1 Engine oil and engine oil filter canister

Grease

- 2 Slew ring grease nipples

Every 500 operating hours (or 6 months)**whichever occurs first**

Do the daily jobs through to 250 hours plus:

Clean

- 1 Fuel lift pump
- 2* Fuel injectors (and test)

Change

- 3 Fuel filter element
- 4 Hydraulic fluid return filter element
- 5 Air cleaner element (in very dusty conditions only)

Check and Adjust where necessary (engine stopped)

- 6 Exhaust system security
- 7* Tighten cylinder head bolts
- 8* Adjust valve clearances
- 9 Engine mounting bolts
- 10 Track gearbox oil levels
- 11 Clean fuel lift pump.
- 12 Remove under-carriage cover plates and pressure wash compacted debris from around the track wheel motors and with the undercarriage extended, from around the undercarriage sliding sections and extension ram.

Check and Adjust where necessary (engine running)

- 13* Main relief valve pressures
- 14* Auxiliary relief valve pressures
- 15* Servo relief valve pressures
- 16* Cross line relief valve pressure
- 17* Engine idle speed
- 18* Engine maximum speed

Note: Jobs which should only be done by a specialist are indicated by*

SERVICE SCHEDULES - continued
**Every 1000 operating hours (or yearly)
whichever occurs first**

Do the daily jobs through to 500 hours plus:

Change

- 1 Air filter element (outer)
- 2* Idler wheel and track rollers oil and seals
- 3 Track gearbox oil

Check

- 4 Cab mountings (for security)
- 5 Check security of all bolts retaining major assemblies, i.e. gearboxes (track and slew), slew ring, engine mountings, rotary joints etc.
- 6 Check and clean Air filter dust valve.

Grease

- 7 Slew ring pinion and slew ring gear teeth

Note: *Jobs which should only be done by a specialist are indicated by**

**Every 2000 operating hours (or 2 years)
whichever occurs first**

Do the daily jobs through to 1000 hours plus:

Change

- 1 Air filter element (inner)
- 2 Track gearbox oil
- 3* Hydraulic fluid and clean suction strainer
- 4 Engine coolant

Check (engine stopped)

- 5 Battery electrolyte level (low maintenance)
- 6* Valve clearance and lubrication
- 7* Starter motor and alternator brush gear
- 8* Inspect and renew the pump drive coupling

Note: *Jobs which should only be done by a specialist are indicated by**

CHECKING THE MACHINE

Checking for damage



WARNING

Do not remove the engine panels while the engine is running.



WARNING

A hot exhaust pipe will burn you. Take care when you remove the engine panels.

Inspect bodywork for damage. Note damaged paintwork for future repair.

Make sure all pivot pins are correctly in place and secured by their locking devices.

Check for broken or cracked window glass. Replace damaged items.

Check all bucket teeth for damage and security.

Check all lamp lenses for damage.

Check that all safety decals are in place and undamaged.

Fit new decals where necessary. See **Safety Decals** (Introduction section).

Cleaning the machine

Clean the machine using water and/or steam. If steam is used, the machine must be completely greased afterwards. See **Greasing** on the following pages.

Pay particular attention to the cab windows. Make sure that the radiator grill is not blocked.

Do not allow mud to build up on the tracks and running gear. See **Tracks and Running Gear**.

CHECKING THE MACHINE - continued

Checking the seat belt condition and security



WARNING

When a seat belt is fitted to your machine replace it with a new one if it is damaged, if the fabric is worn or if the machine has been in an accident. Fit a new seat belt every three years.

- 1 Inspect the seat belt for signs of fraying or stretching.
- 2 Check that the stitching is not loose or damaged.
- 3 Check that the buckle assembly is undamaged and works correctly.
- 4 Check that the seat belt mounting bolts are secure, undamaged, and correctly fitted.

Checking the Cab/Canopy Frame



WARNING


Modified and wrongly repaired cab frames are dangerous. Do not modify the cab frame. Do not attempt to repair the cab frame. If the cab frame has been in an accident, do not use the machine until the structure has been inspected and repaired. This must be done by a qualified person. For assistance, contact your JCB dealer. Failure to take these precautions could result in death or injury to the operator.

- 1 Check the cab/canopy frame for damage.
- 2 Check that all the mounting bolts are installed and undamaged.
- 3 Check that the bolts are tight.

C12

MAINTENANCE

C12

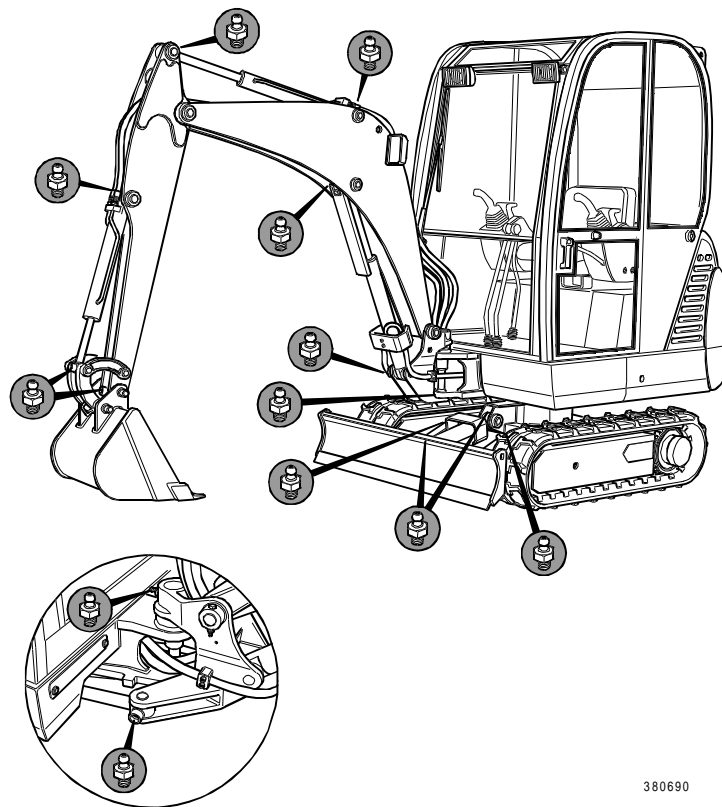GREASING

380690

GREASING - daily

You must grease the machine regularly to keep it working efficiently. Regular greasing will also lengthen the machine's working life.

Greasing should be done with a grease gun. Normally two strokes of the gun should be enough. Stop greasing when fresh grease appears at the joint.



WARNING

You will be working close in to the machine for these jobs. Lower the attachments to the ground if possible. Remove the starter key.


For the types of grease to use at each point see the **Lubricants and Capacities** chart at the end of the Maintenance section. Do not mix different types of grease, keep them separate.

Note: *Some optional attachments may need greasing more often. See **Optional Attachments**.*

C14

MAINTENANCE

C14

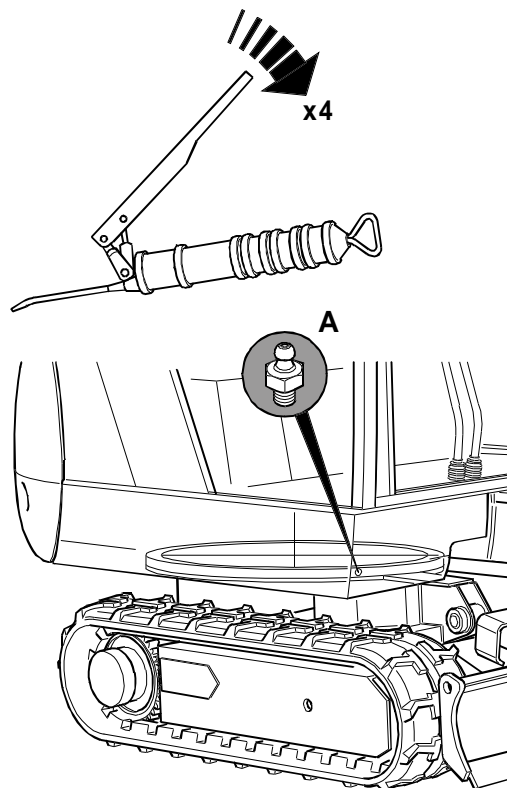GREASING - continued

380790

GREASING (every 250 hours)

Slew Ring Bearings



WARNING

Do not overgrease the slew ring as this will result in the displacement of the grease seal.

Ensure the slew ring is kept full of grease. With the cab in the straight ahead position as shown, the grease point **A** is located on the front of the slew ring.

To ensure full distribution of the grease, use the following procedure.


- 1 Grease in, using 4 strokes of the grease gun. Rotate 180°.
- 2 Grease in, using 4 strokes of the grease gun. Rotate 180°.
- 3 Grease in using 4 strokes of the grease gun.

C16

MAINTENANCE

C16

GREASING - continued

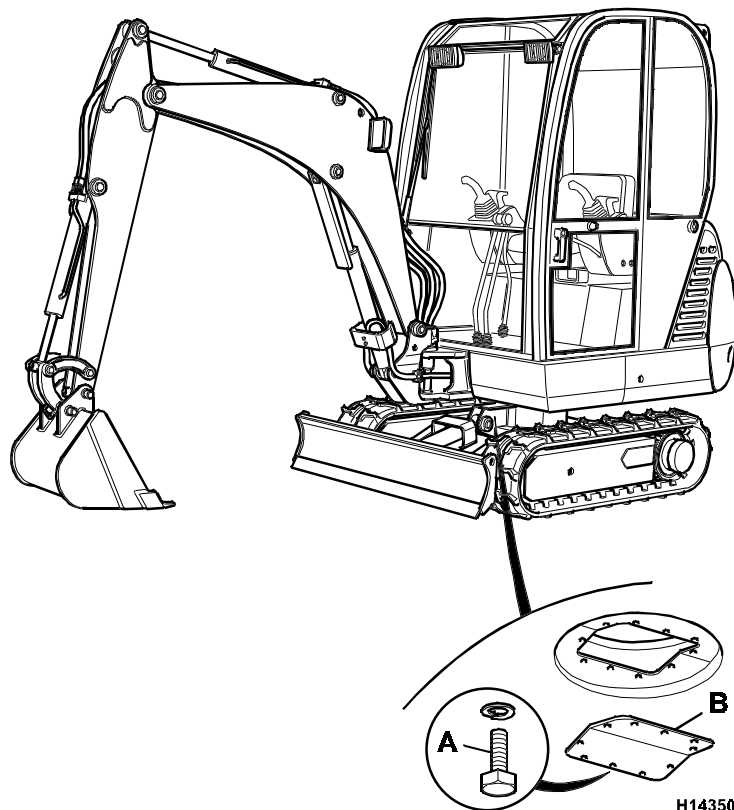

GREASING (every 1000 hours)

Slew Ring Gear Teeth



WARNING

JCB Slew Pinion Grease is harmful as it contains bitumen compounds 2811. Excessive contact may lead to dermatitis or skin cancer. Always use a barrier cream or wear gloves; wash contaminated skin thoroughly with soap and water. In the event of eye contact, immediately wash with plenty of water and seek medical advice.



WARNING

Soft Ground

A machine may sink into soft ground. Never work under a machine on soft ground.

Jacking

A machine can roll off jacks and crush you. Do not work under a machine supported only by jacks.


- 1 Raise the machine and support the undercarriage.
- 2 Stop the engine and remove the starter key.
- 3 Remove bolts **A** and plate **B** in the underside of the undercarriage.
- 4 Apply the grease to the pinion using the applicator (see Fluids, Lubricants and Capacities).
- 5 Start the engine and rotate the mainframe fully twice.
- 6 Stop the engine and remove the key.
- 7 Repeat step 4 as necessary.
- 8 Refit the plate **B** using bolts **A**.
- 9 Lower the machine to the ground.

C18

MAINTENANCE

C18

ENGINE AIR FILTER

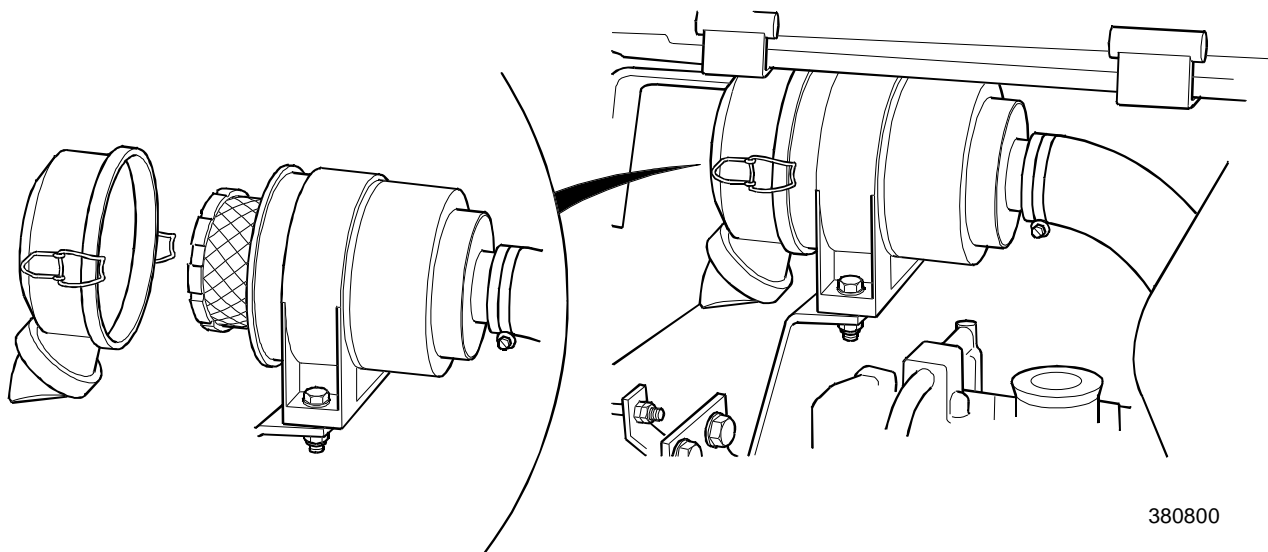

380800

ENGINE AIR FILTER

Changing the element



- 1 Stop the engine and remove starter key.
- 2 Raise the engine cover.
- 3 Undo the two retaining clips holding the cover and remove the element. Do not tap or knock the element as you remove it.
- 4 Clean the inside of canister and dust valve.
- 5 Prior to fitting new element, smear the seal on the end of the element with grease. Temporarily insert the filter element into the canister ensuring its correct location. Withdraw the element and check that there is a continuous grease witness mark around the base of the canister. This shows that the canister has not been distorted which would allow unfiltered air to bypass the element. Refit the element and cover. Check all air hoses for condition and security.

C20

MAINTENANCE

C20

ENGINE OIL

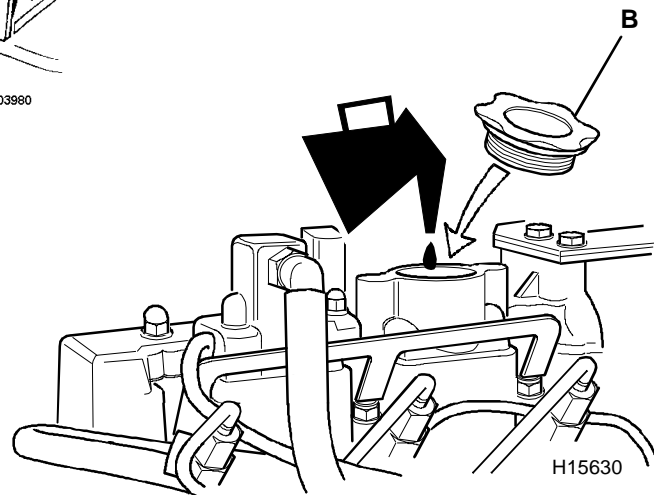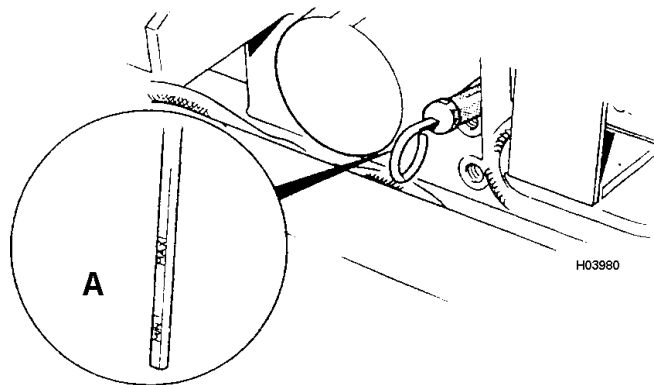

ENGINE OIL

Checking the oil level


- 1 Park the machine on level ground. Lower the excavator and dozer to the ground.
- 2 Stop the engine and remove starter key.
- 3 Raise the engine cover. Allow time for the oil to drain back into the engine sump before taking a reading. If insufficient time is given a false low reading may be recorded which will result in overfilling the engine.
- 4 Withdraw dipstick and wipe clean, re-insert fully into tube and withdraw to check level. The correct level will show the oil at the top of the hatched area of the dipstick **A**. If necessary add oil slowly through the filler **B**. Replace filler cap securely. Use only the recommended oil, see the Lubricants and Capacities chart at the end of this section.

C22

MAINTENANCE

C22

ENGINE OIL - continued

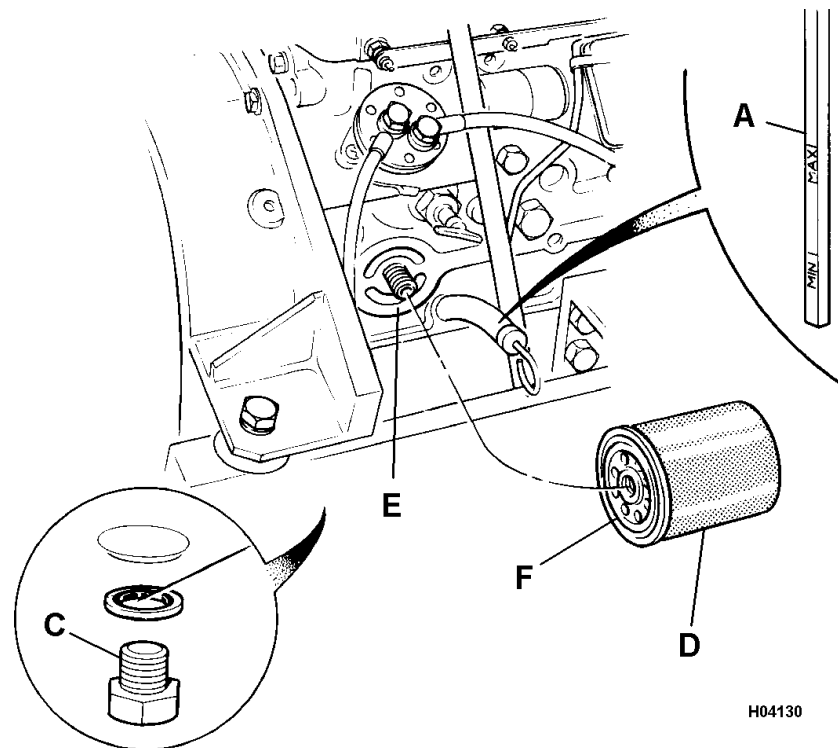

H04130

ENGINE OIL - continued

Changing the Oil and Filter

**WARNING**

Hot oil and engine components can burn you. Make sure the engine is cool before doing this job. Used engine crankcase lubricants contain harmful contaminants. In laboratory tests it was shown that used engine oils can cause skin cancer.

CAUTION

Keep your face away from the drain hole when removing the drain plug.

- 1 Place a container beneath the engine (to catch the oil), See the **Lubricants and Capacities** chart at the end of the Maintenance section for capacity. Remove the drain plug **C**. Let the oil drain out, then clean and refit the drain plug.

CAUTION

The oil filter canister will contain some oil which could spill out when you remove the canister.

- 2 Unscrew the filter canister **D**. If necessary use a chain or strap wrench. Clean the filter mounting face **E**. Smear the seal **F** on the new filter canister with oil. Screw in the new canister - hand tight and then one quarter turn.
- 3 Fill the engine with new oil through the filler. See **Lubricants and Capacities** chart at the end of Maintenance section for capacities and recommended oil grades.
Wipe off any spilt oil. Check for leaks.
Make sure that the filler cap is correctly refitted.

ENGINE COOLING SYSTEM



WARNING

The cooling system is pressurised when the coolant is hot. Hot coolant will burn you. Make sure that the engine is cool before checking the coolant level or draining the system.

Checking the coolant level

- 1 Park the machine on level ground, stop the engine and remove the starter key. Raise the engine cover and allow the engine to cool.
- 2 Carefully and slowly remove the radiator cap allowing any trapped pressure to escape.

Machines without an expansion bottle

- 3 The radiator coolant level should be 12mm (0.5in) below the filler neck. Top up if necessary with pre-mixed water and anti freeze.

Machines fitted with an expansion bottle

- 4 Top up the radiator if necessary with pre-mixed water and anti freeze. The expansion bottle should contain approximately 50mm of coolant when the radiator is cool.

5 Refit the filler cap making sure that it is tight

Note: *Water in the expansion bottle and not in the radiator indicates expansion bottle tube leaking or a non-sealing radiator pressure cap.*

COOLANT MIXTURES

The protection provided by typical antifreeze solutions is shown below as a guide. Refer to the manufacturer's instructions for temperatures relating to the type of antifreeze used. Make sure that a corrosion inhibitor is included.

Solution %	Starts to Freeze	
	°C	°F
15	- 8	17
25	- 12	10
33	- 19	- 2
50	- 36	- 33

Note: *In climates where antifreeze is not necessary, a reputable corrosion inhibitor must be used.*

Note: *A 50% antifreeze mixture is recommended even if frost protection is not needed. This gives protection against corrosion and raises the coolants boiling point.*


Note: *Check the quality of the antifreeze mixture every year, before the cold weather starts. Make sure it is changed every two years.*



WARNING

Ensure the antifreeze solution does not exceed 50%, overheating may result.

ENGINE COOLING SYSTEM - continued

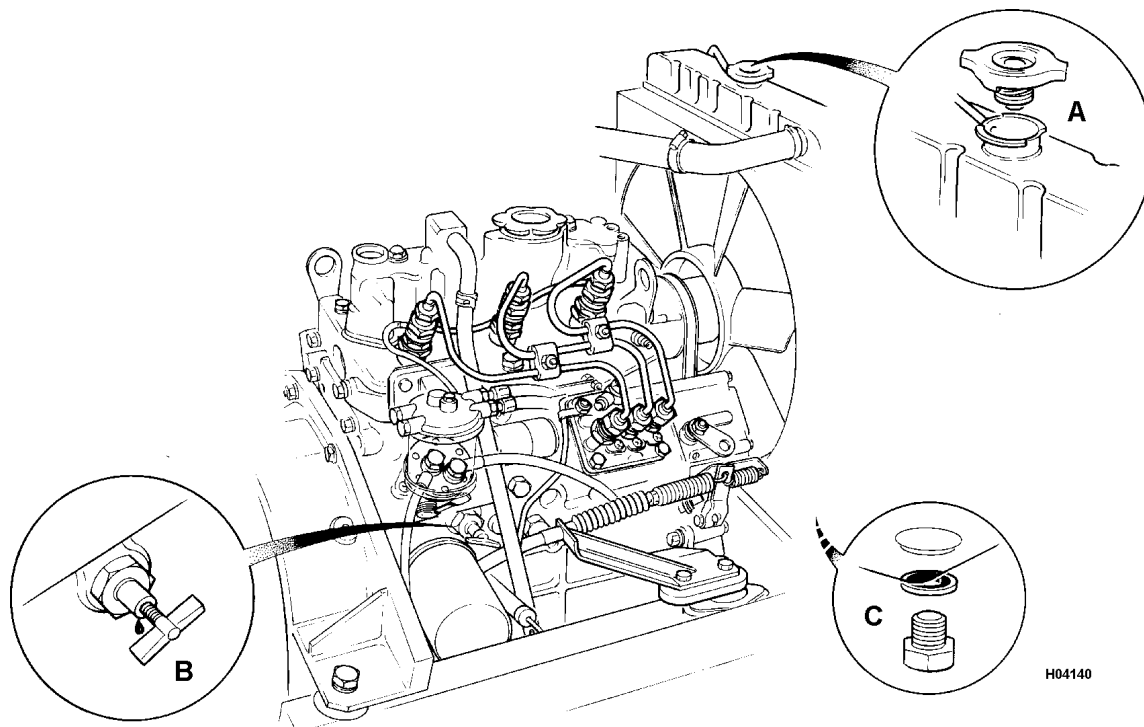

Note: The illustration shows a typical model; your machine may look different from the model shown.

ENGINE COOLING SYSTEM - continued


CAUTION

Keep your face away from the cylinder block tap and the radiator drain plug when you drain the system.

Changing the Coolant

- 1 Do steps 1 and 2 of "Checking the Coolant level"
- 2 Undo the speed plug **B** on the cylinder block and let the coolant drain out. Remove the radiator drain plug **C** and let the coolant drain out. Make sure the drain holes are not blocked.
- 3 Flush the system with clean water if necessary
- 4 Close the speed plug **B**. Make sure the drain plug **C** is clean and refit it. Make sure it is tight.
- 5 Fill the system. Use the correct mix of clean, soft water and anti-freeze (see Coolant Mixtures)
- 6 Refit the filler cap making sure that it is tight.
- 7 Run the engine for a while, to raise the coolant to working temperature and pressure. Stop the engine. Check for leaks.

ADJUSTING THE FAN BELT

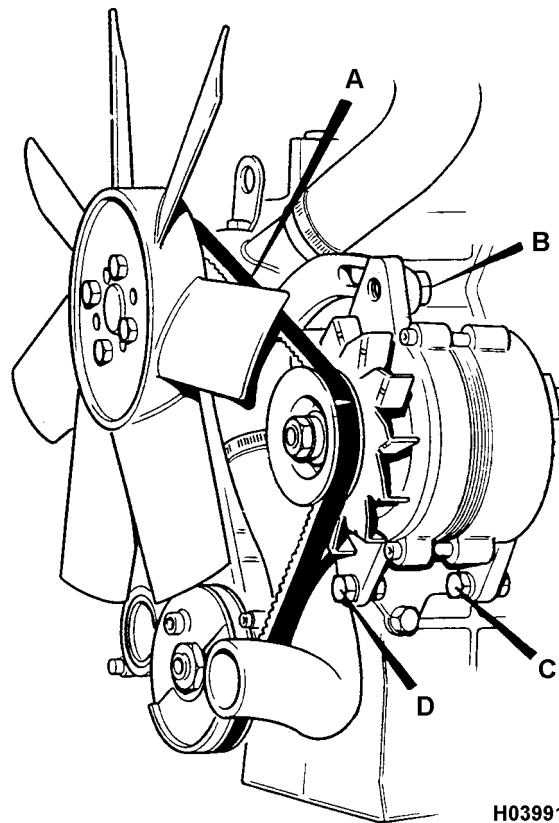

H03991

ADJUSTING THE FAN BELT



WARNING

Make sure that the engine cannot be started. Disconnect the battery before doing this job. 2-3-3-5

- 1** Raise the engine cover
- 2** Check that there is 5mm (0.2in) slack midway between the fan pulley and the alternator pulley.
- 3** If necessary loosen the alternator mounting bolts **B**, **C** and **D**.

IMPORTANT: Excessive fan belt slack may result in damage to the engine timing cover.

CAUTION

Any leverage required to position the alternator must be applied at the drive end only. Use only a wooden lever.

- 4** Position the alternator so that there is 5mm (0.2in) slack at point **A**.
- 5** Tighten the alternator mounting bolts in the order **B**, **C** and **D**.

FUEL SYSTEM



WARNING

Do not use petrol in this machine. Do not mix petrol with diesel fuel. In storage tanks the petrol could rise to the top and form flammable vapours.



WARNING

Diesel fuel is flammable. Keep flames away from the machine. DO NOT smoke while fuelling the machine or working on the engine. Do not refuel with the engine running. There could be a fire and injury if you do not follow these precautions.

INT-3-2-2

Filling the Tank

At the end of every working day, fill the tank with the correct type of fuel. This will prevent overnight condensation from developing in the fuel. Do not fill the tank completely, leave some space to allow the fuel to expand

We recommend that you lock the engine cover to prevent theft and tampering.

Advice

Use quality diesel fuel in order to obtain the correct power and performance from your engine. Cetane 45 (minimum)

If you have to use non-standard fuels contact your JCB dealer for advice on engine adjustment and oil change periods.


Consult your fuel supplier or JCB dealer about the suitability of any fuel you are unsure of.

Low Temperature Fuels

Special winter fuels may be available for engine operation at temperatures below 0°C (32°F). These fuels have a lower viscosity. They also limit wax formation in the fuel at low temperatures (wax forming in the fuel can stop the fuel flowing through the filter).

Flow improvers may also be available. These can be added to the fuel to reduce wax formation.

FUEL SYSTEM - continued

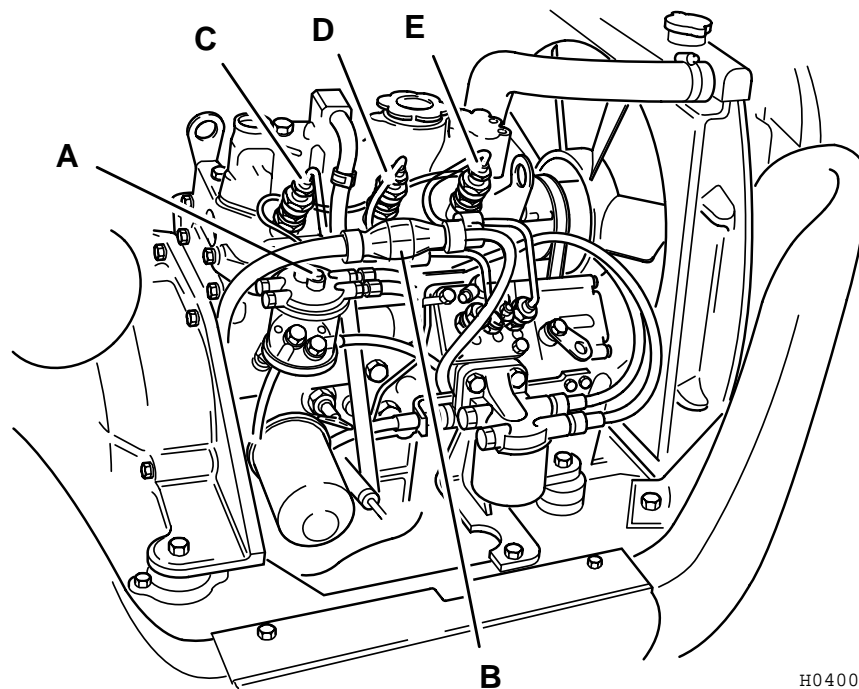

H04001

FUEL SYSTEM - continued**Bleeding the fuel system****WARNING**

Air in the fuel system can cause misfiring or failure to start. Air will enter the system if any part of it is disconnected or emptied.

**WARNING**

To bleed the air from the system, the engine must be turning. When the engine is turning, there are parts rotating in the engine compartment. Before starting this job, make sure you have no loose clothing (cuffs, ties etc.) which could get caught in rotating parts. Keep clear of rotating parts.

- 1 Raise the engine cover.
- 2 To bleed air from the filter, slacken bleed screw **A**. Operate fuel priming bulb **B** until air free fuel flows from the union.
- 3 The fuel injection pump is self bleeding as the engine is cranked.

**WARNING**

When you turn the engine to bleed the fuel lines, do not operate any of the hydraulic control levers.

- 4 Loosen the unions at **C**, **D** and **E**. If you are working with an assistant warn him that you are about to turn the engine.
- 5 Open the throttle a little and turn the starter key to rotate the engine.
- 6 When air-free fuel flows from all three points, tighten the unions.


FUEL SYSTEM - continued

Draining The Filter

- 1 Drain off any water by in the filter by opening tap **A**.

Changing the Filter Element


- 1 Remove the seat and disconnect the battery.
- 2 Raise the Engine Cover.
- 3 Support bowl **B**, unscrew bolt **C**. Remove the bowl and element **D**. Wash the bowl in clean fuel.
- 4 Install the new element **D** with new seals **E**. Make sure they seat correctly. Tighten bolt **C**. Check for leaks.
- 5 Bleed the System

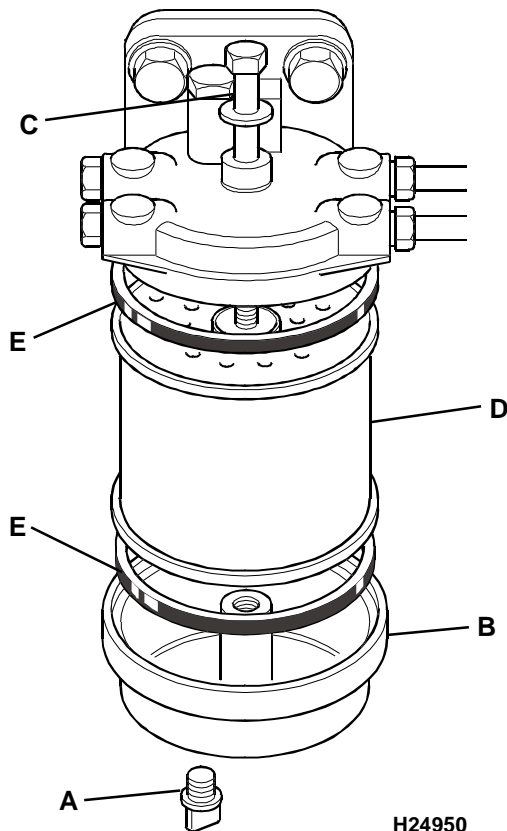

FUEL SYSTEM - continued

Draining the Sediment Bowl

- 1 Raise the Engine Cover
- 2 Look in the bowl **F**. If there is any sediment in the bowl change the fuel filter element. See **Changing the Fuel Filter Element**. If there is water but no sediment, drain off the water by opening tap **G**.

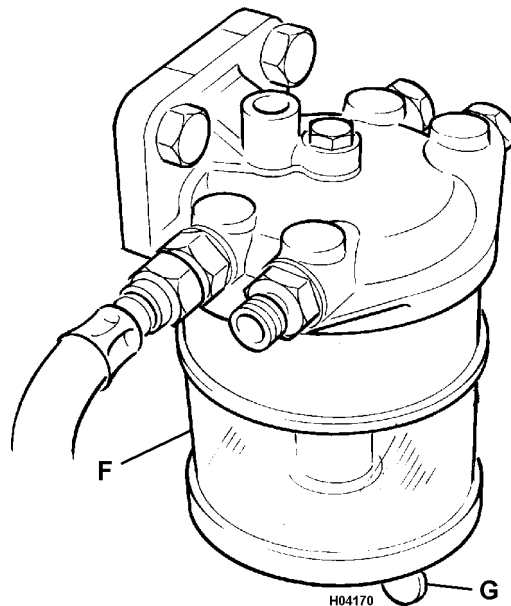

TRACKS AND RUNNING GEAR

Cleaning the tracks



WARNING


If two people are doing this job make sure that the person operating the controls is a competent operator. The other person could be killed or injured if the wrong lever is moved or a control operated violently.

If you are working with another person, make sure you both know what is to be done. Learn and use recognized signalling procedures. Do not rely on shouting, you may not be heard.

To clean the tracks they must be lifted in turn off the ground and then rotated. When the tracks are turning keep well clear. Make sure you have no loose clothing that could get caught in rotating parts. Keep uninvolved people well away.

TRACKS AND RUNNING GEAR - continued

Cleaning the tracks - continued


- 1 Park the machine on level ground. Operate the controls to slew the cab around across the tracks. Lower the bucket to the ground.
- 2 Operate the controls to push the boom down so that the track nearest the bucket is lifted clear of the ground.
-  **WARNING**
Rotating the tracks off the ground may cause stones and other debris to be thrown with considerable force. If you are on the outside, keep well clear. Keep other people well clear.
- 3 Operate the controls to rotate the track which is off the ground. Rotate it one way and then the other to shake off the mud. If necessary the person outside may use water from a hose to help loosen sticky material.
- 4 When the track is clean stop the rotation. Inspect the track, rollers sprockets and idler wheels for damage or oil leaks. Replace any damaged parts. If in doubt consult your JCB Dealer.
- 5 Operate the controls slowly to lower the track to the ground.
- 6 Operate the controls to position the bucket on the other side of the machine so that steps 2 to 5 can be repeated for the other track.

C38

MAINTENANCE

C38

TRACKS AND RUNNING GEAR - continued

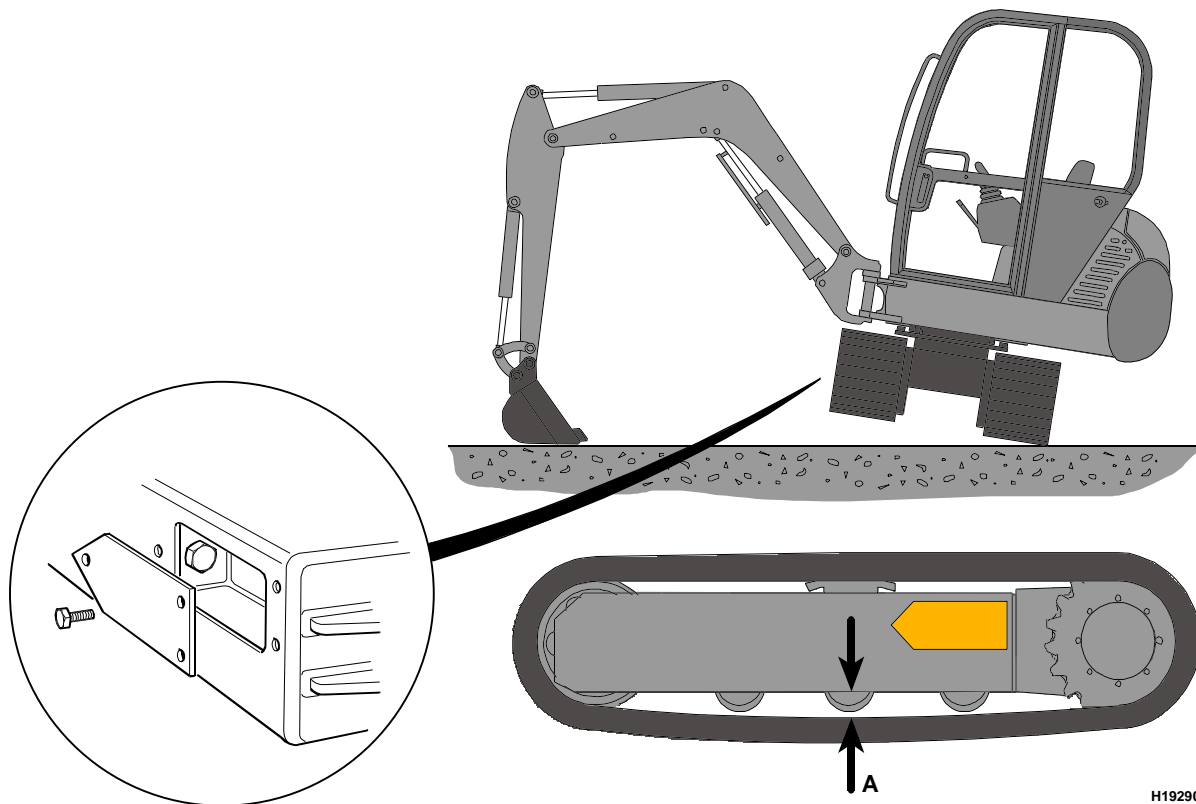

H19290

TRACKS AND RUNNING GEAR - continued



WARNING

Recoil unit servicing must only be carried out by JCB distributors. You could be killed or injured if you tamper with it.

Checking the Track Tension

1 Prepare the Machine

Park the machine on level ground. Run it backwards and forwards several times. Stop the machine after running it forwards.

2 Check the Tension


Check that the tension measurement at **A** is 85mm (3.4in) for rubber and steel tracks.

CAUTION

Always make sure that the track tension measurement is not less than specified or severe strain to the track will result.

3 Adjust the track tension

- a Set the machine in the posture shown with the track to be tensioned raised from the ground and supported.
- b Remove the screws and the access hatch.
- c Check the tension clearance is 85mm (3.4in)
- d Operate the adjusting screw to obtain the correct clearance.
- e Rotate track after adjustment and before checking clearance.
- f Replace and secure the access hatch. Lower the track to the ground.

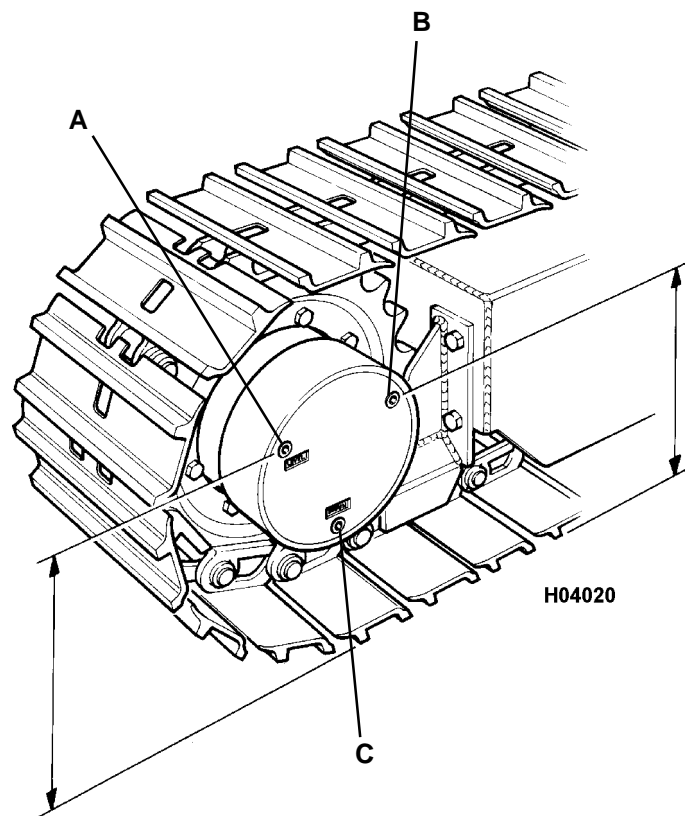TRACKS AND RUNNING GEAR - continued

TRACKS AND RUNNING GEAR - continued

Checking the track gearbox oil level

- 1 Position the machine on firm level ground. Ensure that the gearbox plugs **A** and **B** are positioned as shown. Stop the engine and remove starter key.
- 2 Clean the area around the fill/level plug **A** and remove the plug, oil should be seen to be level with the hole. Top up as necessary, for the correct oil see Lubricants and Capacities Chart at the end of the section. Clean and refit the plug, make sure it is tight.

Changing the Track Gearbox Oil

- 1 Position the machine on firm level ground.
- 2 Place a suitable container beneath the drain plug **C** to collect the oil.

CAUTION

**Oil will gush from the hole when the plug is removed.
Keep to one side when you remove the drain plug.**


- 3 Remove level/filler plugs **A** and **B**. Remove the drain plug **C**. Allow the oil to drain out. Wipe the drain plug clean. Make sure that you remove all metal particles. Refit the drain plug. Make sure it is tight.
- 4 Fill with new oil through the fill/level plug hole until oil runs from the hole. For the correct oil to use see Lubricants and Capacities.
- 5 Run the machine, operate the track controls and then make sure there are no leaks.

C42

MAINTENANCE

C42

HYDRAULIC SYSTEM

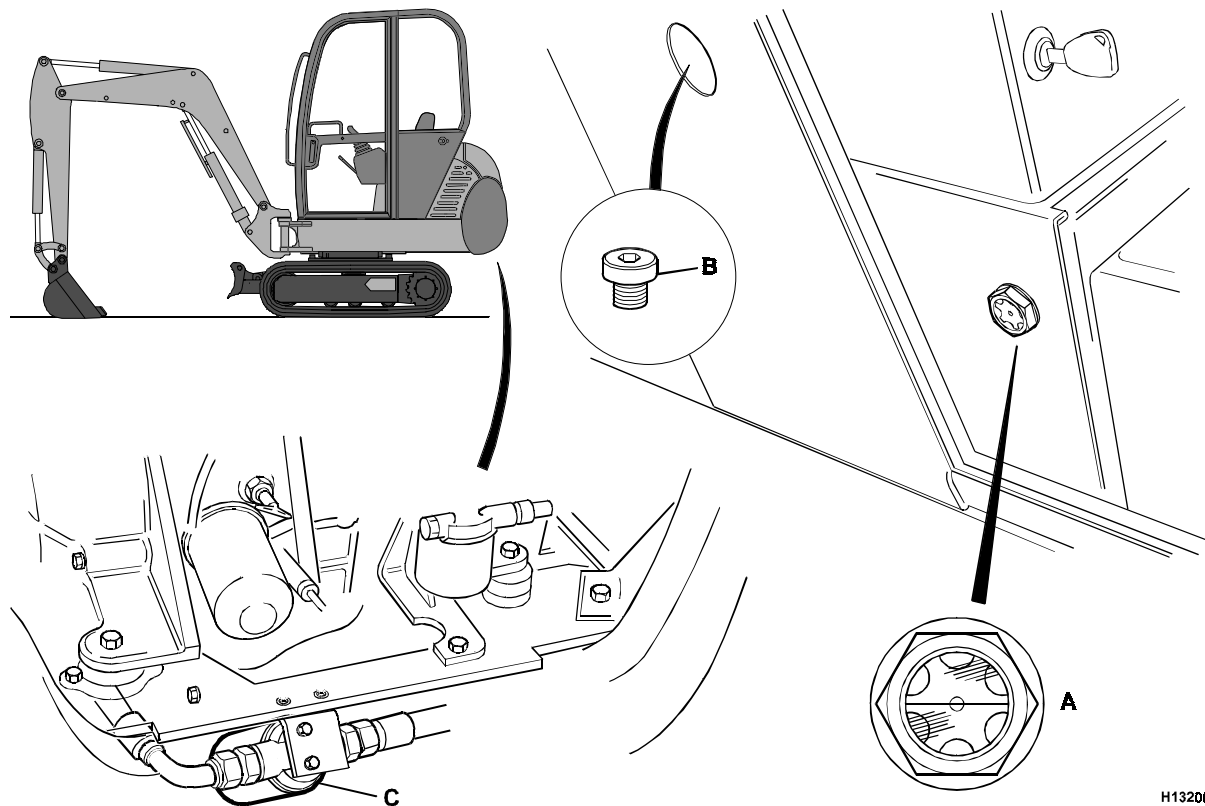

H13200

HYDRAULIC SYSTEM



WARNING

Fine jets of hydraulic oil at high pressure can penetrate the skin. Do not use your fingers to check for small leaks. Hold a piece of cardboard close to the suspected leak and then inspect the cardboard for signs of hydraulic fluid. If hydraulic fluid penetrates the skin, get medical help quickly.

Checking and adjusting the Fluid level

1 Prepare the Machine

Park the machine on firm level ground with the rams positioned as shown. Stop the engine and remove the starter key.

2 Check the Level

Check the level indicator **A** outside the cab.

3 Top up fluid level if necessary

Remove the external filler plug **B** and add fluid. Ensure that only correct grade of fluid is used (refer to lubrication and capacities chart at the end of this section).

4 Refit the Filler plug

Replacing the hydraulic filter

- 1 Open the engine cover and unscrew the old filter **C**, seals and discard.
- 2 Fit new filter and seals and tighten firmly. Check the fluid level and top up if necessary.

Checking the Ram Piston Rods

- 1 Extend each ram fully, one at a time and visually examine for score marks, dents or similar defects. If a ram piston appears defective contact your service engineer or JCB dealer.

BATTERY

The following warning symbols may be found on the battery.



Keep away from children.



Shield eyes.



No smoking, no naked flames, no sparks.



Explosive gas.



Battery acid.



Note operating instructions.

H17610

**WARNING**

Do not disconnect the battery while the engine is running, otherwise the electrical circuits may be damaged.

Int-3-1-14

**WARNING**

Understand the electrical circuit before connecting or disconnecting an electrical component. A wrong connection can cause injury and/or damage.

Int-3-1-4

**WARNING**

Battery electrolyte is toxic and corrosive. Do not breath the gases given off by the battery. Keep the electrolyte away from your clothes, skin, mouth and eyes. Wear safety glasses. Int-3-2-1/3

**WARNING**

Damaged or spent batteries and any residue from fires or spillage should be put in a closed acid proof receptacle and must be disposed of in accordance with local environmental waste regulations.

Int-3-1-12

BATTERY - continued**WARNING**

Batteries give off an explosive gas. Do not smoke when handling or working on the battery. Keep the battery away from sparks or naked flames.

Battery electrolyte contains sulphuric acid. It can burn if it contacts skin or eyes. Wear goggles and handle the battery carefully to prevent spillage.

Keep metallic items (watches, rings zippers etc.) away from the battery terminals. Such items could cause a short and burn you.

Set all switches in the cab to OFF before disconnecting or reconnecting the battery. When disconnecting the battery remove the earth (-) lead first. When reconnecting, fit the positive (+) lead first.

Recharge the battery away from the machine, in a well ventilated area. Switch the charging circuit off before connecting or disconnecting the battery. When the battery is reinstalled in the machine, wait five minutes before connecting it up.

First Aid - Electrolyte

Do the following if electrolyte:

Gets in you eyes

Immediately flush with water for 15 minutes, always get medical help.

Is swallowed

Do not induce vomiting, drink large quantities of water or milk. Then drink milk of magnesia, beaten egg or vegetable oil. Get medical help.

Get on your skin

Flush with water, remove affected clothing, cover burns with a sterile dressing, then get medical help.


5-3-4-3/1

C46

MAINTENANCE

C46

BATTERY - continued

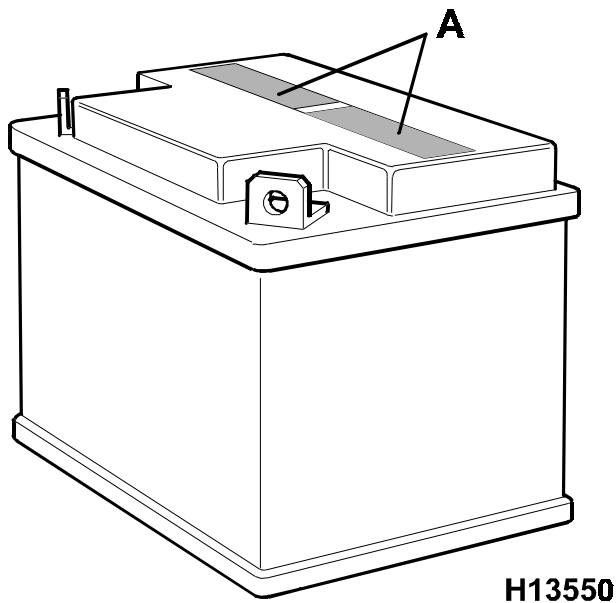

BATTERY - continued**WARNING**

Batteries give off explosive gases. Keep flames away from the battery. Do not smoke close to the battery. Make sure there is good ventilation in closed areas where batteries are being used or charged.. Do not check the battery charge by shorting the terminals with metal; use a hydrometer or voltmeter. Int-3-1-8

**WARNING**

Do not top the battery up with acid. The electrolyte may boil out and burn you. 2-3-4-8

Checking the electrolyte level

Maintenance free batteries used in normal temperate climates applications should not need topping up. However, in certain conditions (such as prolonged operation at tropical temperatures or if the alternator overcharges) the electrolyte level should be checked as described below.


- 1** Lift the engine cover.
- 2** Remove the battery cover if fitted.
- 3** Remove covers **A** and check the level in each cell, the electrolyte should be 6mm (1/4in) above the plates. Top up if necessary with distilled or deionised water
- 4** Make sure the terminals and connectors are clean and tight. Coat with petroleum jelly to prevent corrosion.

C48

MAINTENANCE

C48

FUSES

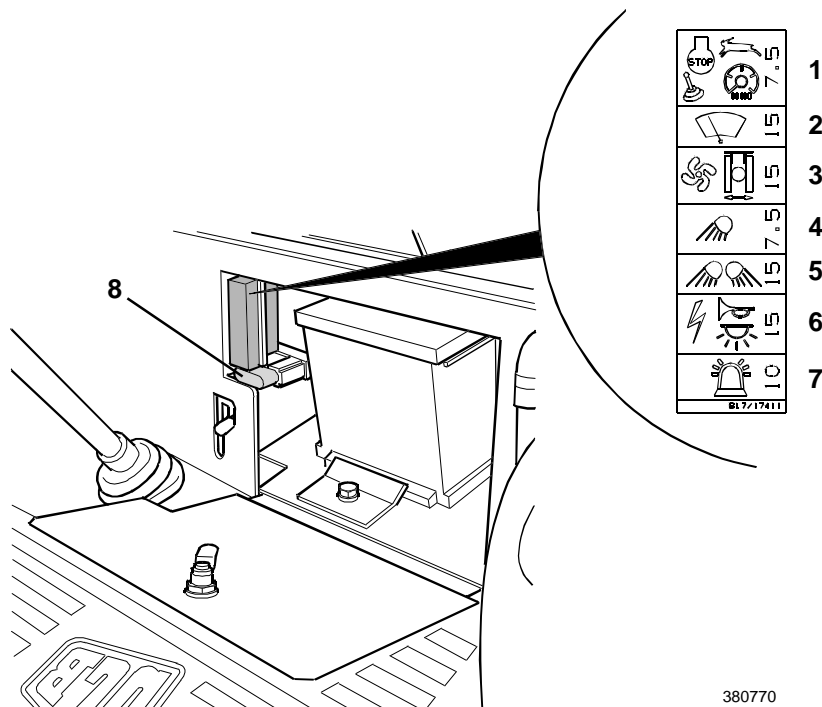

380770

FUSES

The electrical circuits are protected by fuses. The fuses are located above the slew lock to the right of the toolbox. If a fuse blows, find out why before fitting a new one.

CAUTION

Always replace fuses with ones of the correct ampere rating to avoid damage to the electrical system.

Fuses

Fuse	Circuit	Rating
1	Engine Stop, Servo Control	
	Instruments, Two Speed Tracking	7.5A
2	Windscreen Wiper	15A
3	Blower	15A
4	Boom Light	7.5A
5	Work Lights	15A
6	Horn, Interior Light, Auxiliary Power Socket	15A
7	Beacon	10A
8	Main Fuse	60A

Bulbs

Bulb	Rating
Cab lights	18W
Working lights	55W
Warning lights	3W

FLUIDS, LUBRICANTS, CAPACITIES AND SPECIFICATIONS

Note: New engines do not require a running in period. The engine/machine should be used in normal work cycle immediately; glazing of the piston cylinder bores, resulting in excessive oil consumption, could occur if the engine is gently run in. Under no circumstances should the engine be allowed to idle for extended periods; (e.g. warming up without load). Engines of new machines are filled at the factory with JCB 10w/30 Multigrade oil. This oil should be drained after the first 100 hours operation and the engine filled with the appropriate recommended grade as shown below. JCB 10W/30 should also be used for the first 50 hours operation whenever a new or reconditioned engine is fitted to the machine. After the first 100 hours it is essential that the 10W/30 oil is replaced by the lubricant recommended below.

Item	Capacity Litres (Gal)	Fluid / Lubricant	International Specification
Fuel Tank	20.5 (4.5)	Diesel Oil (See types of fuel)	ASTM D975-66T Nos 1D, 2D
Engine (Oil) First 100 hours only	3.5 (0.77)	JCB 10W/30 Multigrade above -15°C (above 5°F) 5W/20 -15°C to -25°C (5°F to 13°F)	MIL-L-46152, API CC/SF API CC/SE (recommended)
After first 100 hours		JCB 15W/40 Multigrade above -10°C - above 14°F) 5W/20 -10°C to -25°C (14°F to -13°F)	SAE 15W/40, MIL-L-46152B AP1 CD/SE MIL-L-2104D AP1 CC/SE or API CD/SE

FLUIDS, LUBRICANTS, CAPACITIES AND SPECIFICATIONS - Continued

Item	Capacity Litres (Gal)	Fluid/ Lubricant	International Specification
Engine Coolant Canopy Cab	4.5 (1.0) 5.0 (1.1)	JCB Universal Antifreeze/water (See Coolant Mixtures)	ASTM D3306-74
Track Gearbox (each)	0.3 (0.07)	JCB SAE 30 Engine Oil (NOT Multigrade)	API CD/SF, MIL-L-46152 MIL-L-2104D
Track Idler Wheels	0.025 (0.006)	JCB HD90 Gear oil	API-GL-5, MIL-L-2105D
Track Rollers (bottom)	0.025 (0.006)	JCB HD90 Gear Oil	API-GL-5, MIL-L-2105D
Hydraulic System	30 (6.6)	JCB Special Hydraulic Fluid Up to 30°C (86°F) JCB Hydraulic Fluid 46 Over 30°C (86°F)	

FLUIDS, LUBRICANTS, CAPACITIES AND SPECIFICATIONS - continued

Item	Capacity Litres (Gal)	Fluid/Lubricant	International Specification
Slew Ring Bearings Slew Ring Gear Teeth		JCB MPL Grease JCB Slew Pinion Grease ##	Lithium based no 2 consistency
All Other Grease Points		JCB MPL Grease	Lithium based no 2 consistency

WARNING

JCB Slew pinion grease is harmful. It contains bitumen compounds 2811 with possible risks of irreversible effects. Excessive contact may lead to dermatitis or skin cancer. Always use a barrier cream or wear gloves. Wash contaminated skin thoroughly with soap and water. In the event of contact with the eye, immediately wash with plenty of water and seek medical advice.

OBTAINING REPLACEMENT PARTS

We recommend that you fit only JCB Genuine Parts. At the rear of this book there are pages that will help you identify consumable parts and order them from your JCB dealer. For a complete machine parts listing consult your dealer. Your dealer will need to know the exact identity of your machine.

The machine has a data plate. This shows the machine and engine serial numbers.

If the engine has been changed, the serial numbers on the data plate may be wrong. Check on the engine itself.



WARNING

Some parts of you machine may have Warning Decals attached. Before you fit a replacement parts make sure it has its warning decal fixed in its correct position.

Contact your dealer if the decal is missing.

NOISE AND VIBRATION DATA

Typical duties for 8013 / 8015 / 8017 / 8018 machines

The 801 Gravemaster is designed for a specialised function and must not be used for more arduous general excavating or earth moving duties. The extra long dipper fitted to the Gravemaster will reduce machine stability, take care if working on inclines or when across the tracks.

Tracking (Tarmac)

Tracking (Rough Terrain)

Excavating

Noise		8013	8015	8017	8018
1	Noise Level at Operators Ear (LpA)				
	Canopy	79	79	79	80
	Cab	N/A	80	80	81
2	External Noise Level (LwA)				
	Canopy	96	96	96	96
	Cab	N/A	96	96	96

Vibration


3	Weighted rms acceleration: Whole Body (m/s ²)	1.27	1.27	1.27	1.27
4	Weighted rms acceleration: Hand/Arm (m/s ²)	1.81	1.81	1.81	1.81

D2

SPECIFICATION

D2

STATIC DIMENSIONS

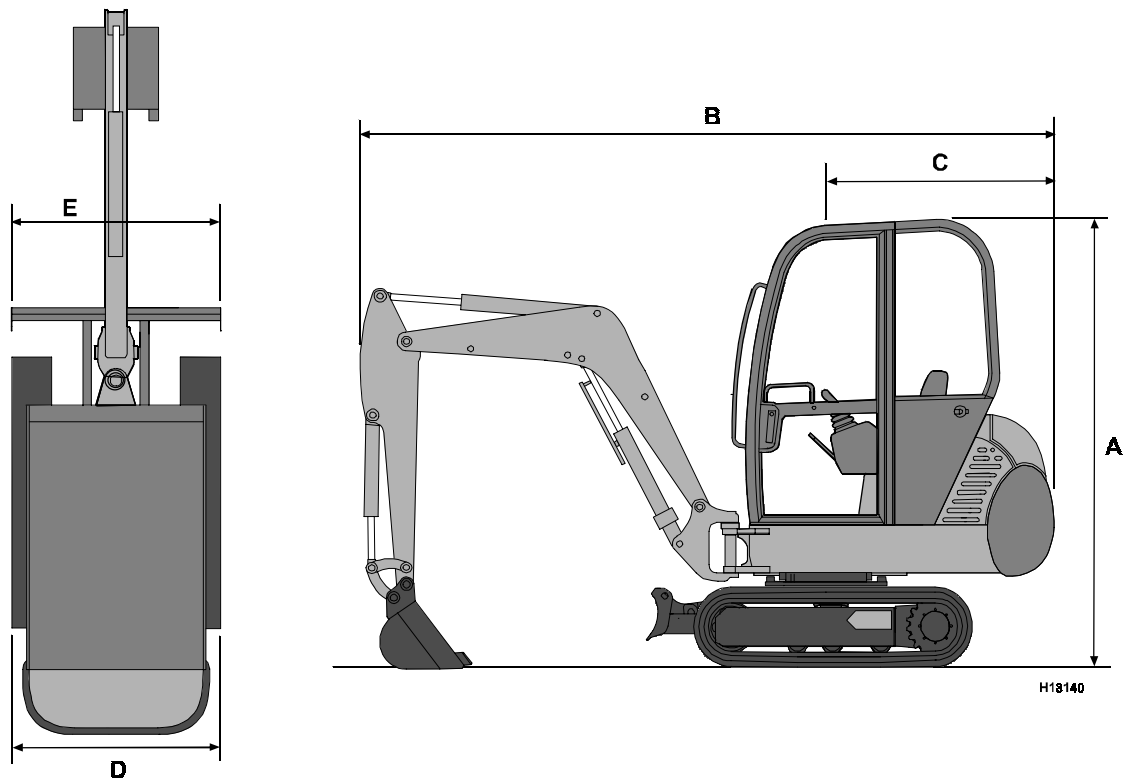

D3

SPECIFICATION

D3

STATIC DIMENSIONS

		8013		8015		8017		8018	
		mm	feet	mm	feet	mm	feet	mm	feet
A	Overall Height (transport position)#	2190	7ft 2in	2190	7ft 2in	2190	7ft 2in	2190	7ft 2in
B	Overall Length (transport position)	3215	10ft 6in	3215	10ft 6in	3215	10ft 6in	3320	10ft 10in
C	Tailswing	1103	3ft 7in	1103	3ft 7in	1103	3ft 7in	1103	3ft 7in
D	Track Width	940	3ft 1in	970	3ft 2in	970	3ft 2in	970	3ft 2in
E	Superstructure Width	998	3ft 3in	998	3ft 3in	998	3ft 3in	998	3ft 3in
F	Track centres	1008	3ft 4in	1008	3ft 4in	1008	3ft 4in	1008	3ft 4in

Machine Weight

Cab

Steel Tracks

N/A

1667kg

1772kg

1797kg

Rubber Tracks

N/A

1625kg

1730kg

1755kg

Canopy

Steel Tracks

1362kg

1543kg

1648kg

1673kg

Rubber Tracks

1320kg

1501kg

1606kg

1631kg

Approximate figures with operator and full fuel tank.



WARNING


Does not include truck/trailer height.

D4

SPECIFICATION

D4

PERFORMANCE DIMENSIONS

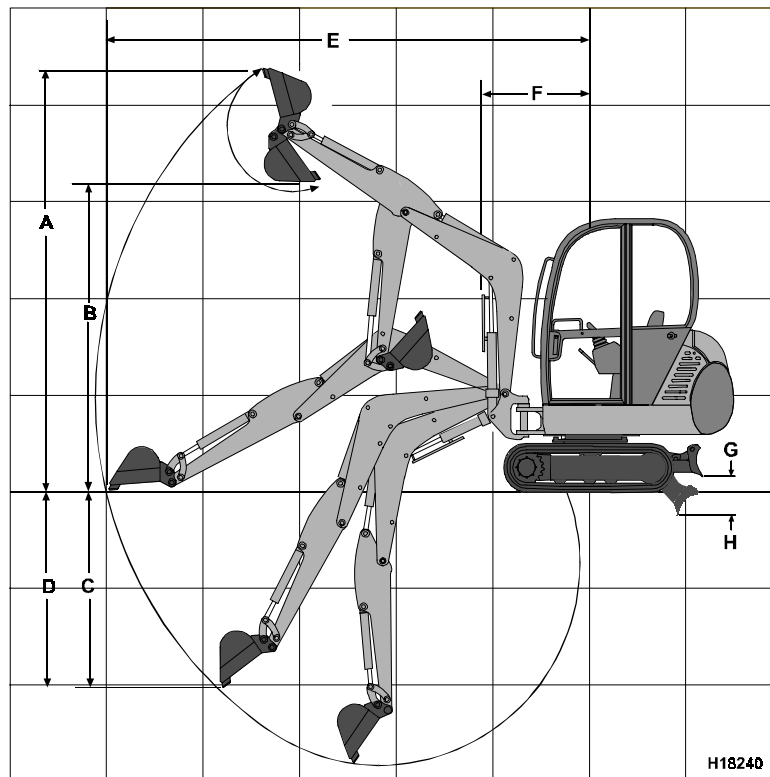

D5

SPECIFICATION

D5

PERFORMANCE DIMENSIONS

		8013		8015 / 8017		8018	
		mm	feet	mm	feet	mm	feet
A	Max. digging height - 1138 dipper	Not Available		3277	10ft 9in	3332	10ft 11in
	- 1238 dipper	Not Available		3332	10ft 11in	3387	11ft 1in
	- 950 dipper	3156	10ft 4in	Not Available		Not Available	
B	Max. dumping height - 1138 dipper	Not Available		2390	7ft 10in	2450	8ft 0in
	- 1238 dipper	Not Available		2445	8ft 0in	2504	8ft 2in
	- 950 dipper	2271	7ft 5in	Not Available		Not Available	
C	Max. vertical - 1138 dipper	Not Available		1710	5ft 7in	1780	5ft 10in
	digging depth - 1238 dipper	Not Available		1805	5ft 10in	1875	6ft 2in
	- 950 dipper	1541	5ft 1in	Not Available		Not Available	
D	Max. digging depth - 1138 dipper	Not Available		2305	7ft 6in	2432	7ft 11in
	- 1238 dipper	Not Available		2305	7ft 6in	2532	8ft 3in
	- 950 dipper	2056	6ft 9in	Not Available		Not Available	
E	Max. reach - 1138 dipper	Not Available		3611	11ft 10in	3771	12ft 4in
	(ground level) - 1238 dipper	Not Available		3734	12ft 3in	3858	12ft 8in
	- 950 dipper	3484	11ft 5in	Not Available		Not Available	
F	Min. boom swing radius	1529	5ft 0in	1535	5ft 0in	1535	5ft 0in
G	Blade cut above ground	195	8in	195	8in	195	8in
H	Blade cut below ground	255	10in	255	10in	255	10in

Max. dig depth when dozer blade fully lowered.



9801/8780